 



VISION TV-BENK

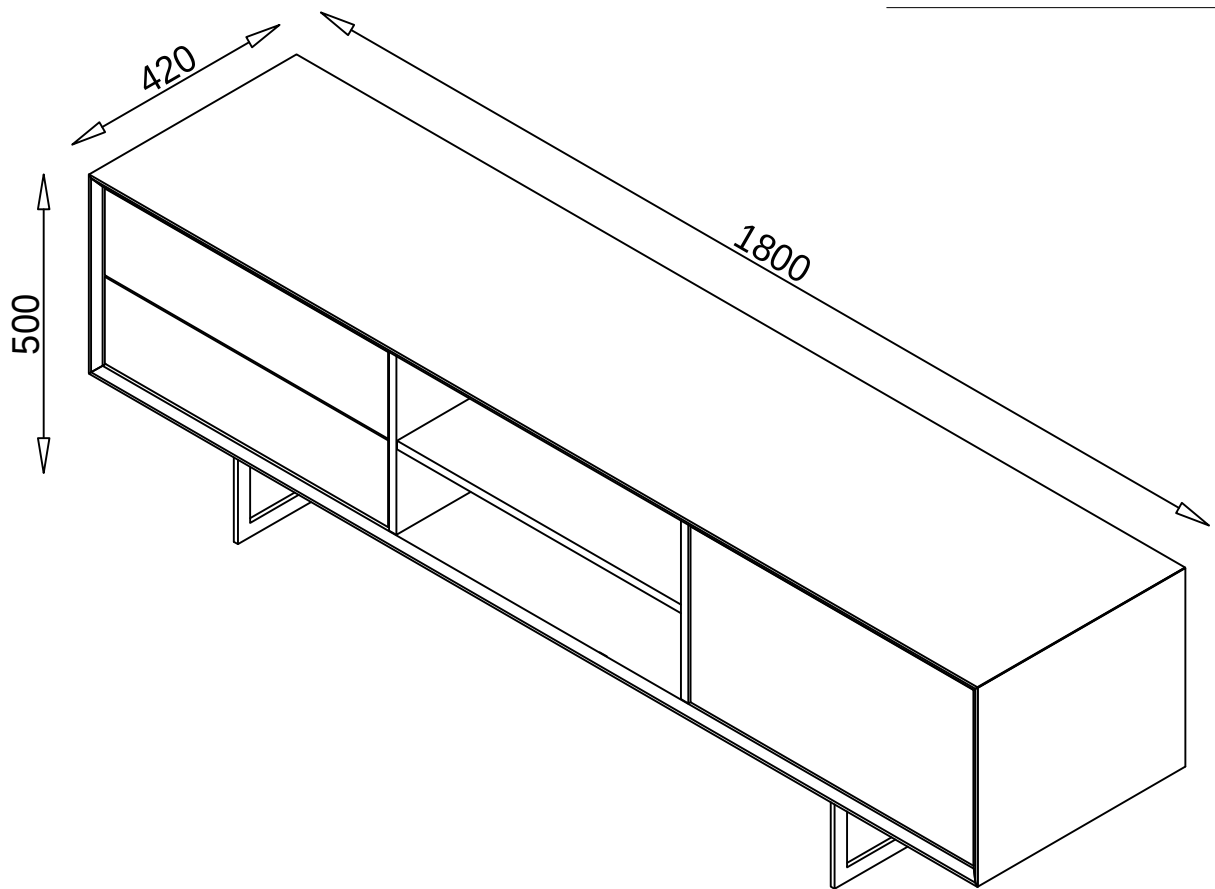



MAX 40kg



 
001-Rev 2



20
min.

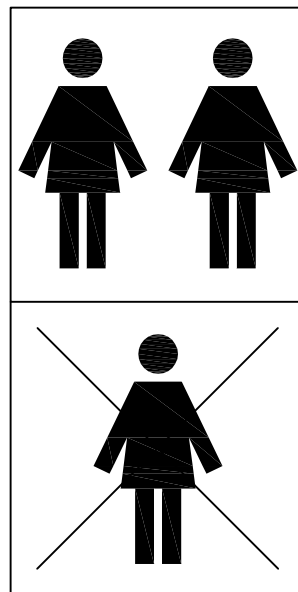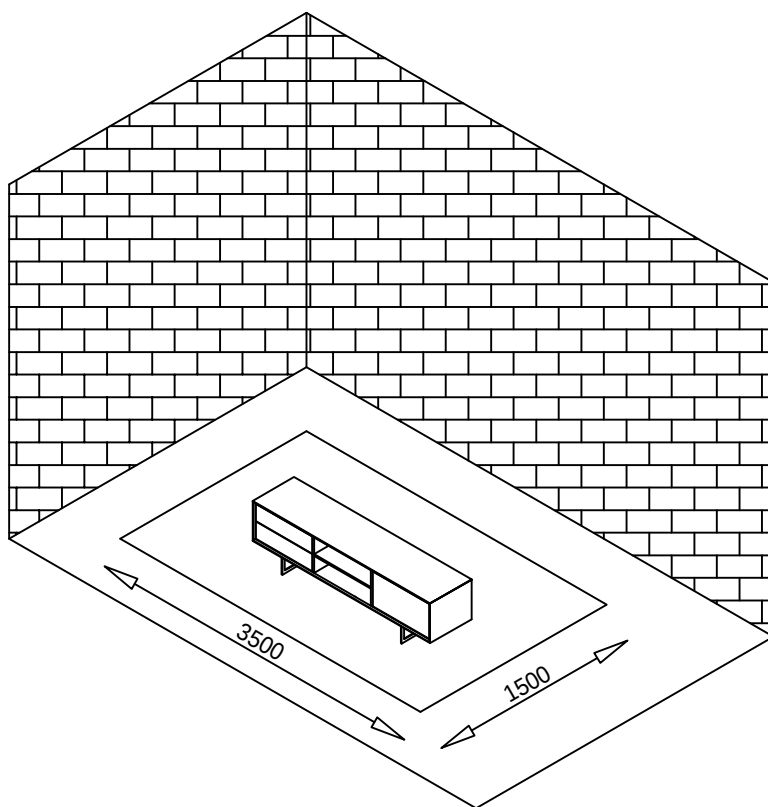  

Delenummer	Antall	Dimensjoner	✓
1	1	1800x420x350	
2	1	576x360x15	

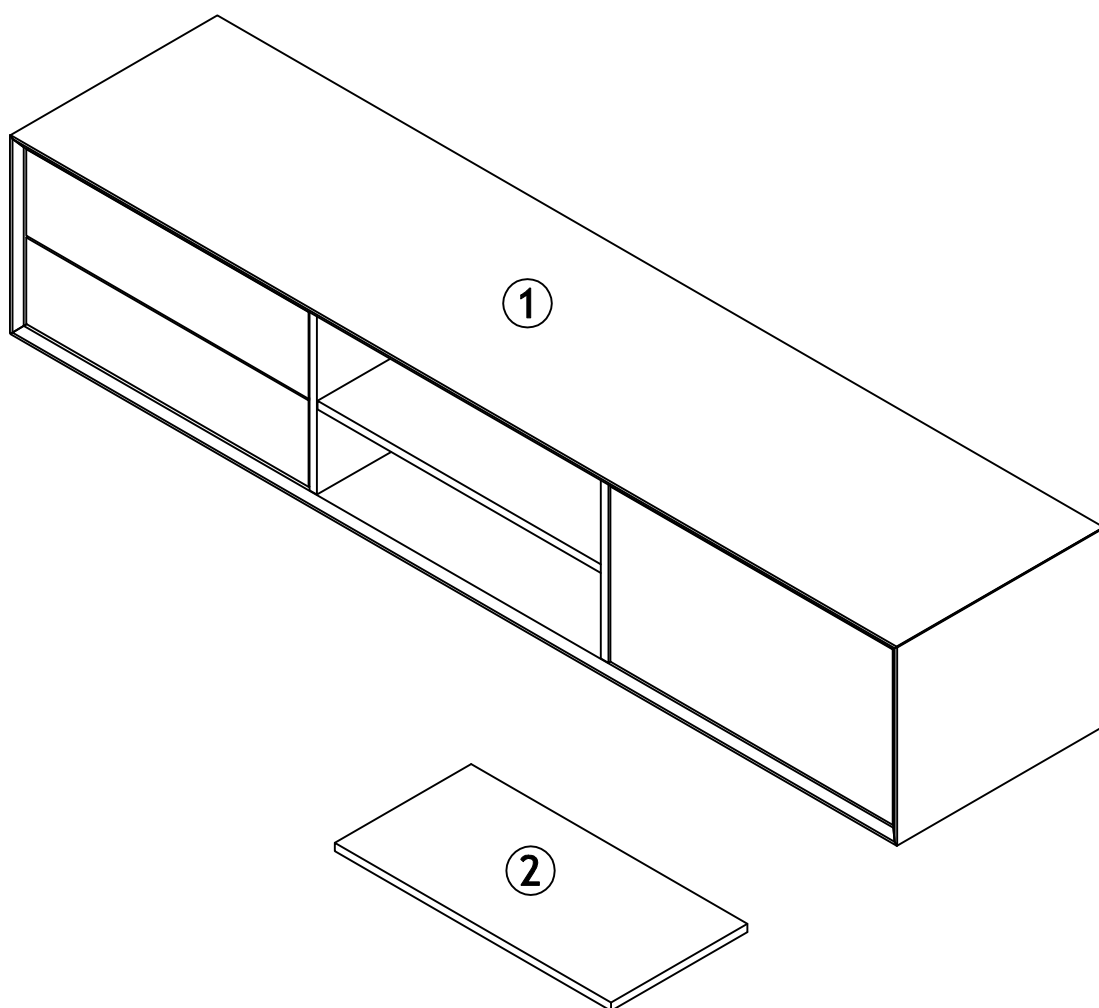 



mm

10

20

30

40

50

60

70

 
 
80

90



100

110

120

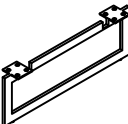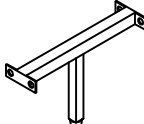							
M4	Ax1	6x20	Bx16	6x10x2	Cx16	6x14x2	Dx16
							
Ex4	416X150X56	Fx2	226x60x147	Gx1	6x15	Hx4	

 
 
1

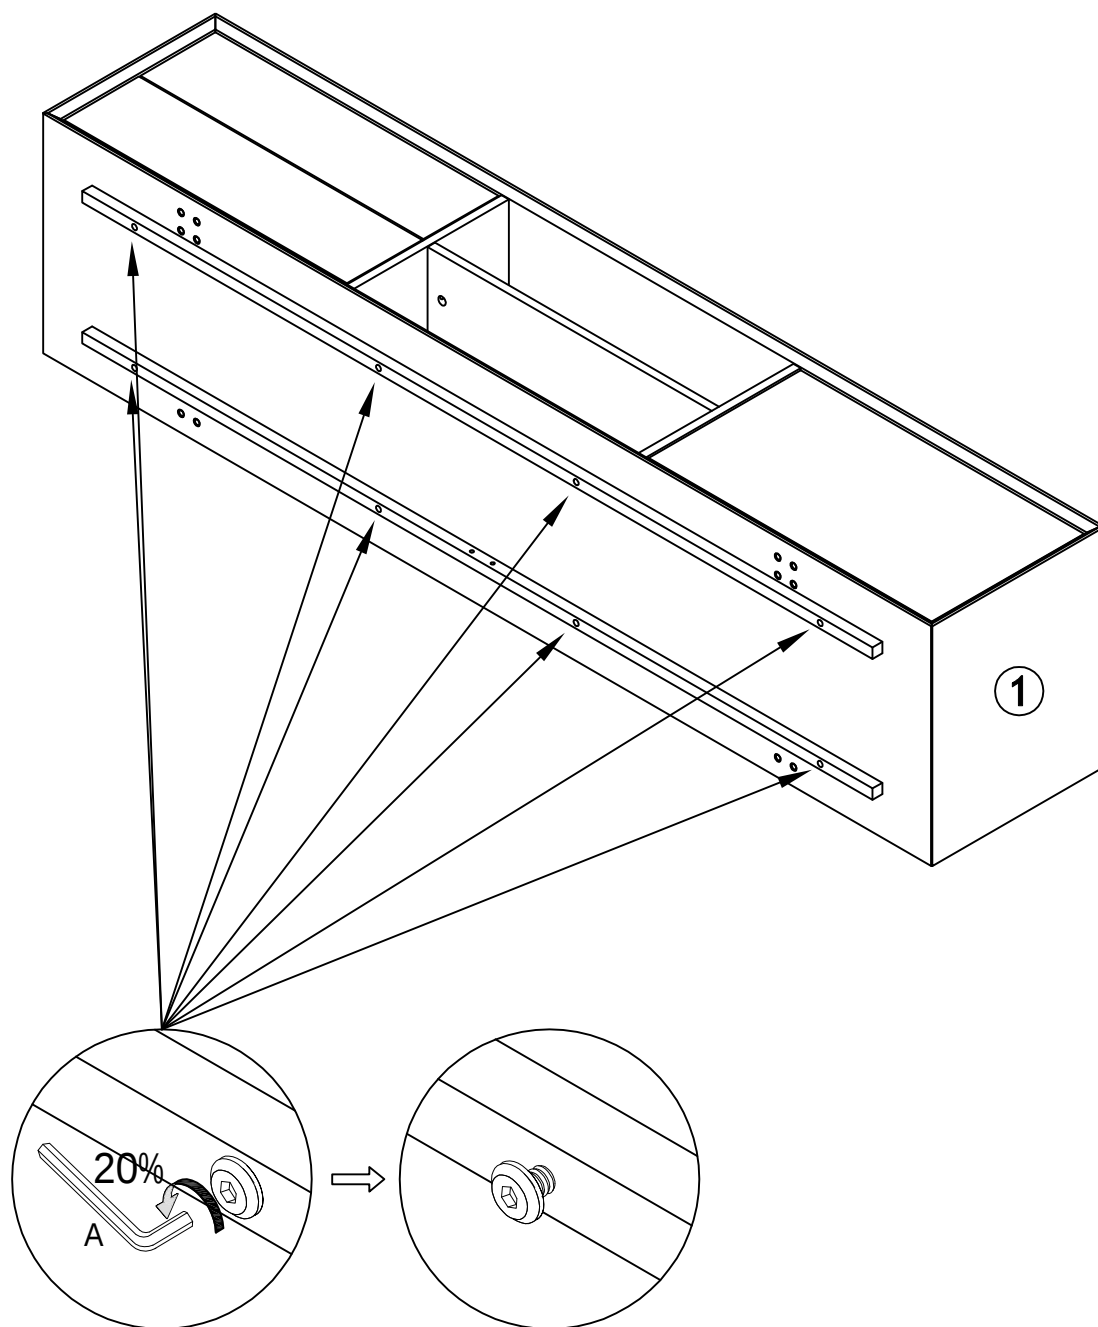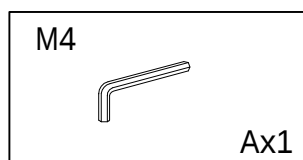


Løsne skruene i formonterte lister ca 20%



2

M4  Ax1	226x60x147  Gx1	6x15  Hx4
--	--	--

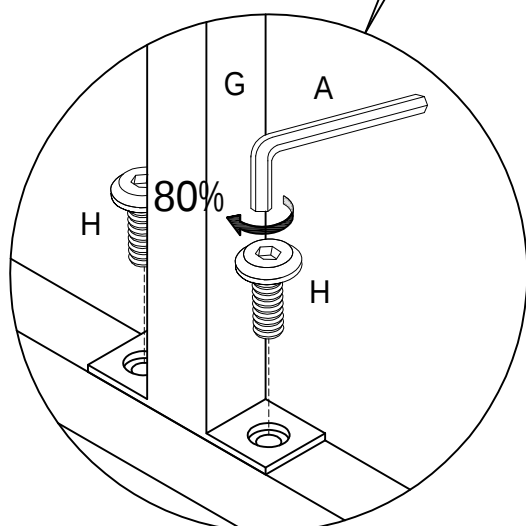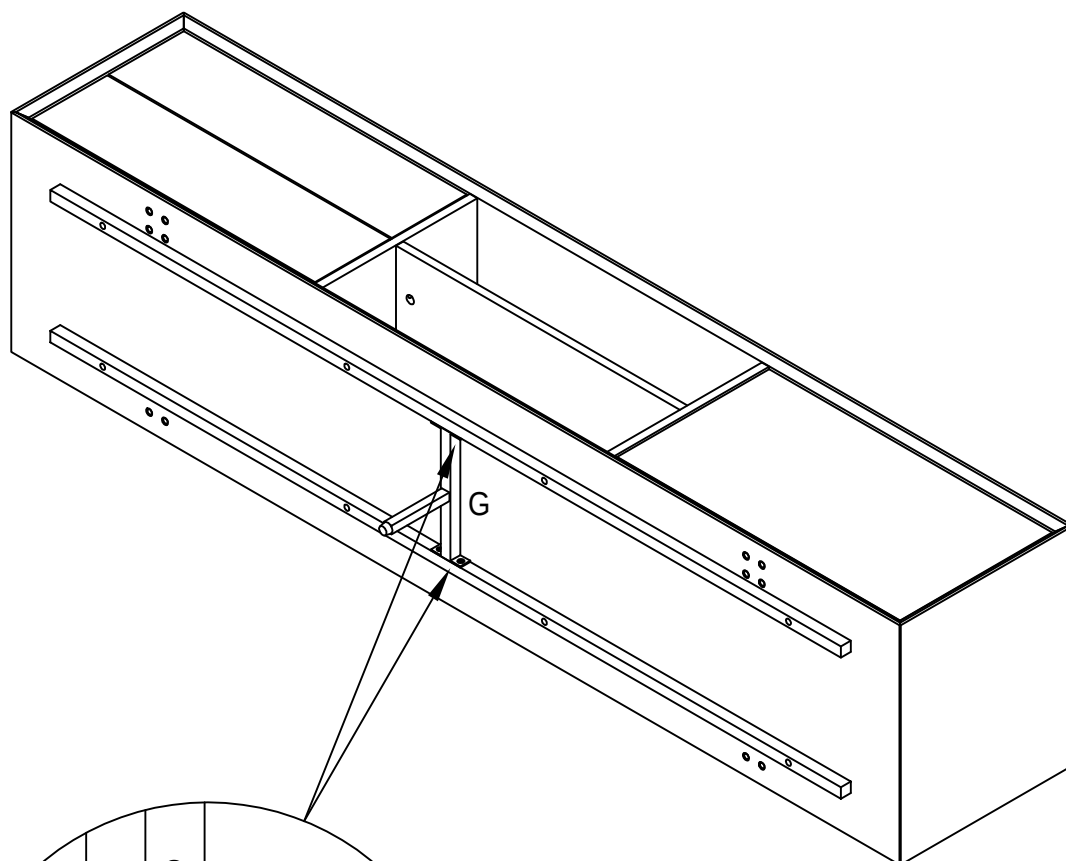  





3

 M4  Ax1	6x20  Bx16	6x10x2  Cx16
6x14x2  Dx16	416X150X56  Fx2	

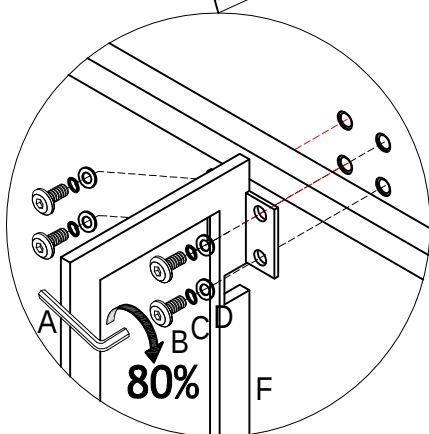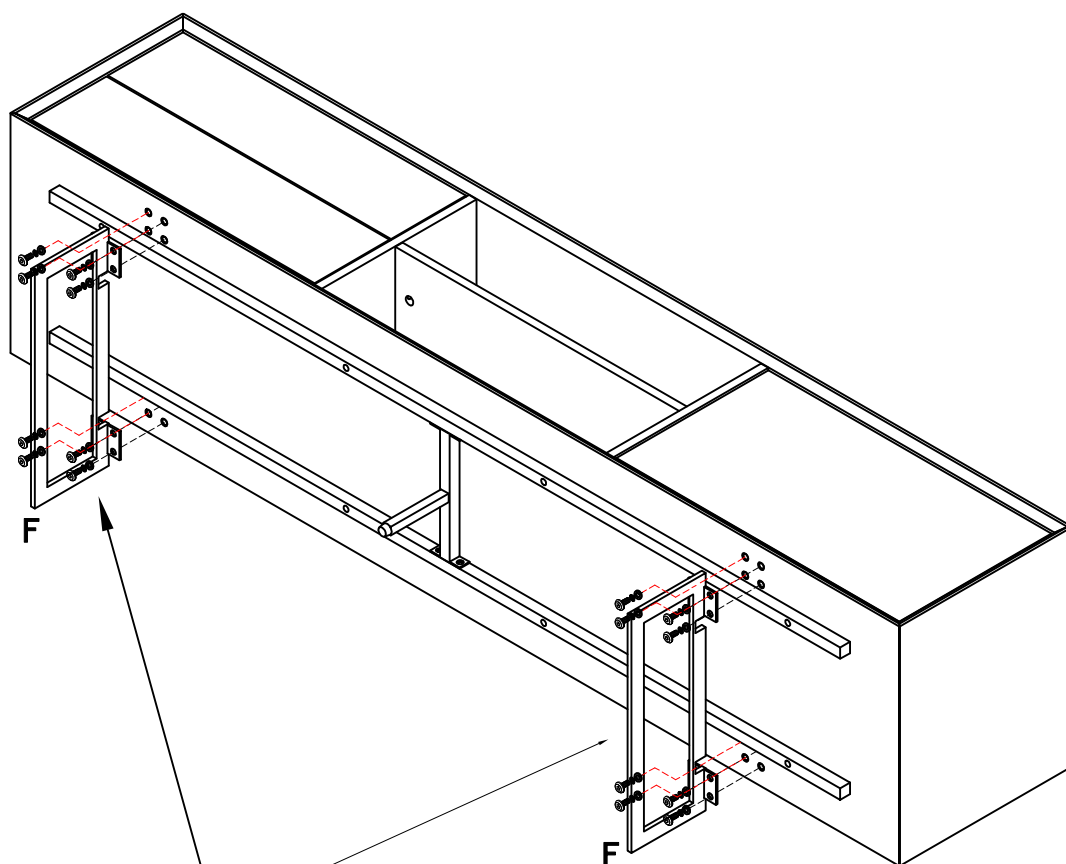  





Bare fest skruene løst frem til alle deler er satt sammen.

    4

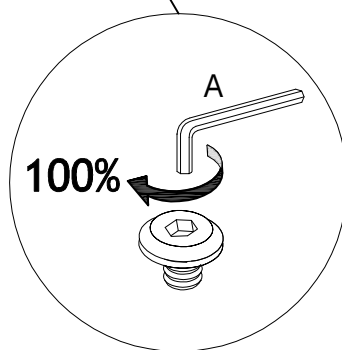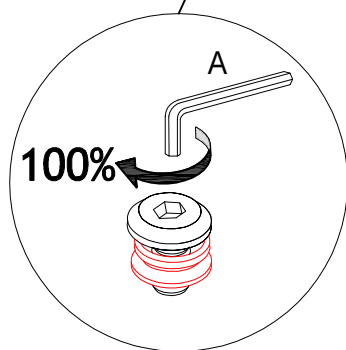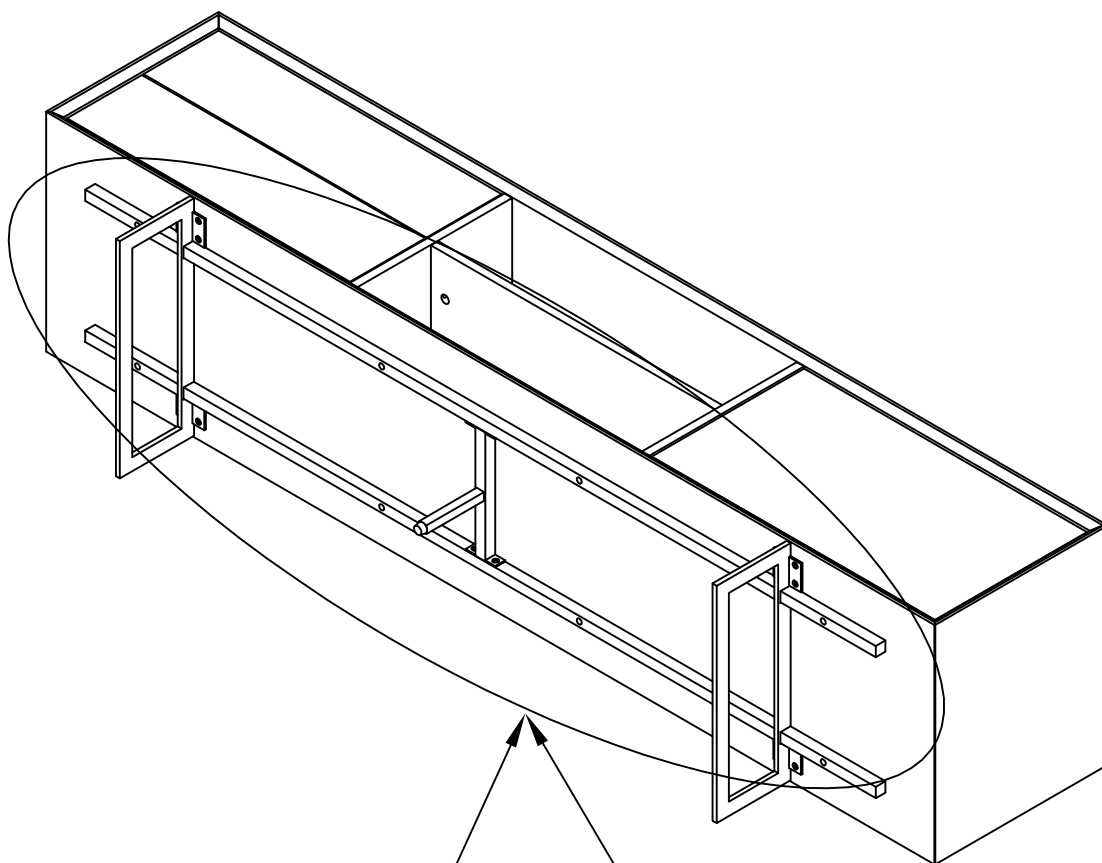
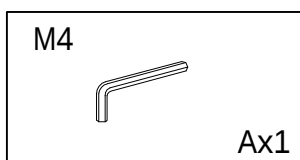


Når alle deler er satt sammen kan skruene strammes til 100%.

    5

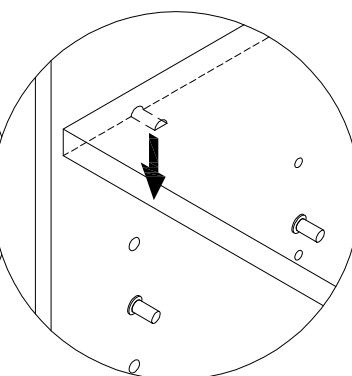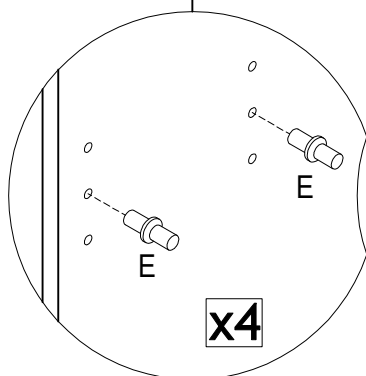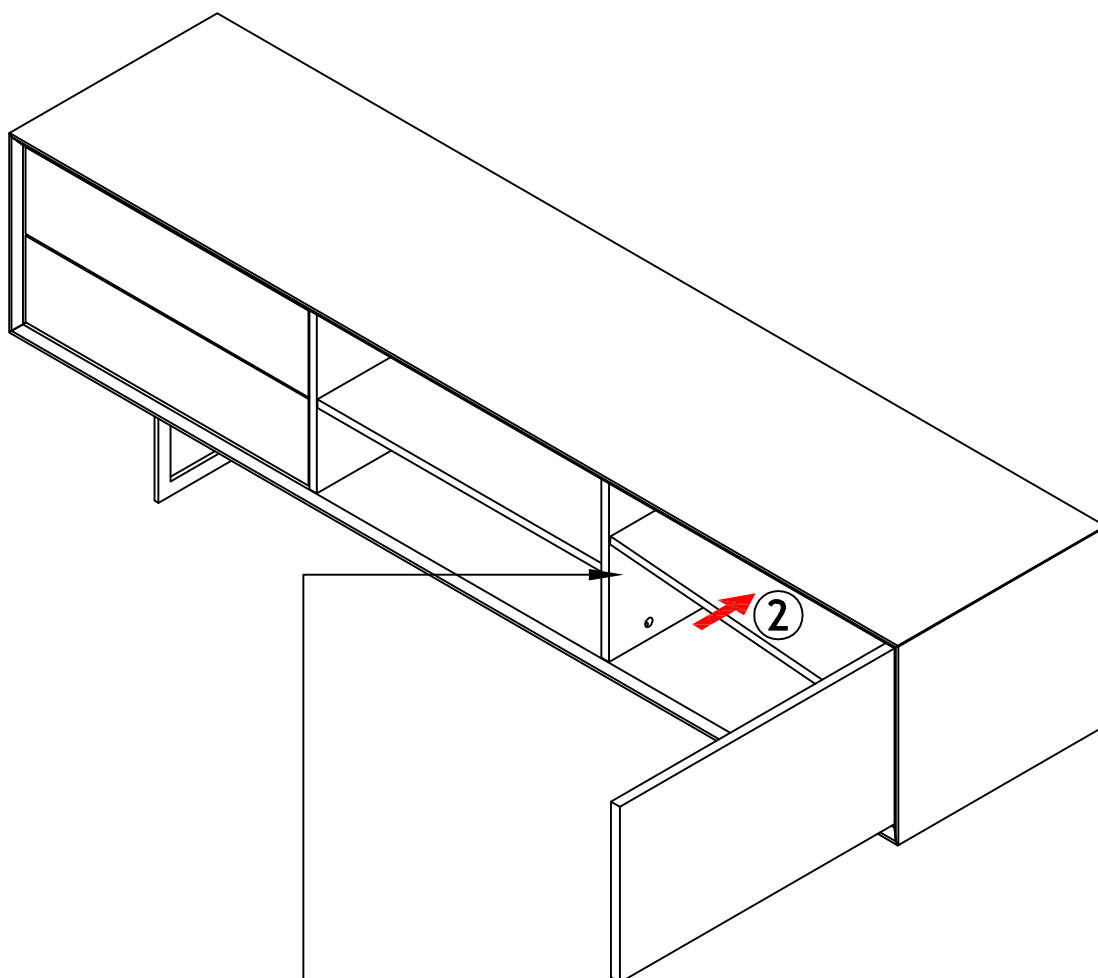
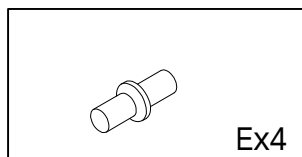


6

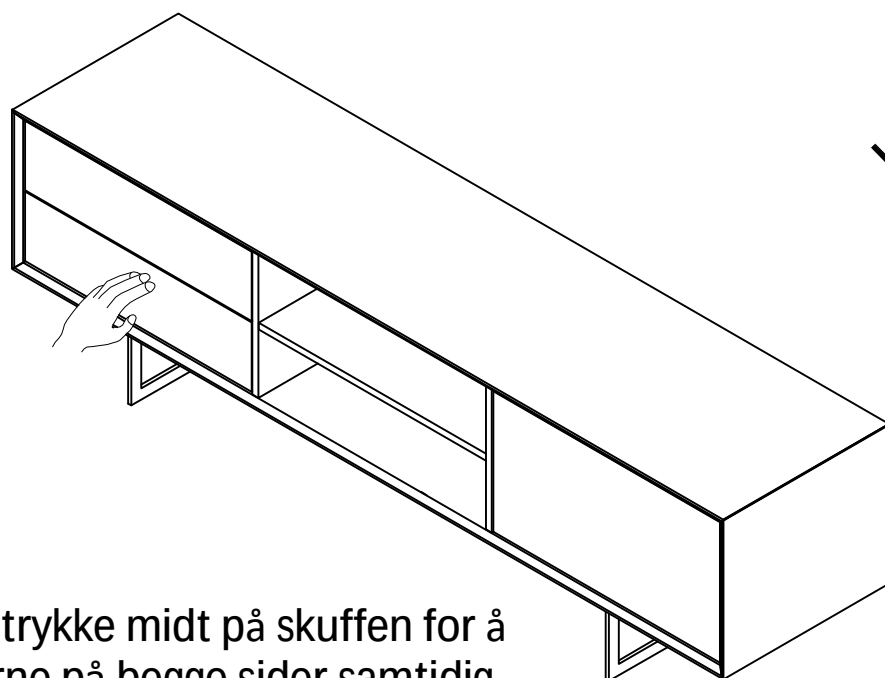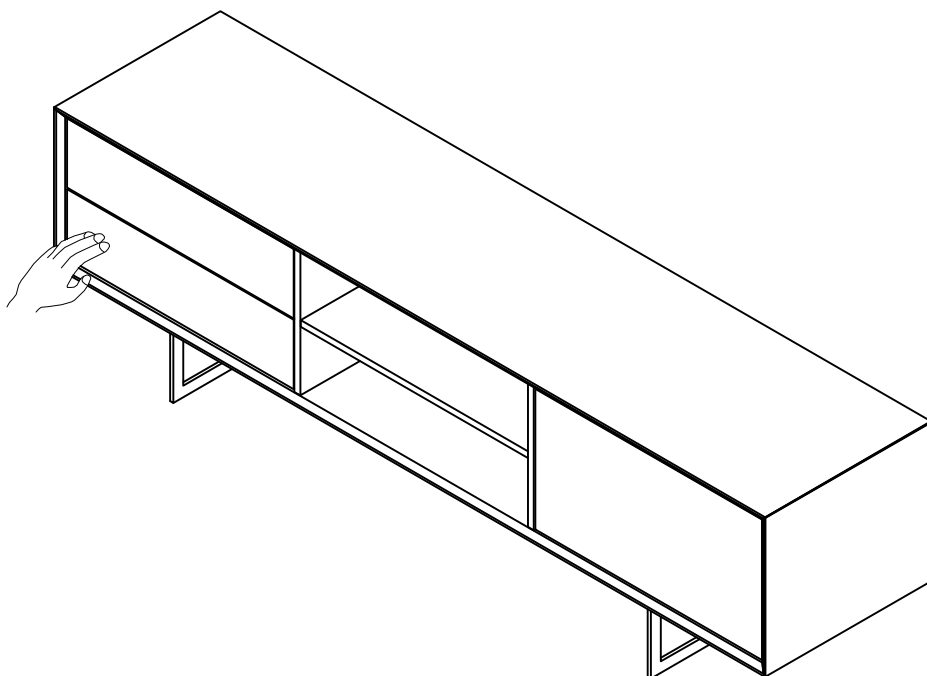  

Det er viktig å trykke midt på skuffen for å utløse stopperne på begge sider samtidig.

  
7

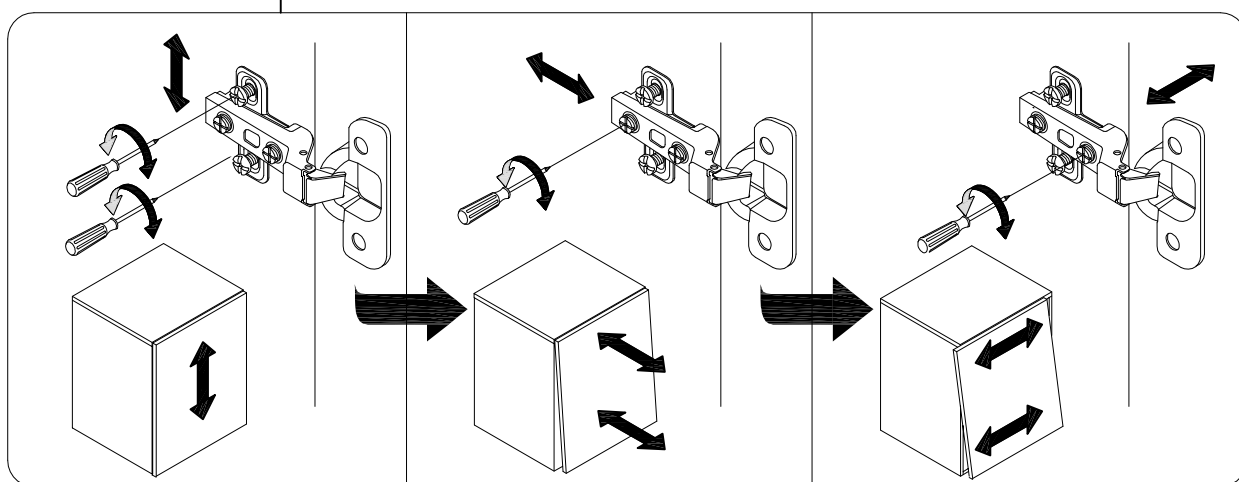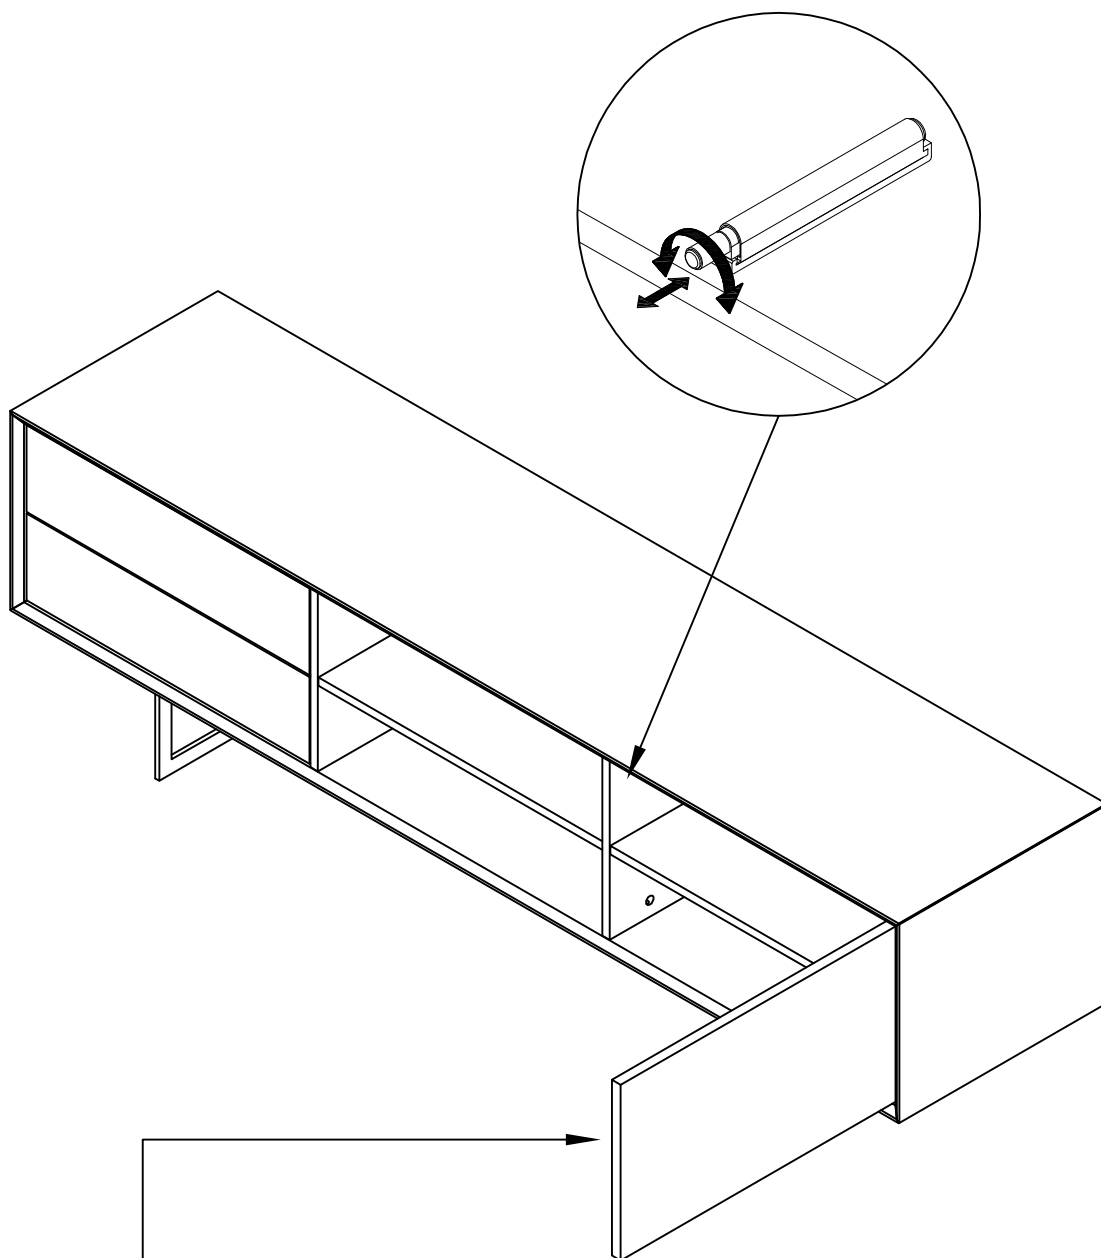

11-12

500162
500164

 8

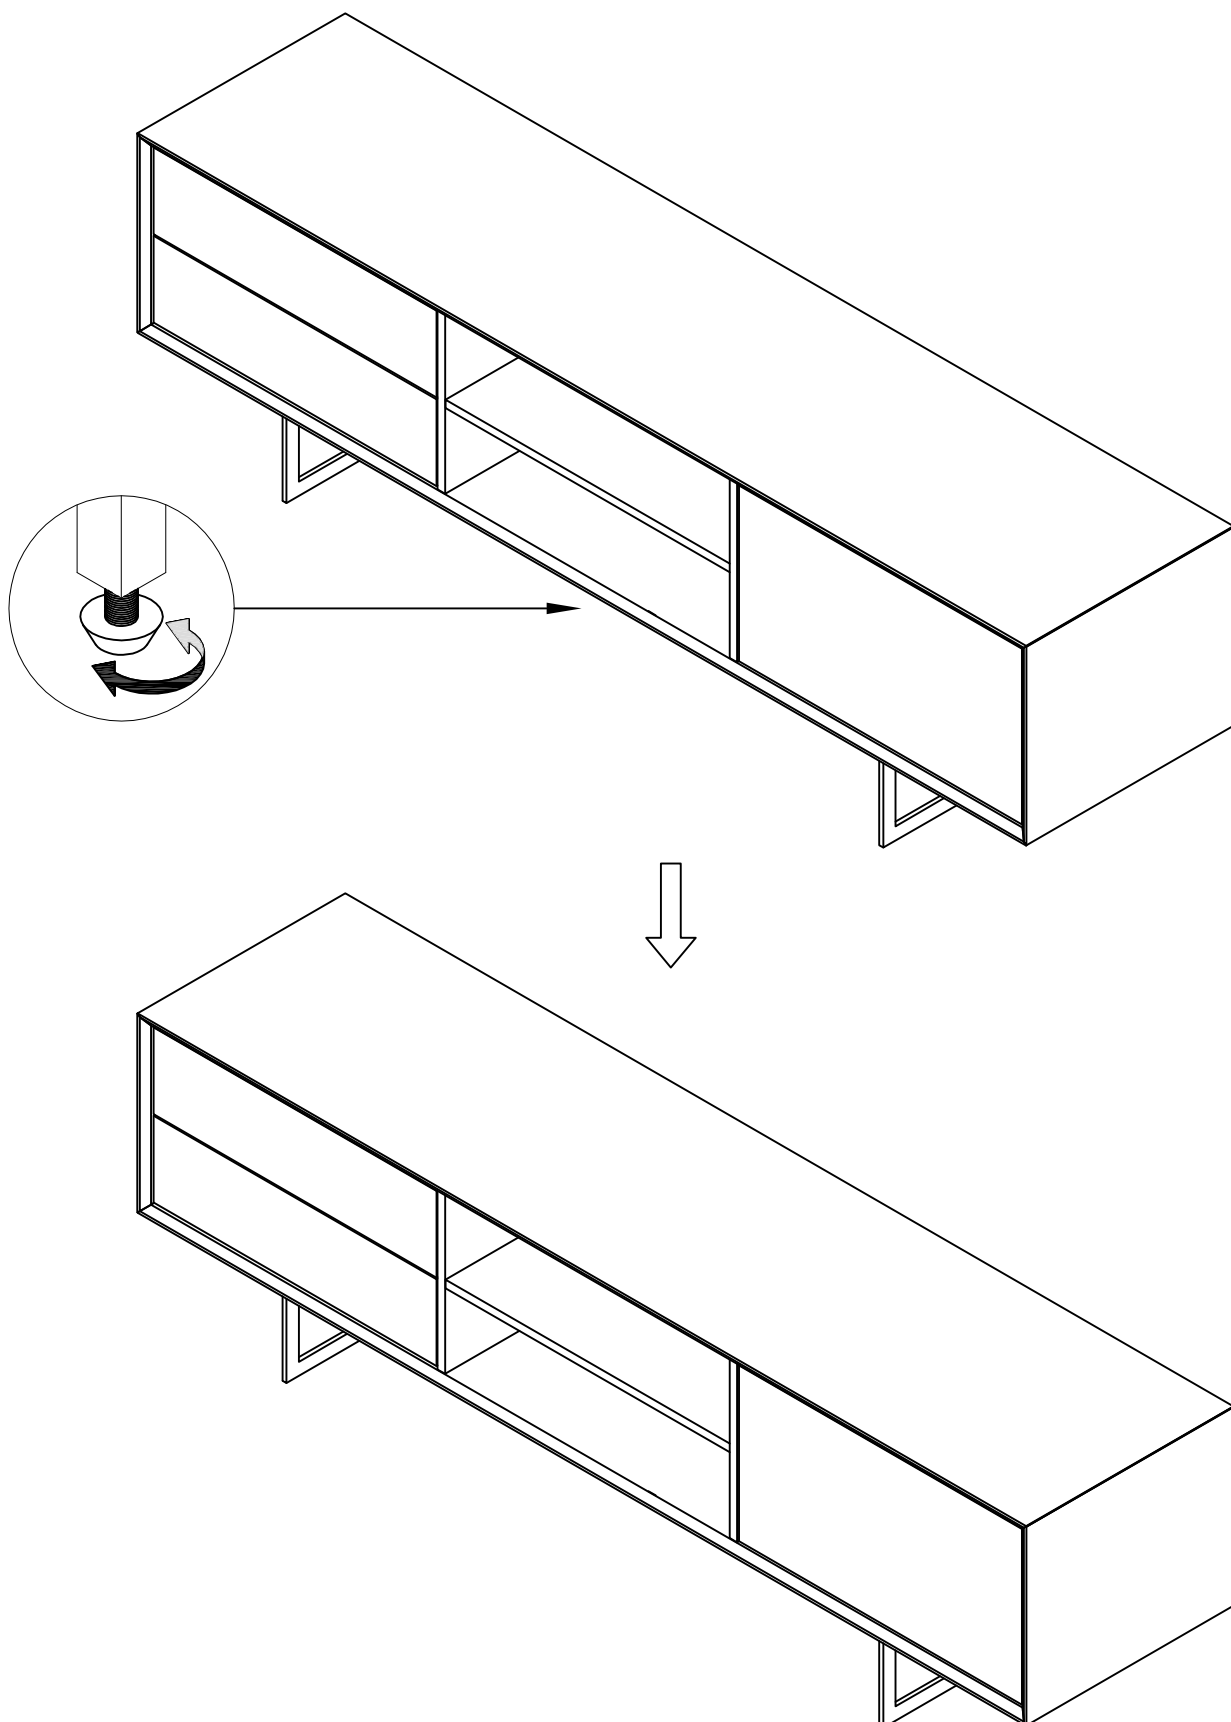

12-12

500162
500164