


# ASSEMBLY INSTRUCTIONS

## Hanger Rosewood - Silver - No Size

### 1586988-01-0

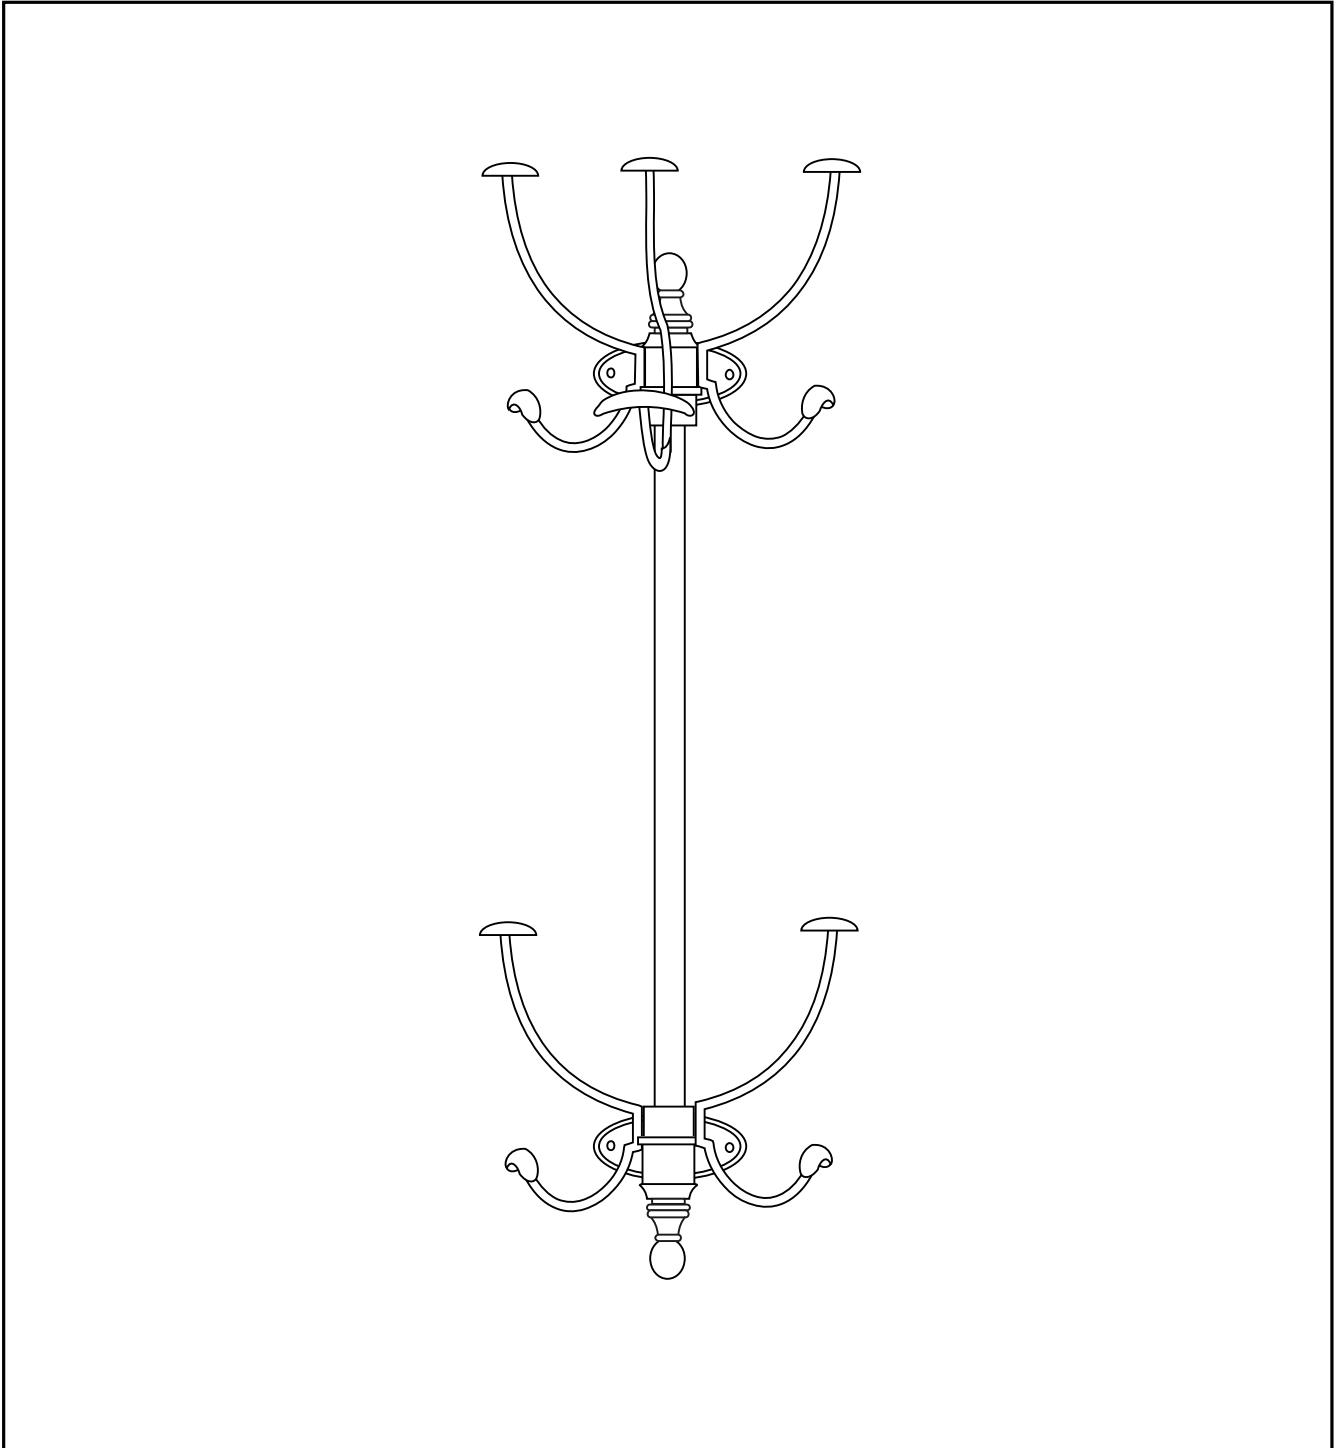

Note : The Hook crown in the bottom is movable up and down. It is fixed to the desired place by tightening the screw. The customer has to be careful while moving the hook crown as the pole may gather scratches.