 
 

PENNY

Desk







TOOLS

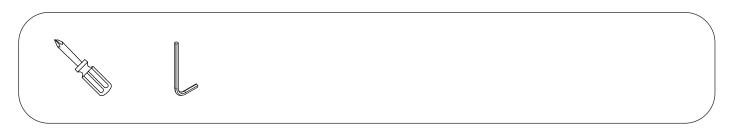



HARDWARE

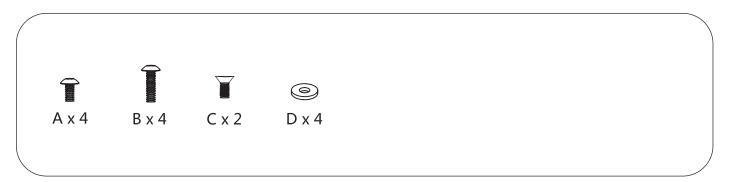



PARTS

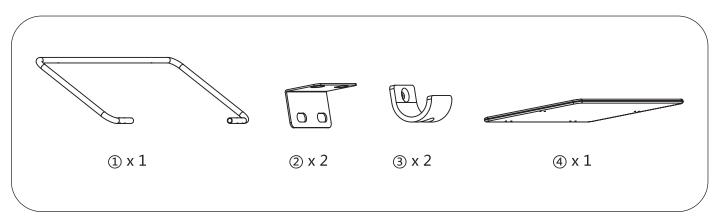

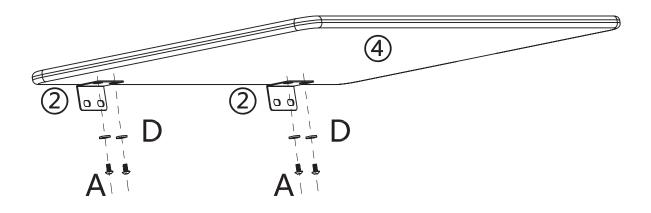

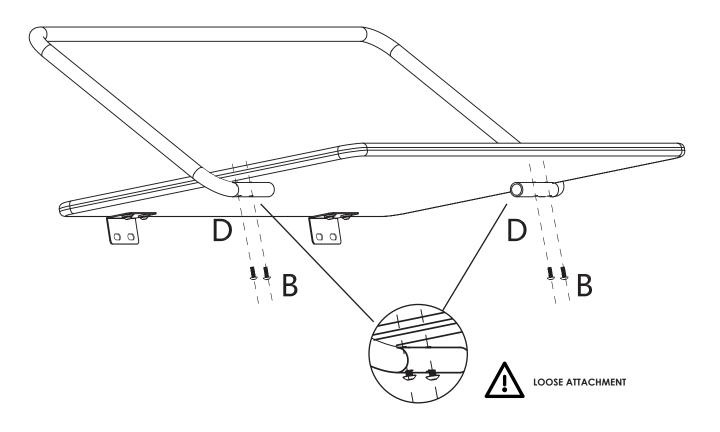

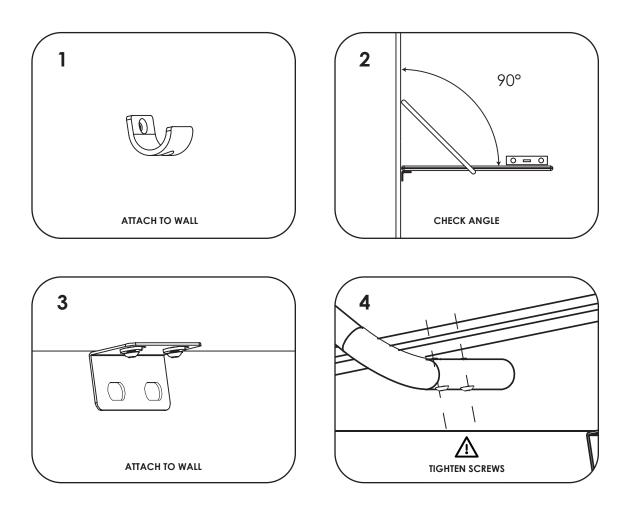

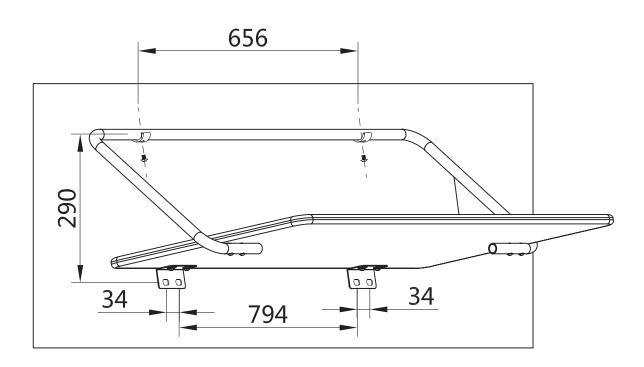

CARE INSTRUCTIONS

In order to maintain the product from dirt or marks, use a cloth with mild soap and water. Dry with a soft cloth. This is the only method of guaranteeing that the original appearance is maintained. Other commercially available cleaning agents should not be used.







