

2



Ax6




Bx1



 
Cx1

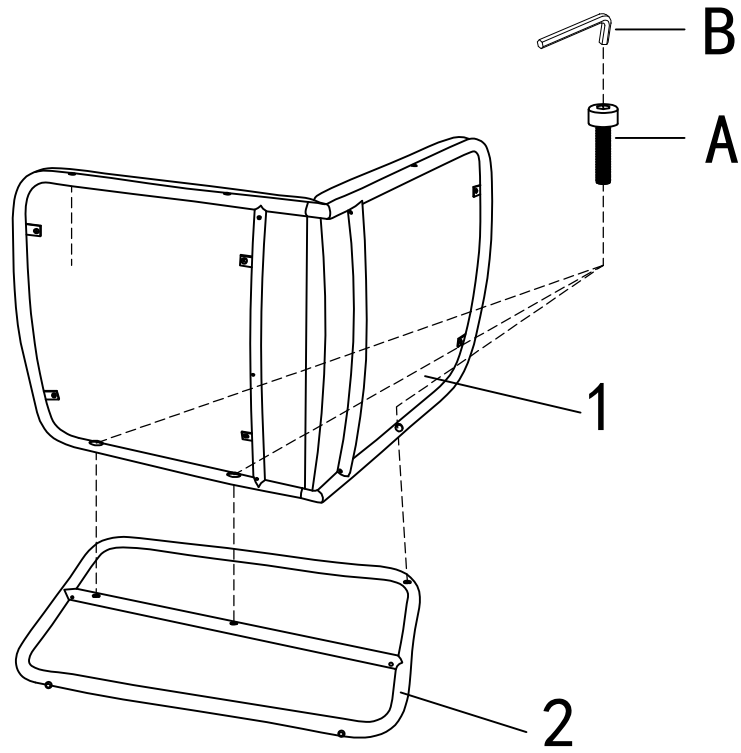

3

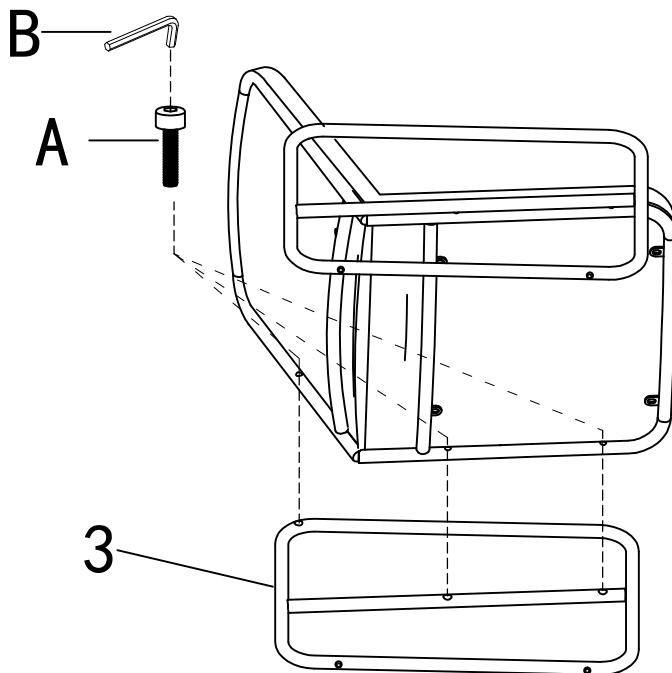

4

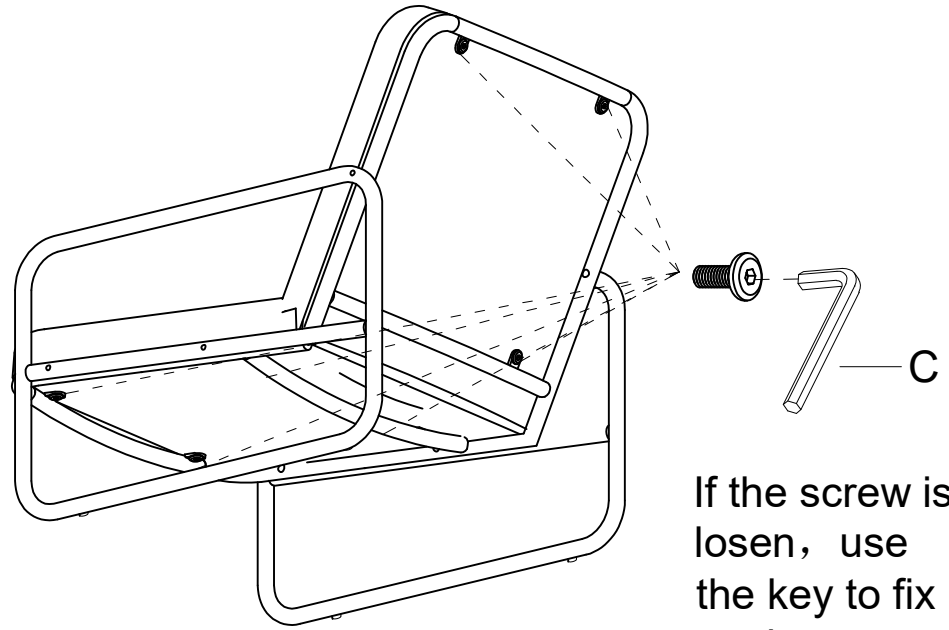

If the screw is
loosen, use
the key to fix it
again

5

