






Step 1: Begin by holding the side handles of the sand anchor and twist the anchor into the sand until the bottom of the handles sit on top of the sand.

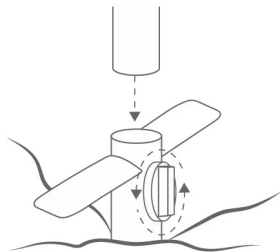


Step 2: Untwist the knob on the sand anchor to allow the center pole of the cabana to be inserted to the anchor.

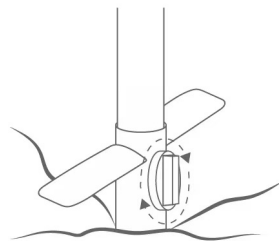


Step 3: Insert middle pole into sand anchor, then twist and turn the knob of the anchor and lock the center pole into place.

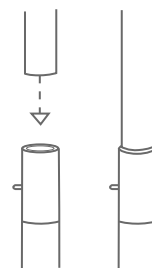


Step 4: Insert the top of the cabana into the bottom center pole and click into place. There should be a little button which pops out once the cabana is secured into the bottom center pole.

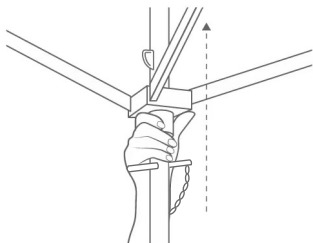

Step 5: Open the beach tent, then put the pin into the hole.

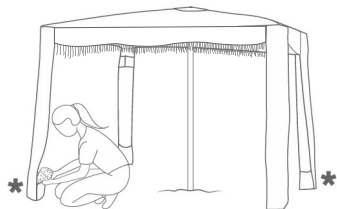


 Step 6: Pull out a fabric pillar and fill the pocket with sand. Then open the "opposite fabric pillar and fill with sand. Repeat this for the two remaining corners.



Step 7: Ensure each pocket is filled with enough sand.

Pro Tip: Place your smaller sized collectibles in the specially designed pockets of the fabric pillar for easy access.

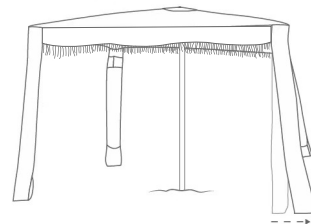

Step 8: You may need to move a sand pocket further away from the center to create stability if the sand is uneven.