
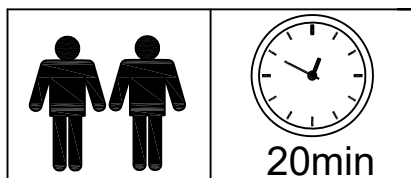




Assembly Instruction

2210101

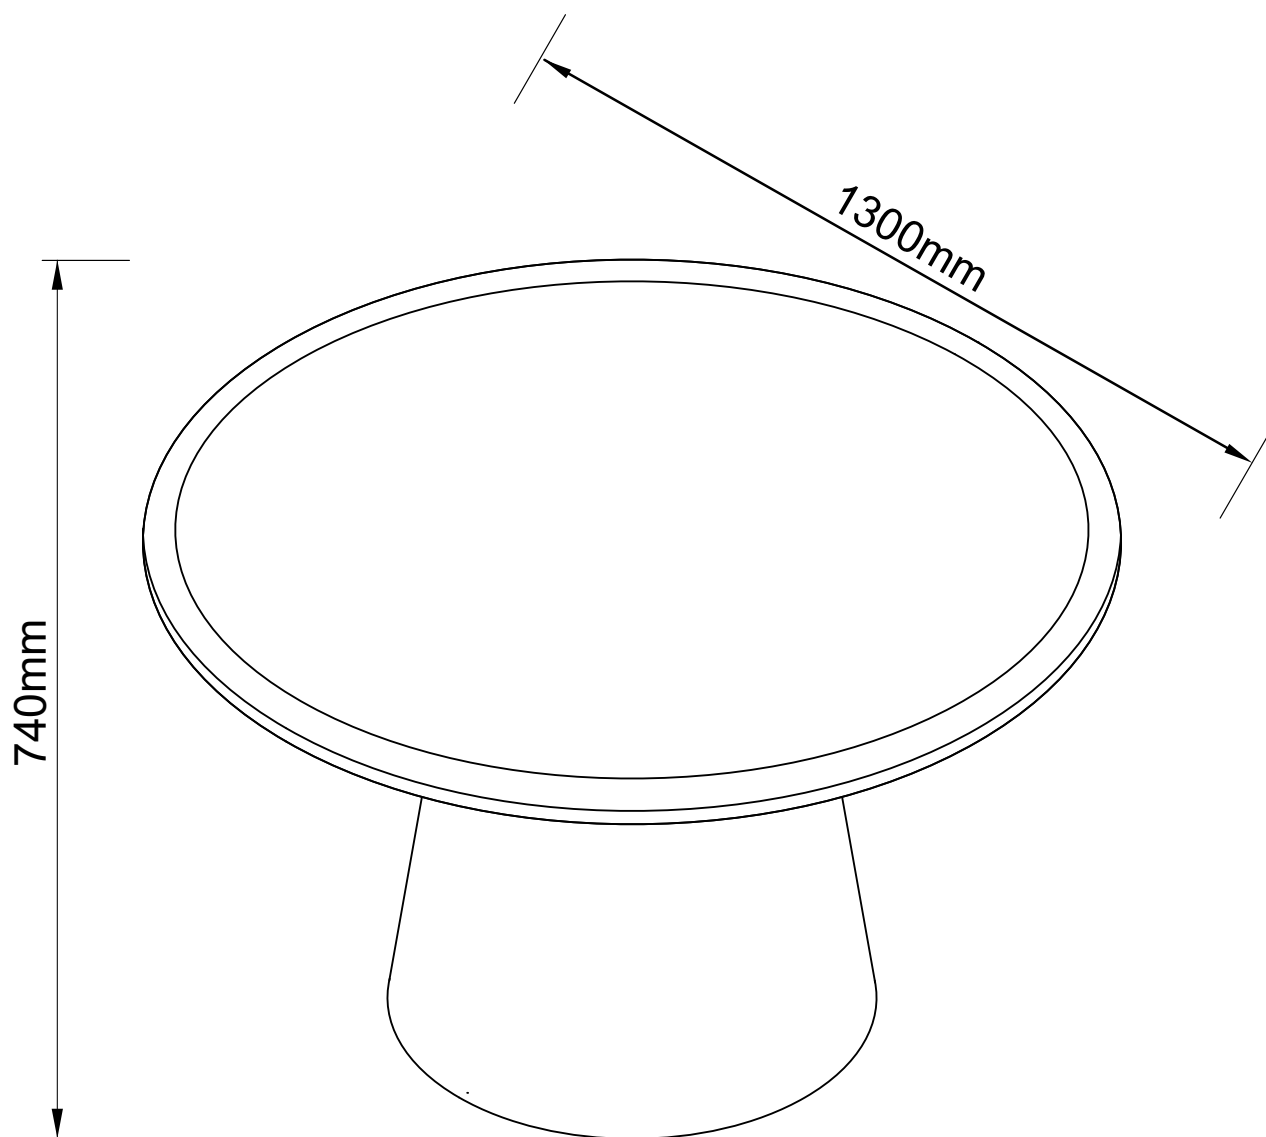

Caution! Ensure the maximum load is evenly distributed across the table surface.
The max loading are 100kgs.

1

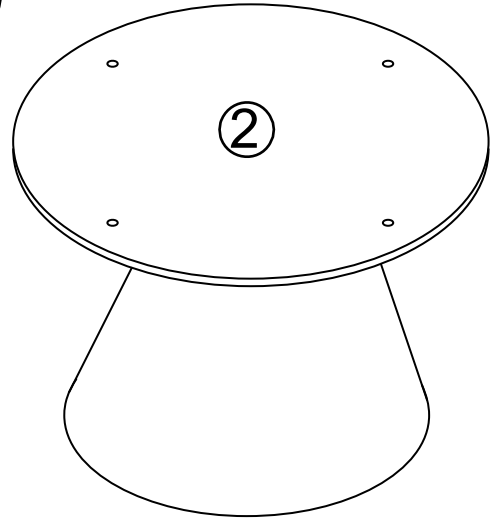
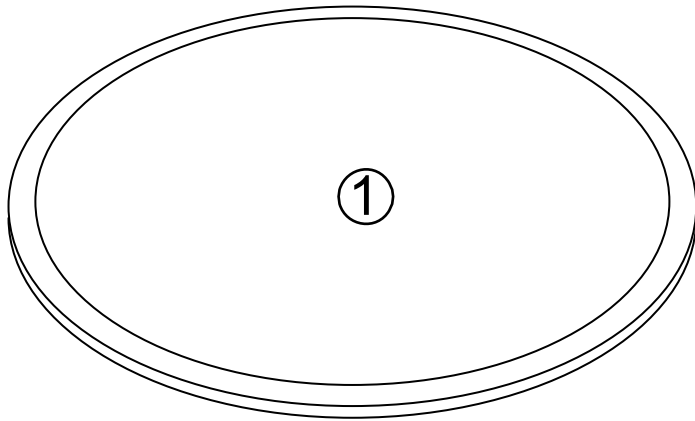


Ax4



Bx1

2

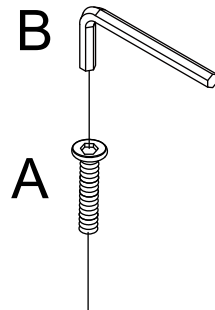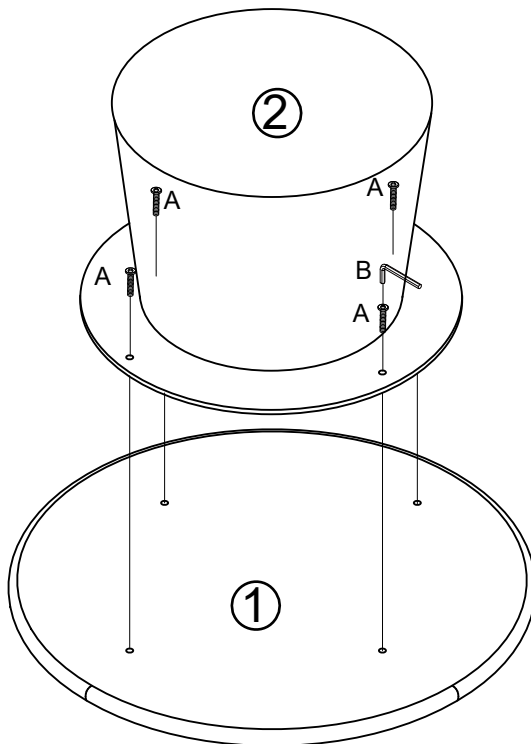

Ax4



Bx1

