

THANK YOU
FOR CHOOSING
A WATT&VEKE
LIGHTING PRODUCT


PRISMA MINI

B68160000 | B68160001 | B68162800 | B68162801

Assembly instructions

www.wattveke.se

WATT&VEKE®

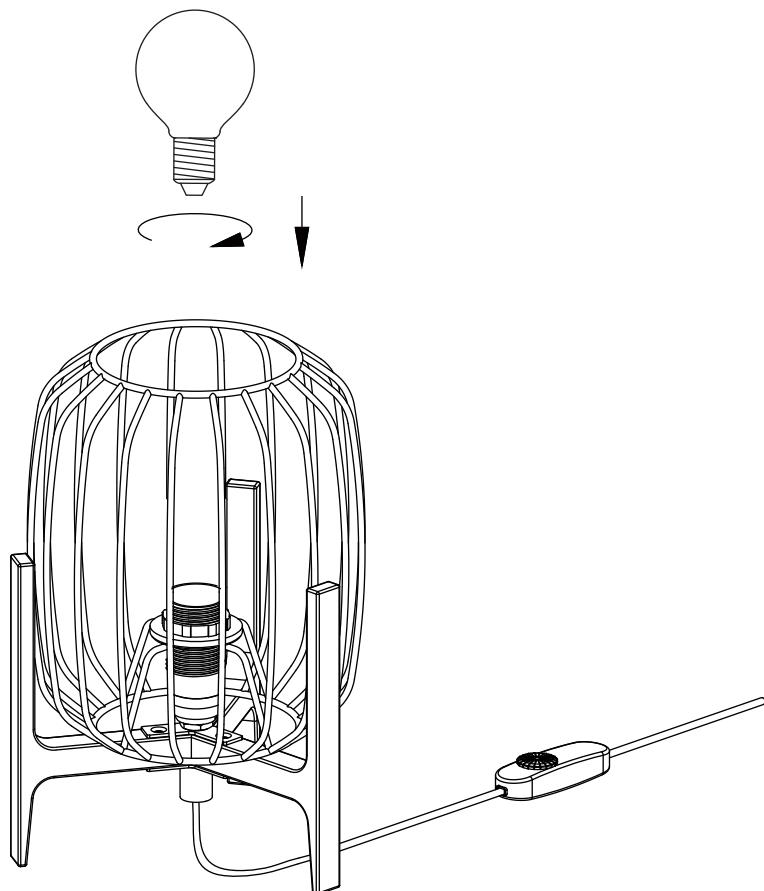

Cleaning instructions

Wipe off dust with dry soft cloth. Remove stains with water and a light detergent or soap applied with a damp cloth. Do not use detergents containing abrasives or solvents.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

The crossed-out wheeled bin symbol indicates that this product may not be treated as household waste. It should be disposed of in accordance with local environmental regulations for waste disposal. By recycling this product, you will help to minimise potential negative consequences for human health and the environment.

Attention

CE RoHS

Vi rekommenderar E14
LED ljuskälla, max 10 W.
dimbar LED ljuskälla

We recommend E14 LED light
source, max 10 W.
Use dimmable LED light source