


BILLY 2312100-01-0

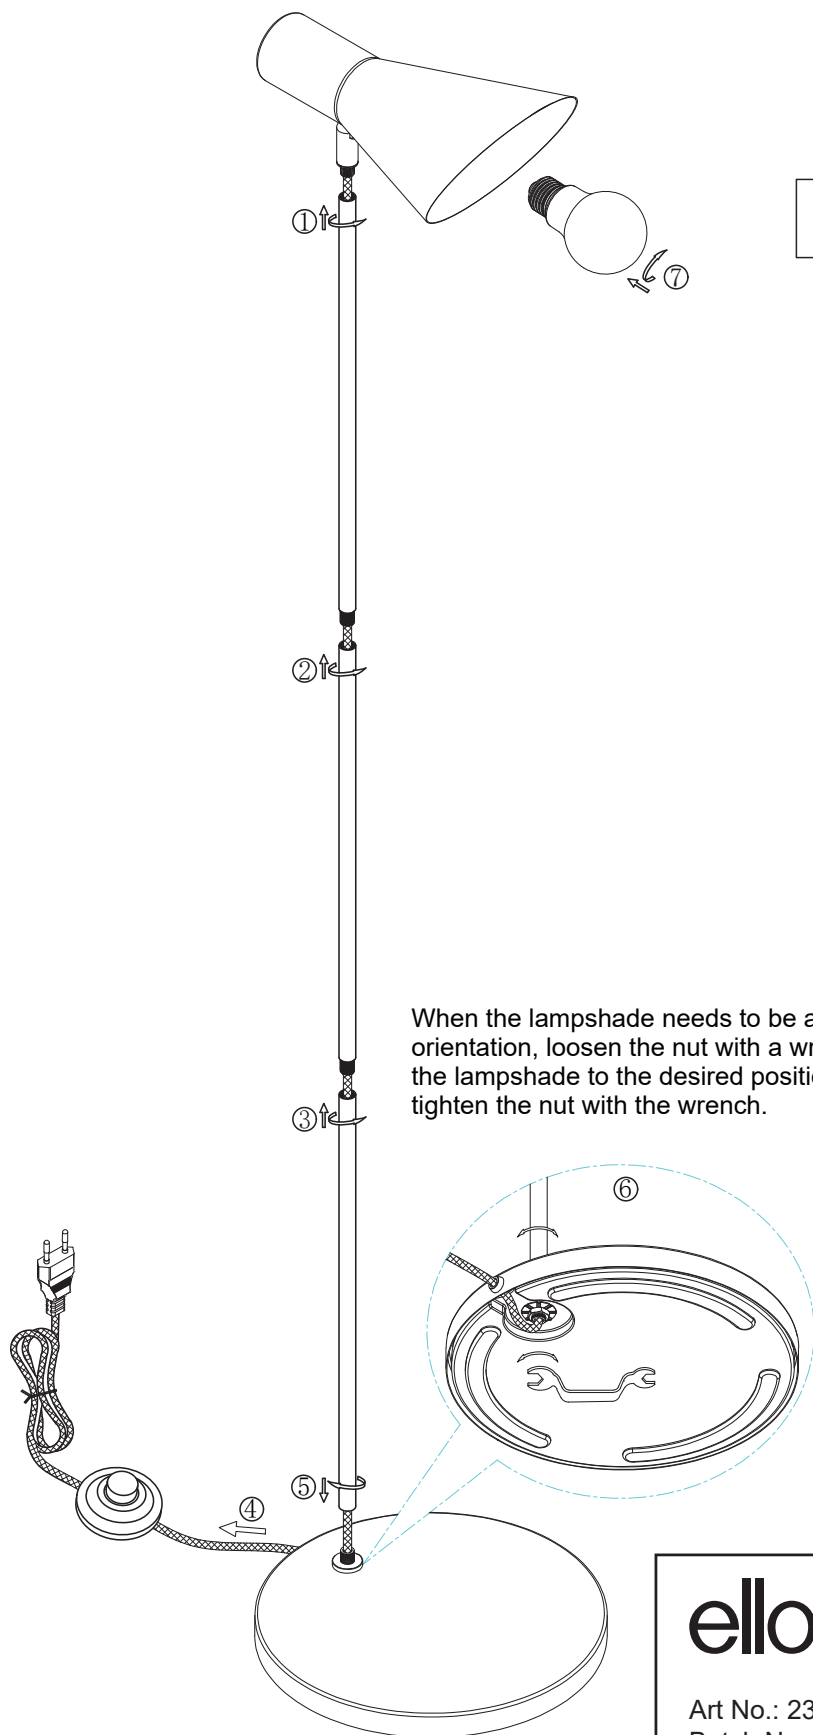

Bulb not included
Glödlampa ingår ej

When the lampshade needs to be adjusted in orientation, loosen the nut with a wrench, then adjust the lampshade to the desired position, and finally tighten the nut with the wrench.

ellos



Art No.: 2312100-01-0

Batch No.: 104320007

220-240V~50Hz

E27 Max 10W LED

IP20

BOX 961

501 10 Borås

Västra Götaland

Org No.: 556044-0264
customerservice@ellos.se