
Jotex

ROMAN BLIND INSTALLATION INSTRUCTIONS

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.

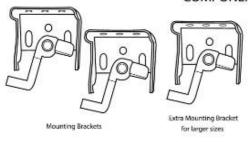






Selector Core

297mm

Safety Cor Device

HOW TO INSTALL


Attach brackets to head box close to cord lock at one end and close to the tape drum at the other end and near centre for larger blinds where more than 2 brackets are provided.






Hold the blind up against the window and where the brackets meet the wall, using a pencil, mark the screw holes.











Pre drill screw holes and fix backets with a screw driver. Do not over tighten screws until the brackets are level.

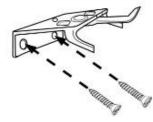

210mm

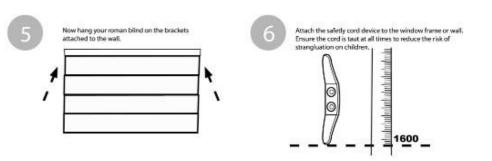

HOW TO OPERATE

To lower blind, pull cords down and away slightly to release lock.

To raise blind, pull cords down until you reach your desired height then hold down cords horizontal to lock.

CARE INSTRUCTIONS

Remove blind from track, Gently vaccum with appropriate attachment, hand wash if required in cold water. Do not rub or wring. Do not tumble dry, Drip dry in shade. Do not dryclean, \otimes Possible Shrinkage 3%.

WARNING!

Young children have died by wrapping loose curtain and blind cords or chains around their necks. Secure cords or chains with cord guides or keep them out of reach by winding them around a cleat. Move cots and furniture away from window covering cords or chains.

WARNING!

CLEATS

Cleats should be mounted at least 1600mm above the floor, so as to keep cords out of the reach of young children. Cords must be fully wrapped around the cleat at all times. Always keep cords out of the reach of young children.