







# VANCOUVER SOFA - Brown

SKU - 1542229-01 - 0

Parts

Assembly Instruction


<b>A</b>  x 24	<b>B</b>  x 24	<b>C</b>  x 01	<b>D</b>  x 01	<b>E</b>  x 06	<b>F</b>  x 03
---	---	---	---	---	---




15 Min.





Step 1:

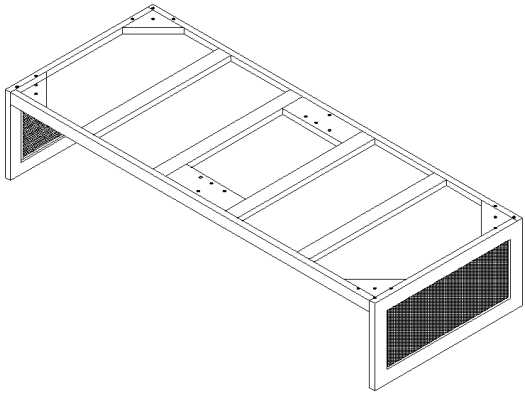

Step 2:

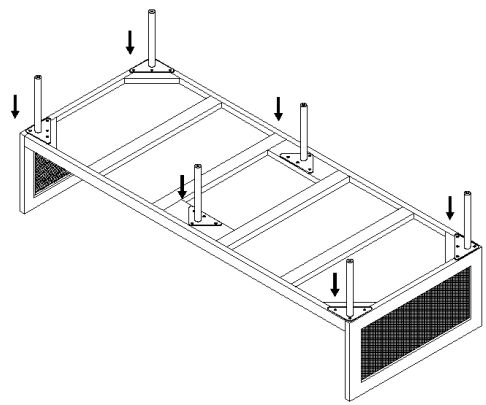

Step 3:

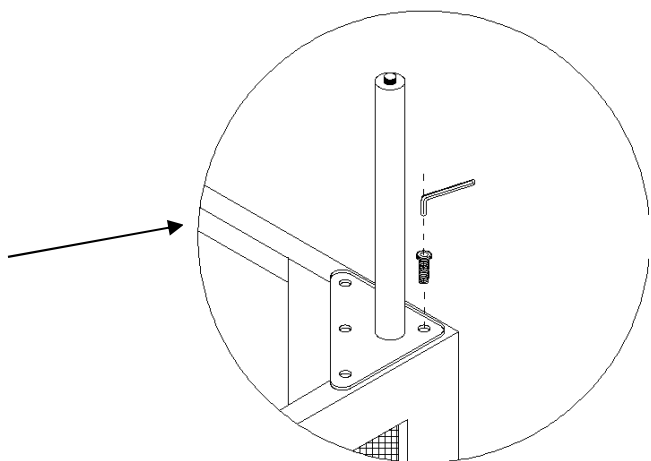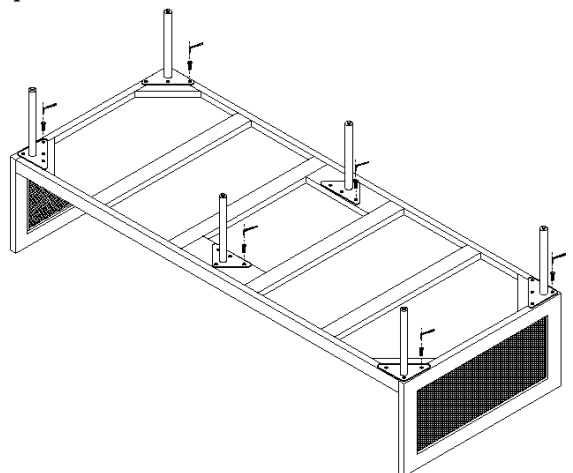

FINISH :

