


## ASSEMBLED INSTRUCTION

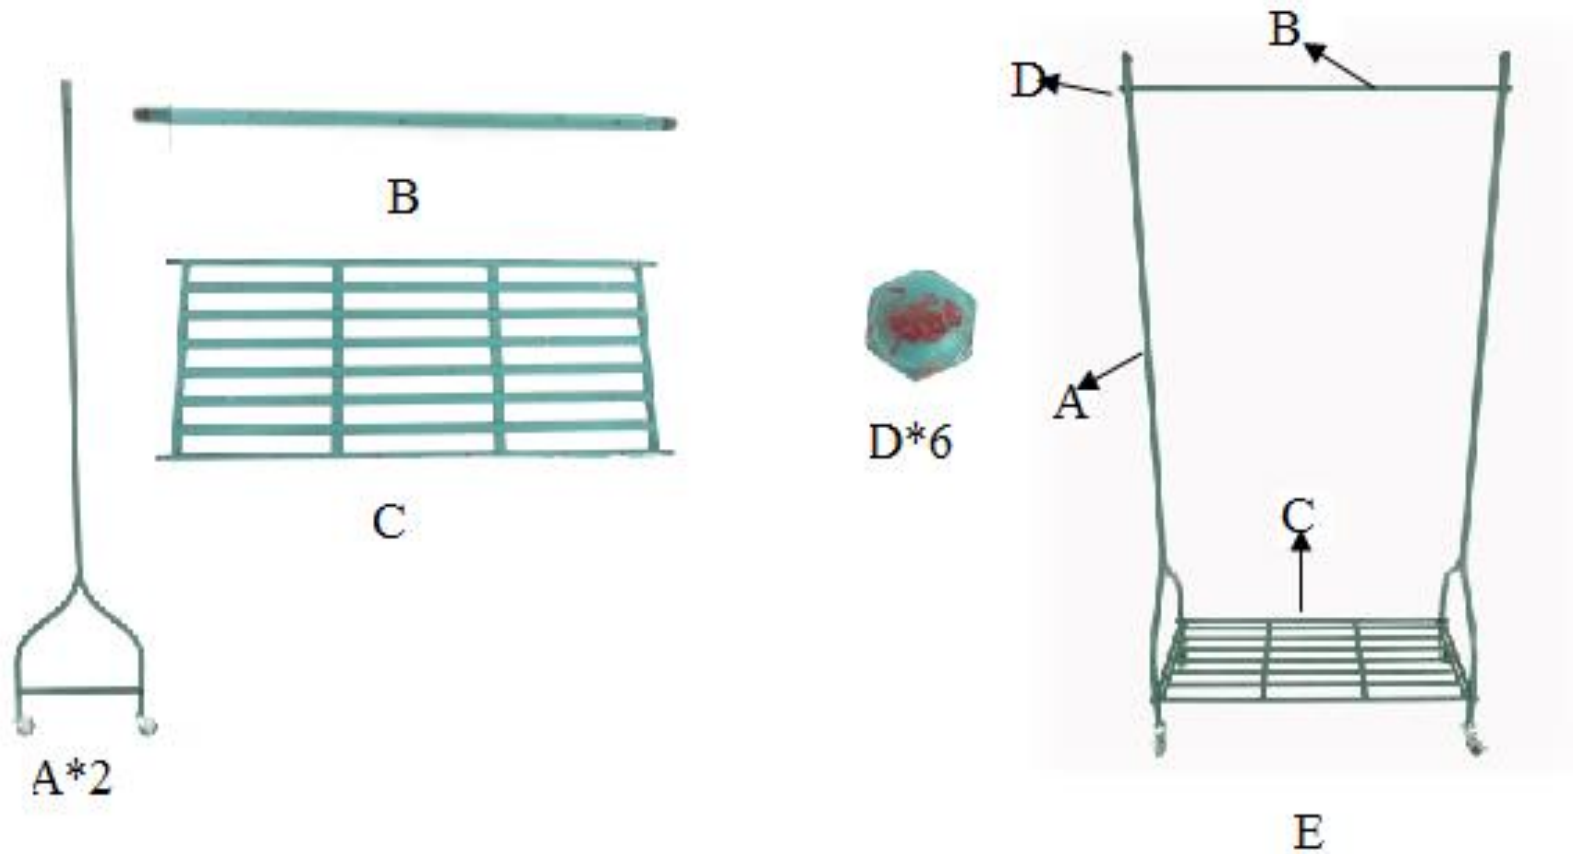

STEP 1 : PUT THE PART C BETWEEN AND AT THE BOTTOM OF THE PART A,TIGHTEN IT WITH THE PART D

STEP 2 : PUT THE PART B BETWEEN AND AT THE TOP OF THE PART A,TIGHTEN IT WITH THE PART D.

STEP 3 : THE PART E IS THE WHOLE ITEM.