




ASSEMBLY INSTRUCTION

MILFORD FLOOR MIRROR


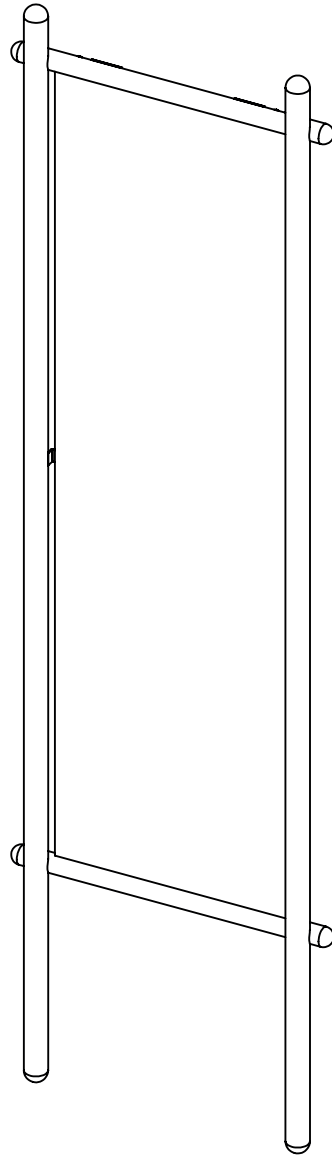


ROWICO



H O M E

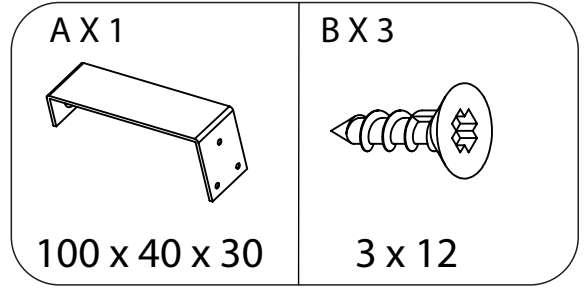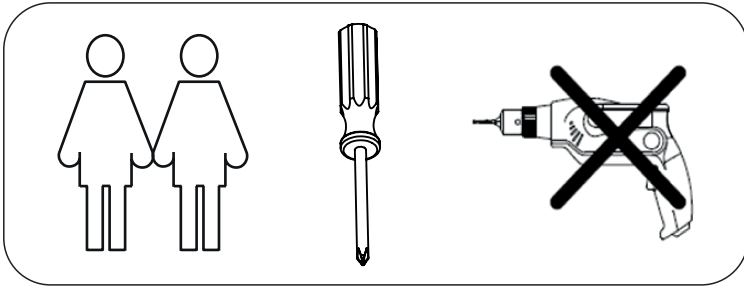

Step 1

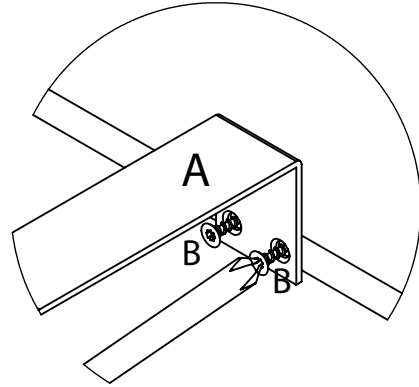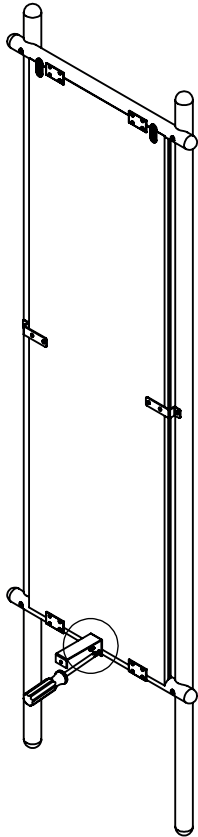

Step 2

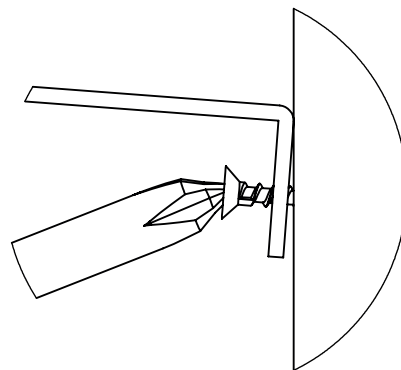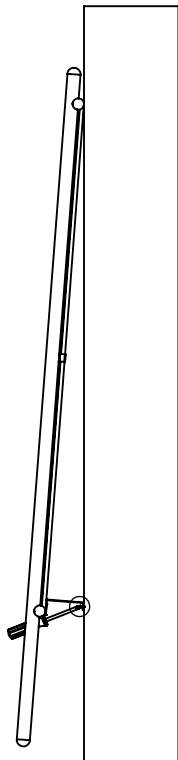

Skrudar för väggmontering ingår ej
Screws for wall attachment are not included