

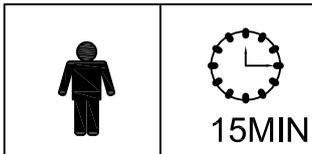


Assembly Instruction

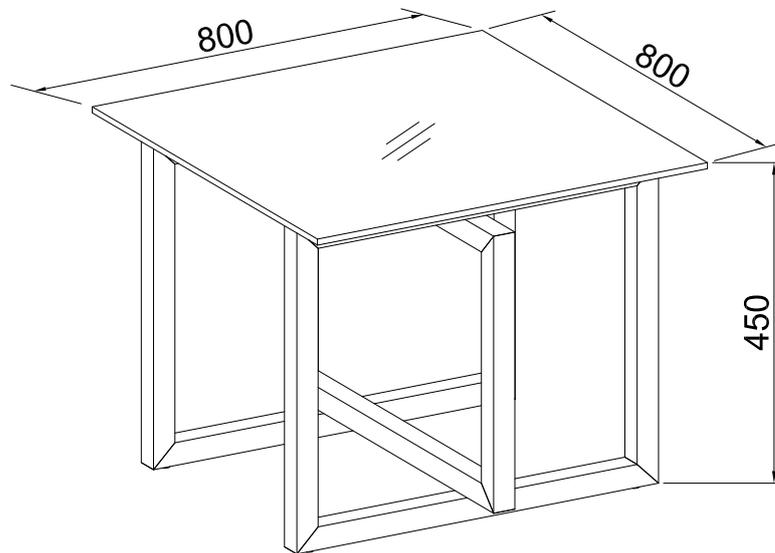

1

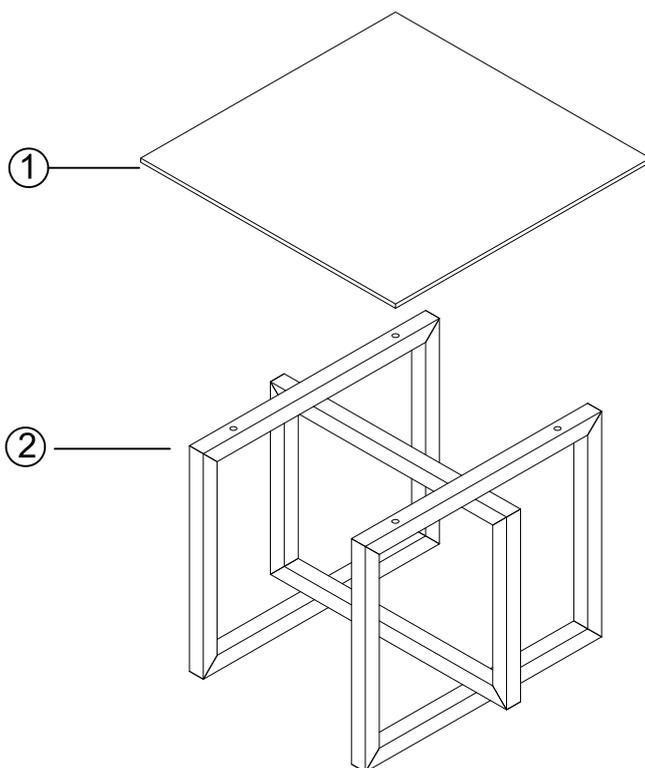

Ax4  
M8x35mm

Bx1 
M5

Cx1 
M6

① X1 800x800x8mm

② X1

2



Ax4



Bx1




Cx1

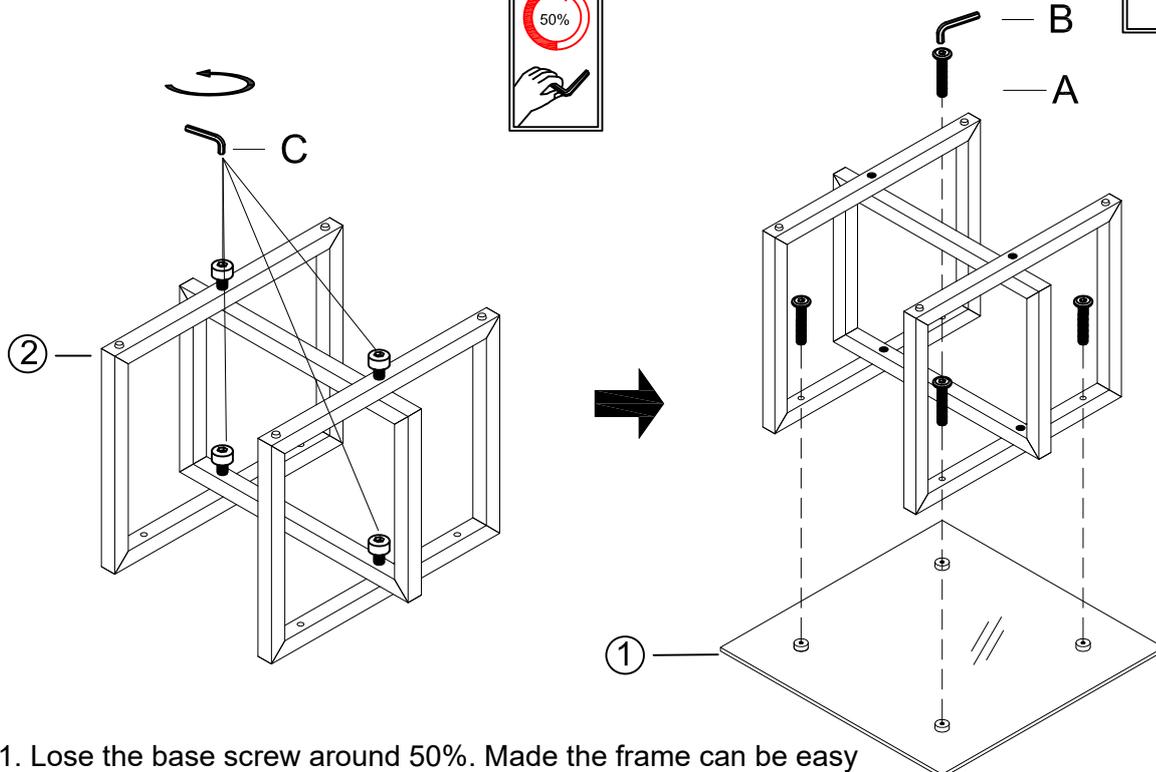

1. Lose the base screw around 50%. Made the frame can be easy to aim at the glass screw hole.
2. Fixed the glass screws ,and then 100% fixed the frame screw.

3

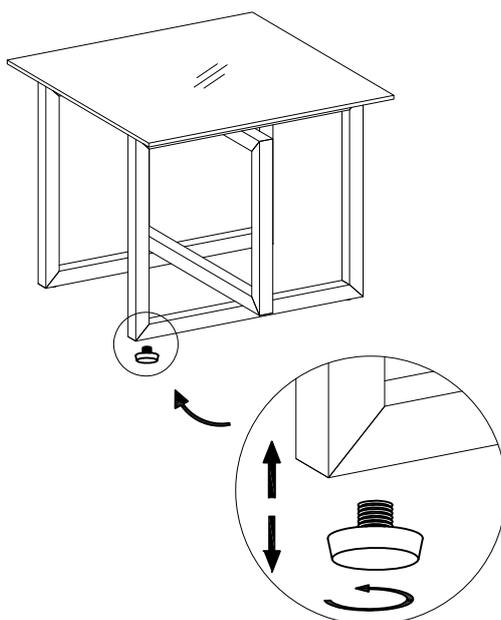

adjust the foot to the same level