
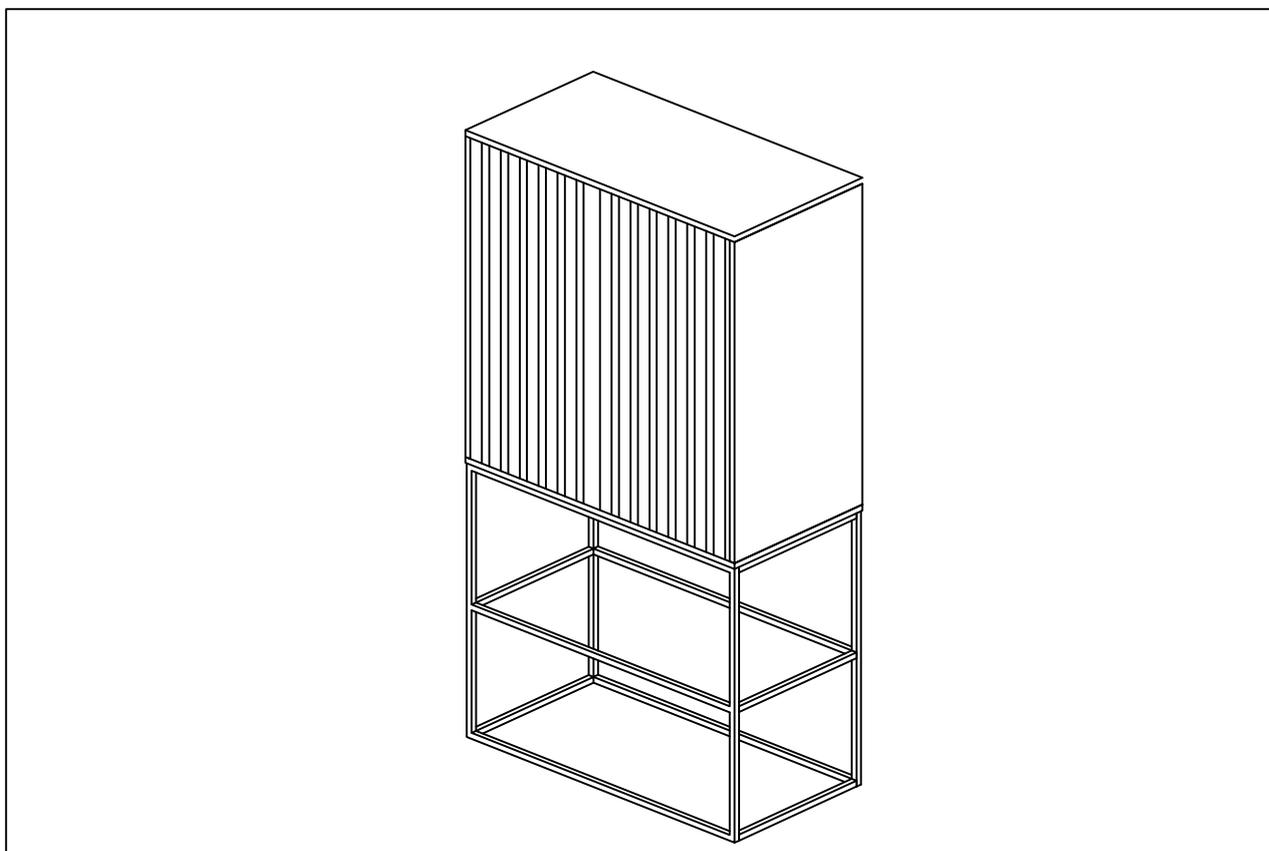
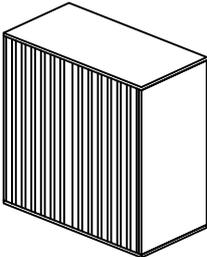


ASSEMBLY INSTRUCTIONS

1597644-01

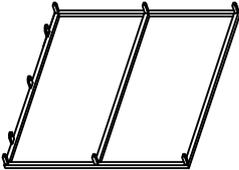

Component List

Label	Picture	Description	Qty
A		Cabinet	1
B		Leg Frame	2
C		Metal Connector	2
D		Metal Connector	4
E		Glass Shelves	1

Hardware List

Label	Picture	Description	Qty
H1		Large Allen Bolt M6x16 mm	8
H2		Flat Washer M8x16 mm	8
H3		Small Allen Bolt M6x10 mm	12
H4		Shelf Pin	4

Tool List

Label	Picture	Description	Qty
T1		Allen Key 4 mm	1


Assembly Prep

Before Beginning:

* Save all packaging until finished.



* Read Instructions, cover to cover.

* Have 2 adults on hand for assembly.

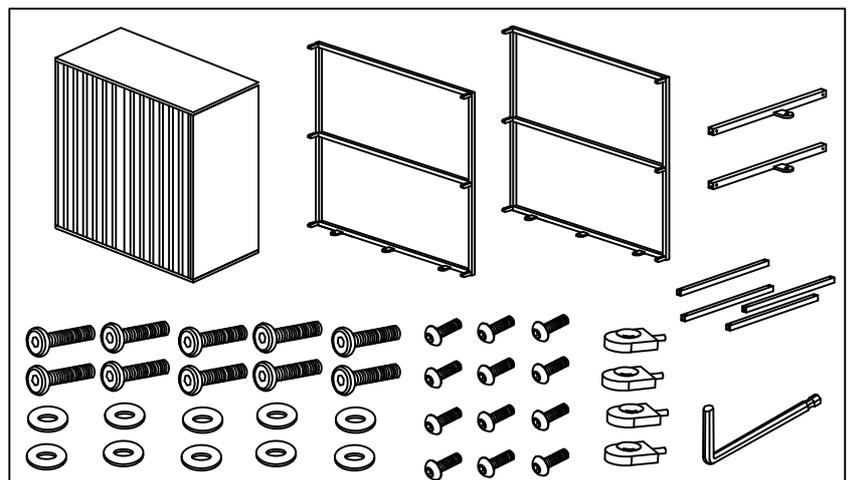



Assembly Steps

Step 1

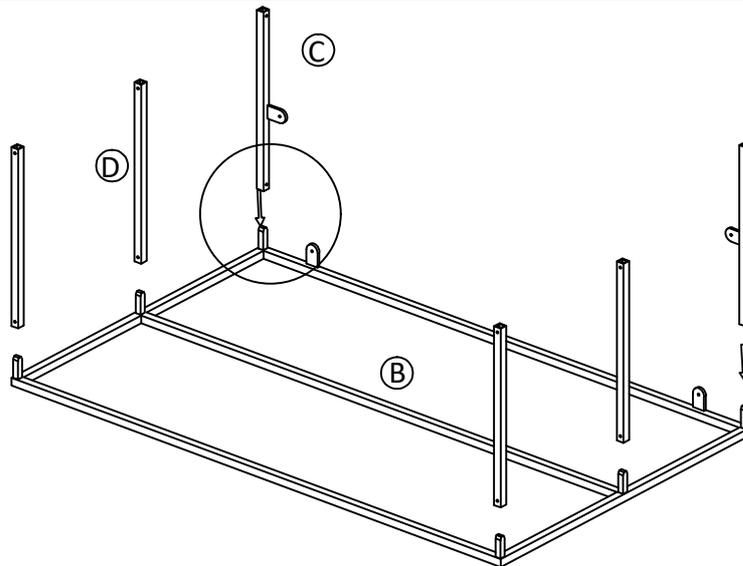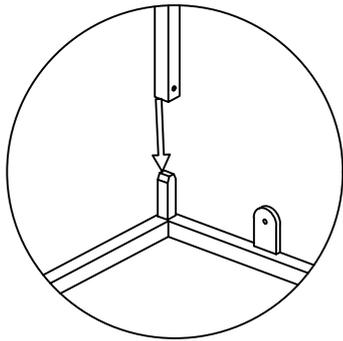


Place Leg Frame (B) on a non-damaging padded surface. Insert Metal Connector (C) on the provided tab of Metal Frame (B) then Insert Metal Connector (D) on the the provided tab of Metal Frame (B) as shown in the picture.

Step 2

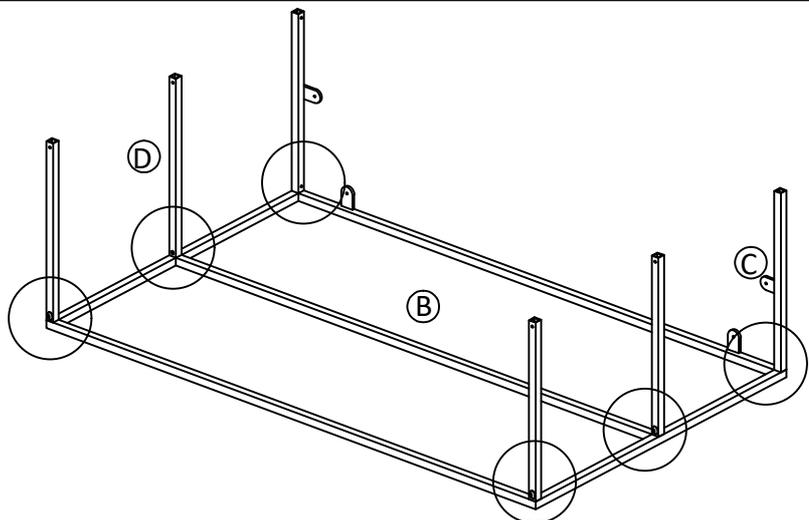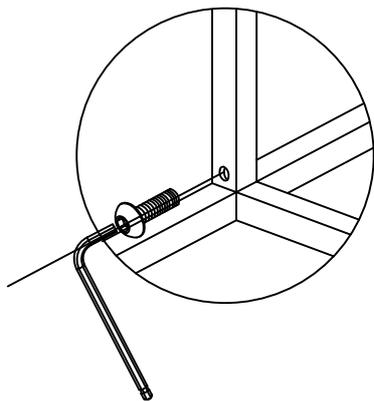

Gently insert the Connector (C) & (D) on to the protruded metal stud on Leg Frame (B) ensuring holes on the connectors aligned with pre-threaded holes on Leg frame (B). Secure connections using 6 Pcs Small Allen Bolt (H3). Do not fully tighten all connections yet.



Step 3

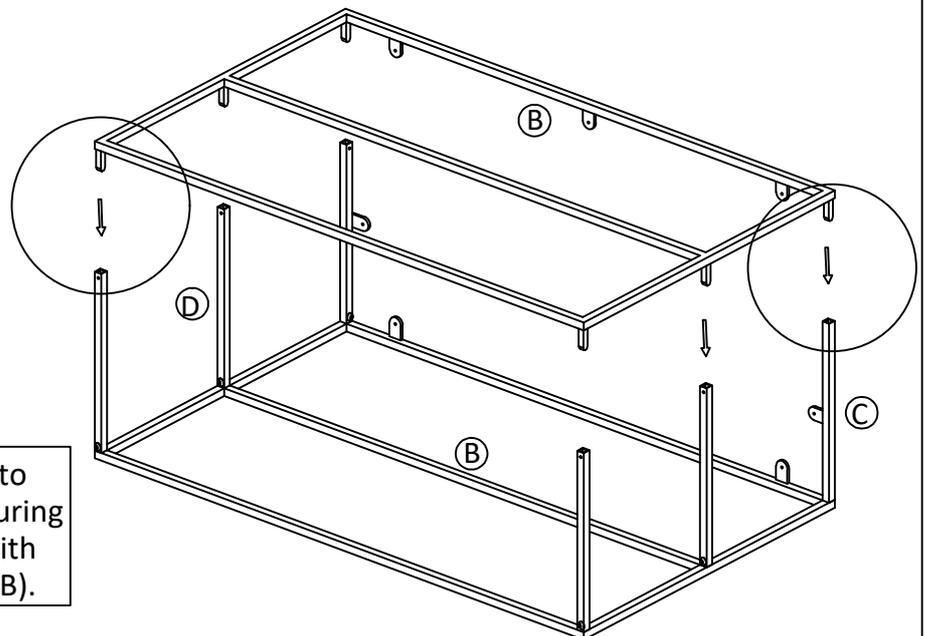

Gently insert the Leg Frame (B) in to the metal connector (C) & (D) ensuring holes on the connectors aligned with pre-threaded holes on Leg frame (B).



Assembly Steps

Step 4

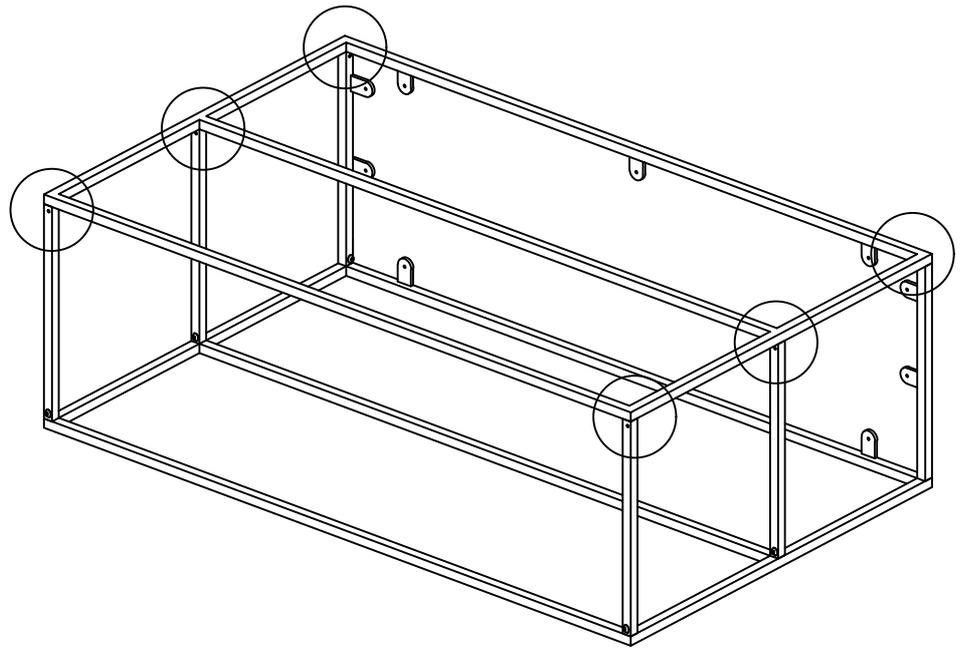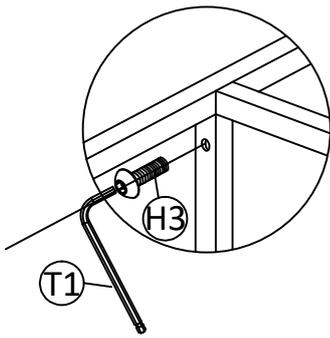

Secure connections using 6 Pcs Small Allen Bolt (H3). Do not fully tighten all connections yet.

Step 5

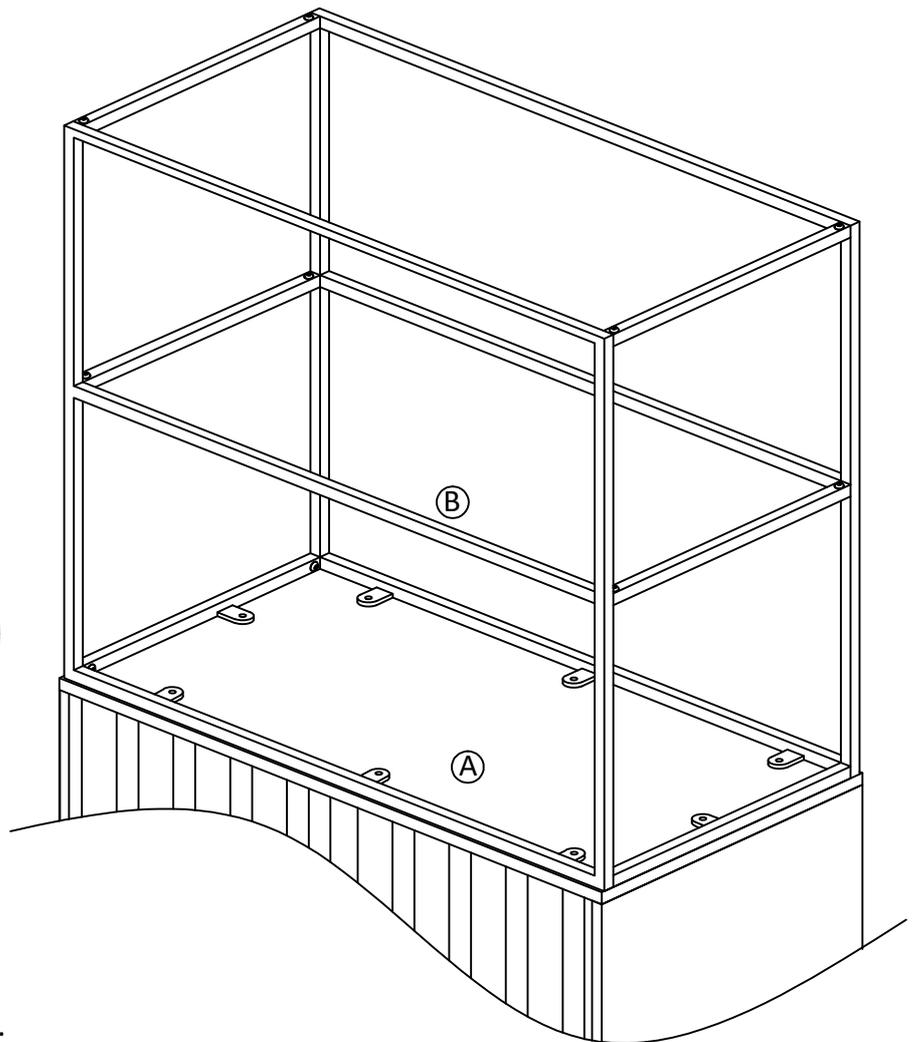
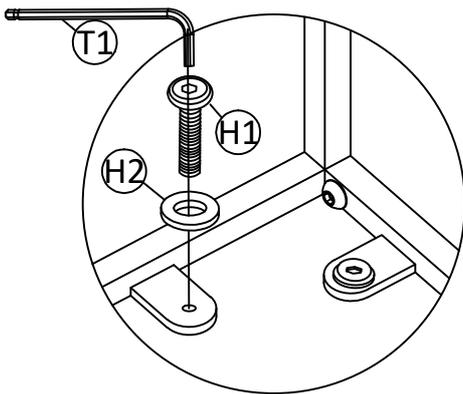


Careful : Extremely heavy product.


Place Cabinet (A) upside down on a non-damaging padded surface. Place Leg Frame (B) on bottom of Cabinet (A) ensuring holes on the leg frame (B) are aligned with the holes underneath the Desk (A). Secure all connections using 10 Large Allen Bolt (H1) and 10 Washer (H2) on metal tab as shown above. Fully tighten all connections using Allen Key (T1).

Assembly Steps

Step 6

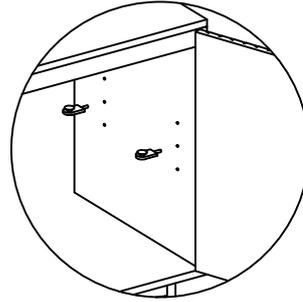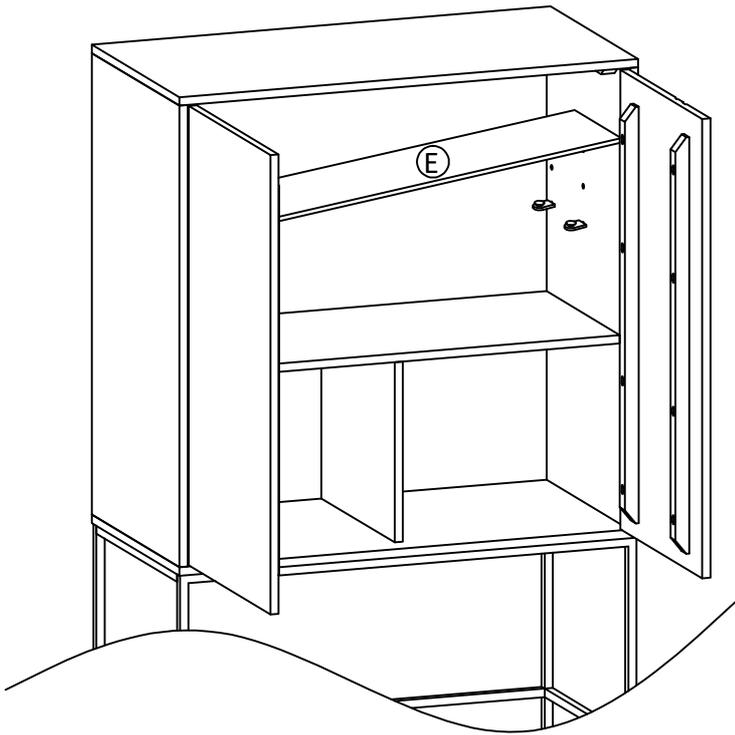

Turn the product in upright position.
Open the doors and insert shelf pin (H4)
into the Cabinet panel holes and place the
Glass shelves (E) on shelf pins.

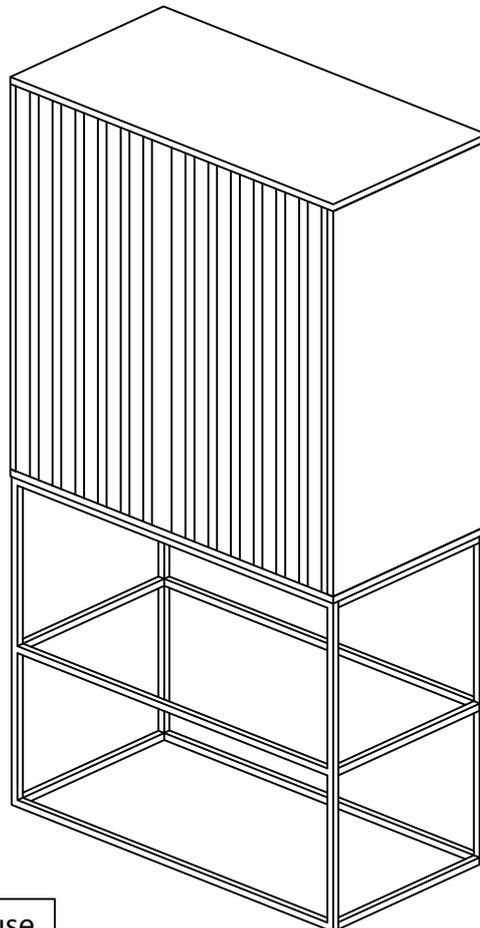

Assembly is complete and the product is ready to use.