

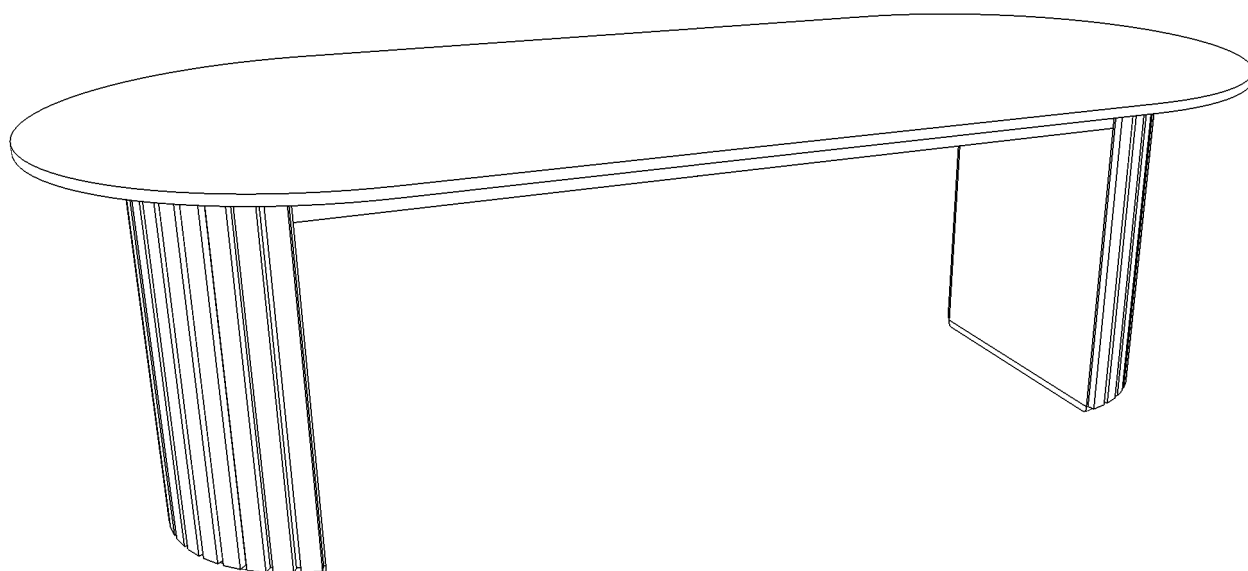
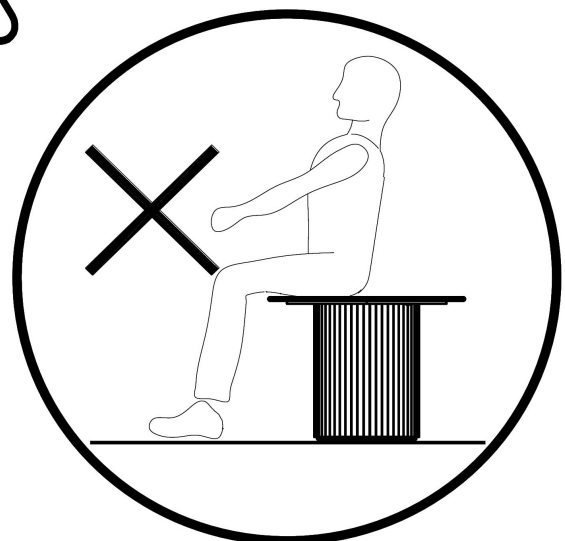
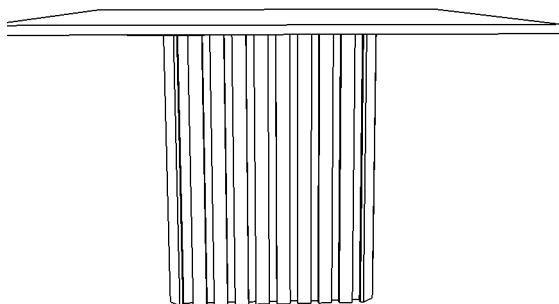
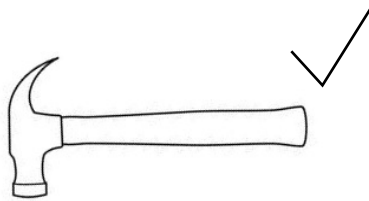
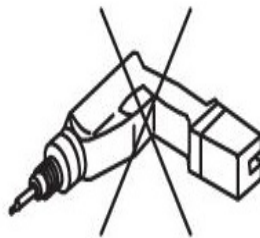
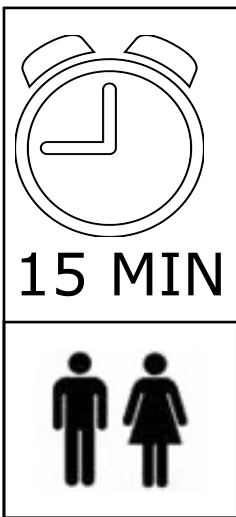



Dining table

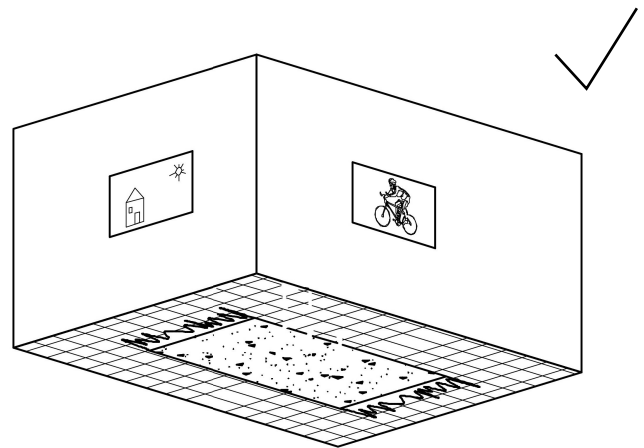

Important! Read carfully and retain for future referance

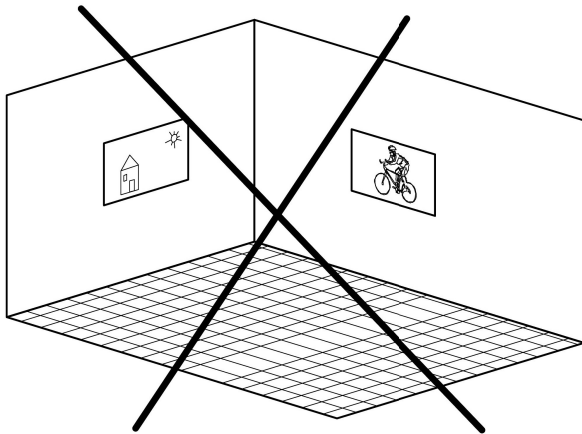


C1x2

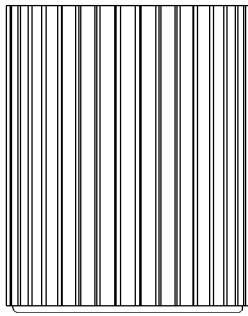


C2x2



C3x1




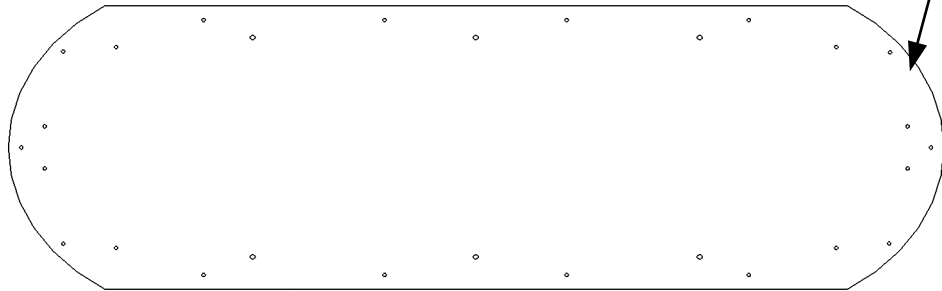



C4x1

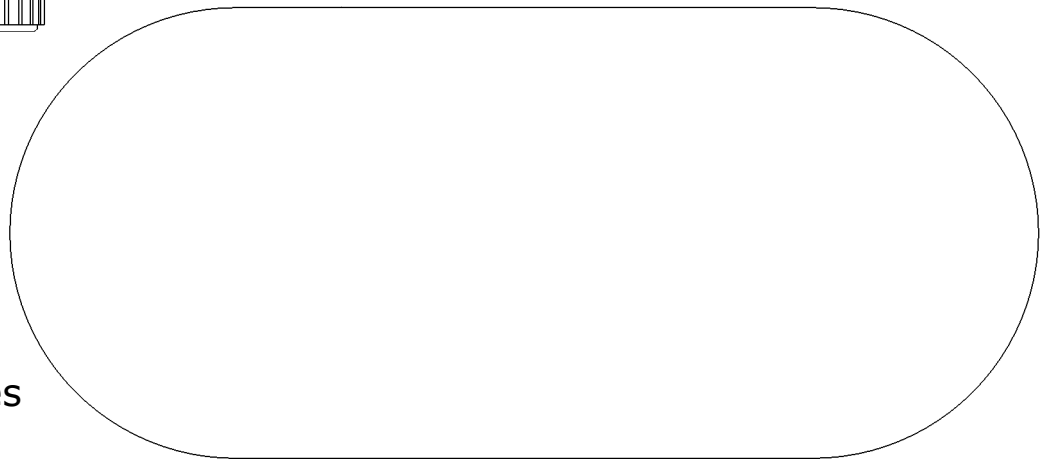

* Stone tops
have no drill holes



 A x 14 8 x 30mm	 F x 14 6 x 25mm	 T x 19	 E x 8 10x 50mm
 G x 4 15 x 12mm	 H x 4 M8x 2 mm	 I x 4 M8 x 16 mm	 J x 4 8 x 80mm
 K x 4 30 x 15mm	 D1 x 1 5	 D2 x 2	 D3 x 2
 D4 x 1	 D 5 x 1 4		







Cut out for top panel
positioning





D2




D3

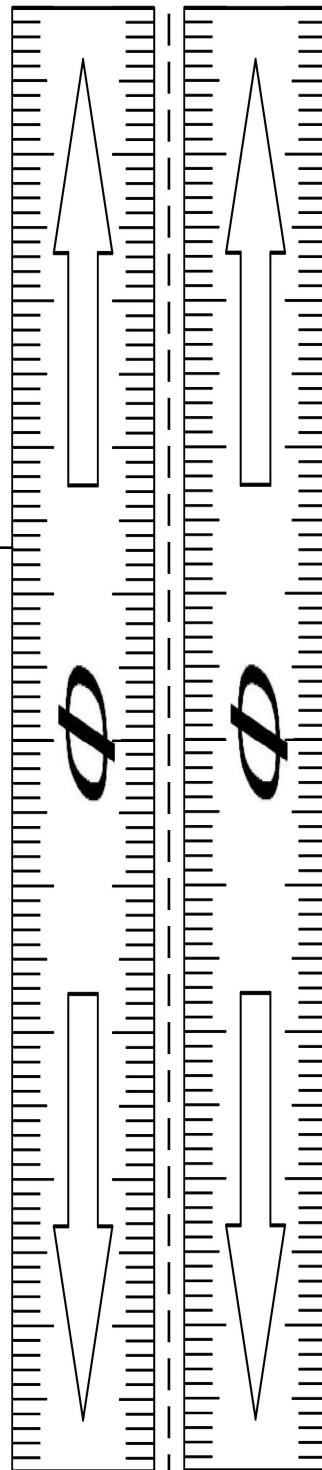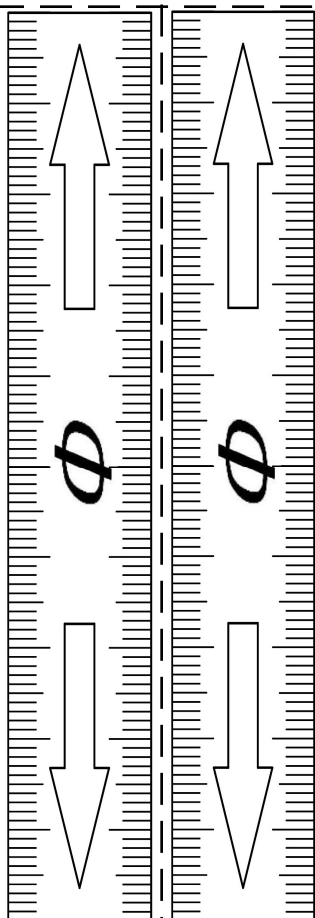


1	 J x 4 E x 8	
------------	--	---

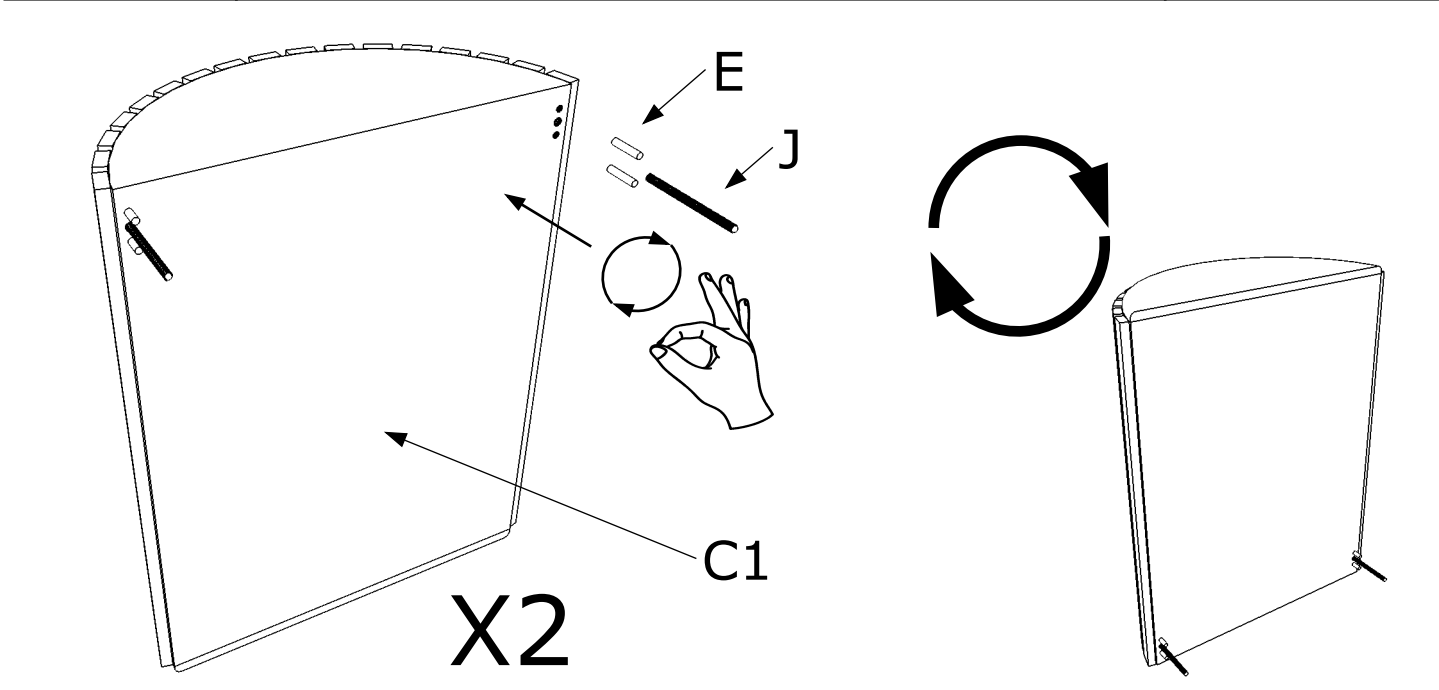


2	 G x 4 H x 4 I x 4 K x 4	
------------	--	---

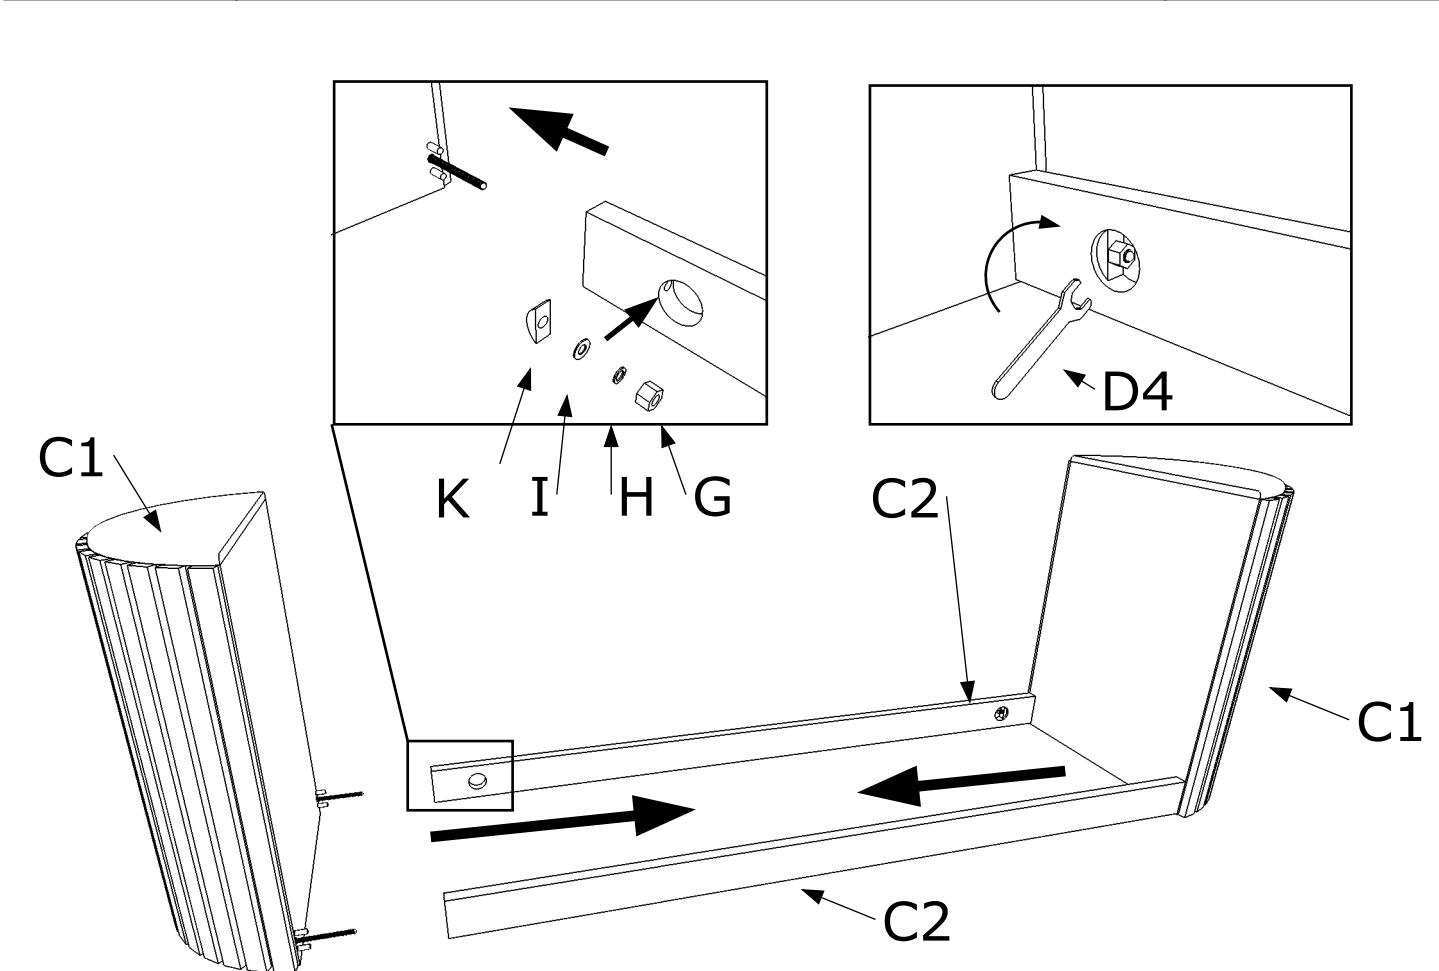




3	 A x 14	
---	---	---

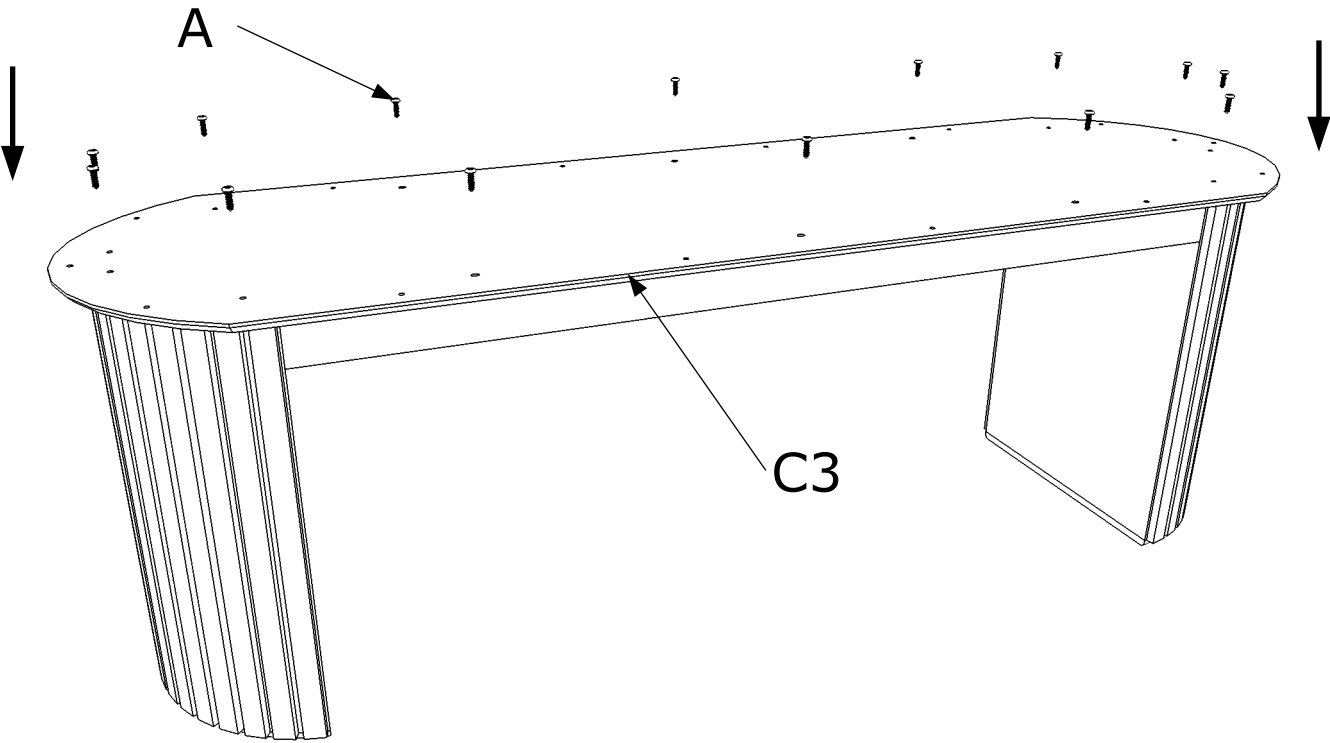

4	 T x 19	
---	---	--

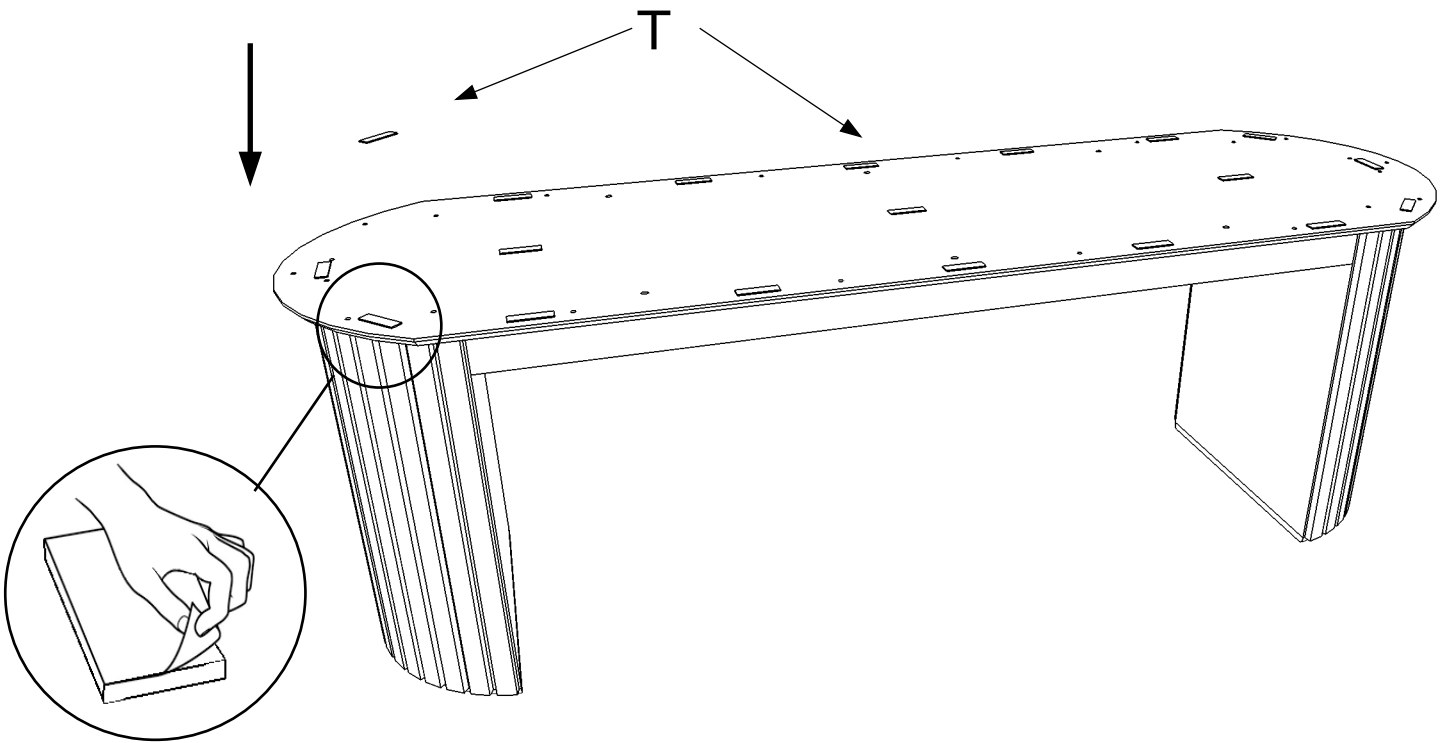

5	D2 x 2 D3 x 2	
---	---	--

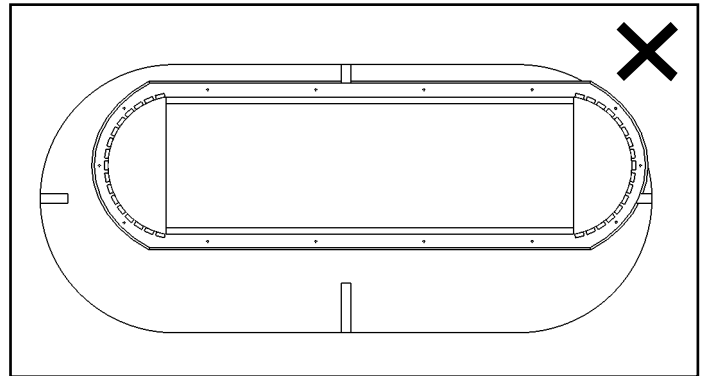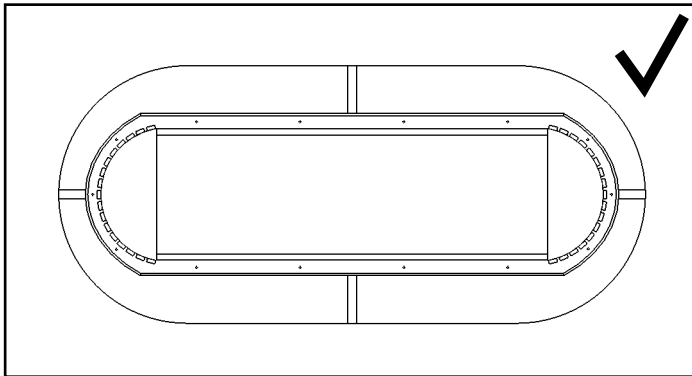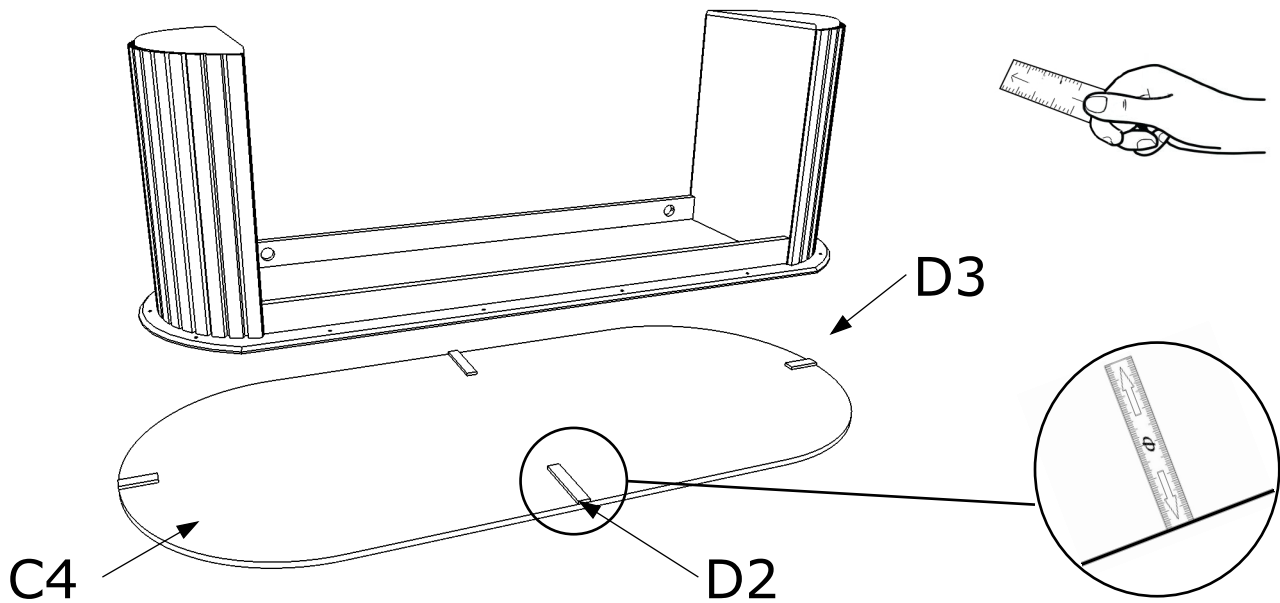

6	F x 14 * "F" bolts are not used for assembly of stone tops	
---	---	---

