




ASSEMBLY INSTRUCTION

# MALONE FLOOR MIRROR

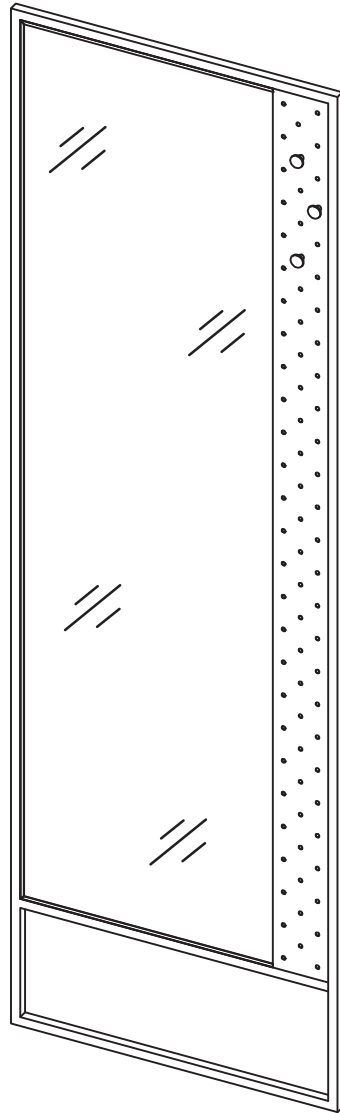


# ROWICO

H O M E

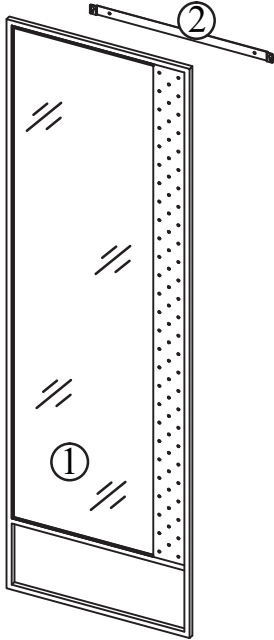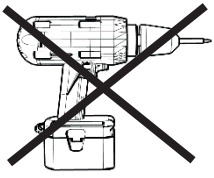


NO	PARTS	Q'TY
1		1
2		1
A		3
B	M4 x 10	3
C	M5 x 12	2
D		2
E		3

①

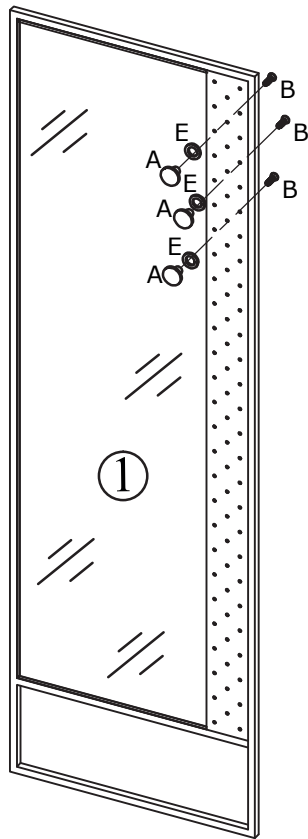

A		x3
B		M4x10 x3
E		x3


②

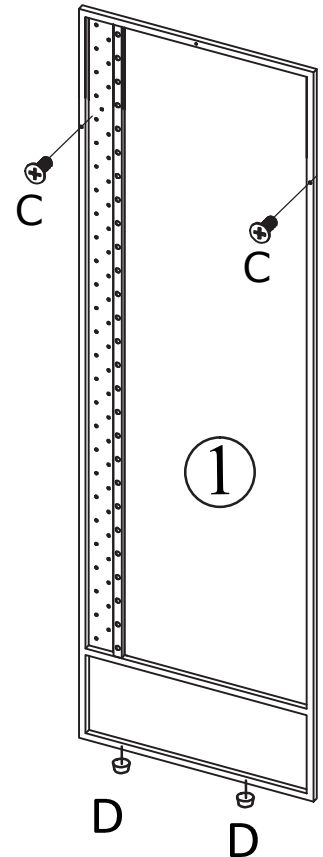

C		M5x12 x4
D		x2

③

Skrudar för väggmontering ingår ej  
Screws for wall attachment are not included

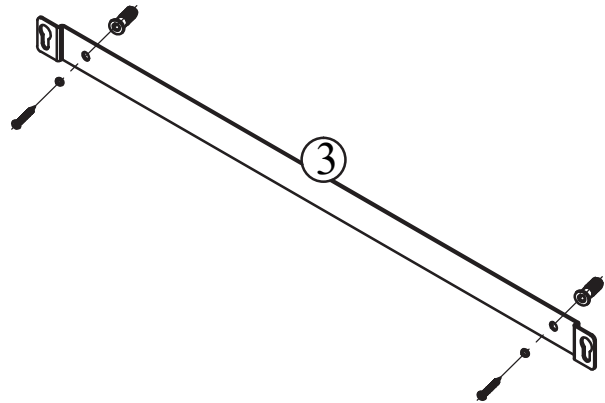

④

