



# LIANA WRAP ROD ASSEMBLY INSTRUCTION (120cm - 210cm)

## TOOL NEEDED

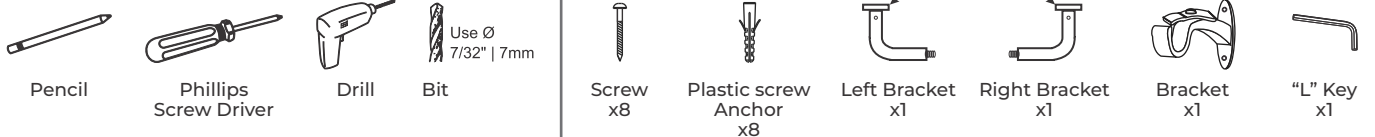


## INSTALLATION


### Step 1.

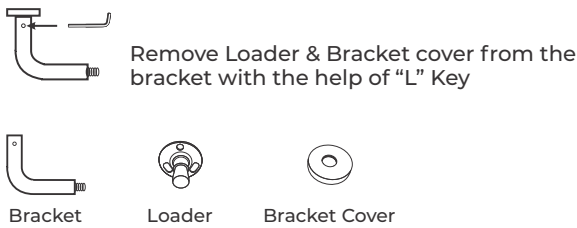


### Step 2.

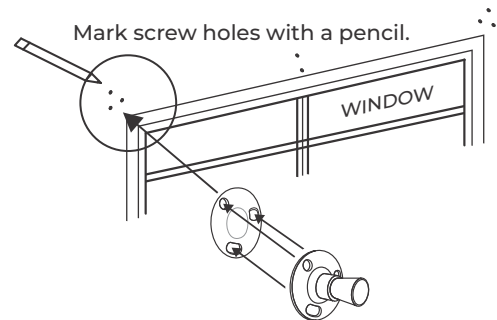


### Step 3.

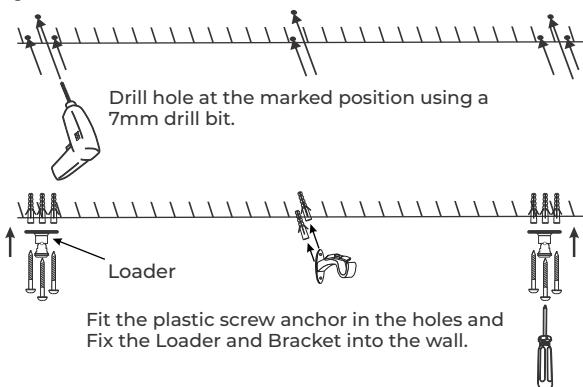


### Step 4.

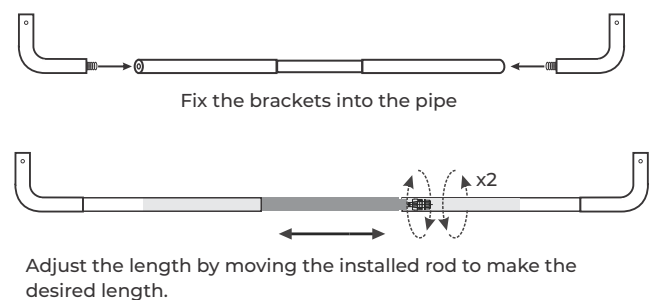

### Step 5.

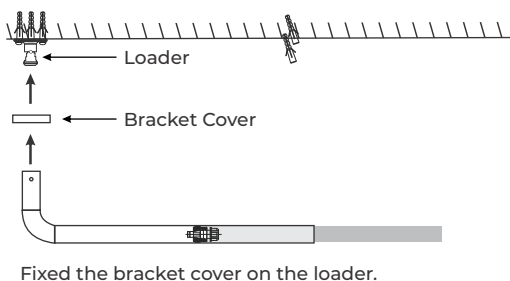

### Step 6.

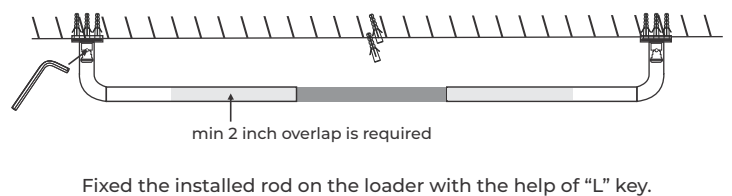

### Step 7.

