



UV2140403 COSMO NORA (SIDE BOARD) ASSEMBLY GUIDE

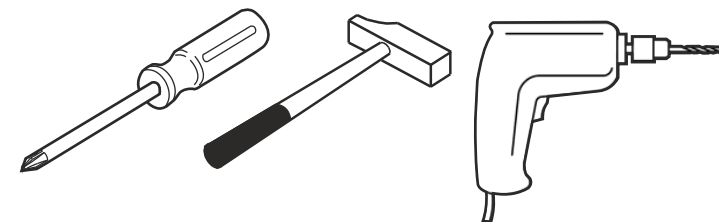

MINIFIKS SHAFT x 16

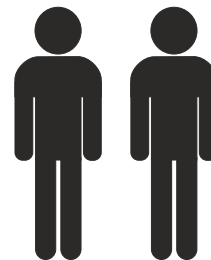


MINIFIKS HEAT x 16




DOWEL: x 16



PLASTIC PIN x 8

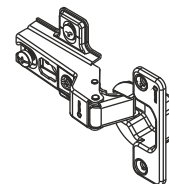


HALF CAMEL HINGE x 2

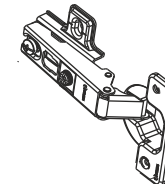

HINGE x 4



HOLDER x 3



HOLDER SCREW x 6



4x18 CHIPBOARD
SCREW x 36



PULLING SCREW x 12



CORNER WEDGE x 12



FOOT SEAL x 8




H PROFILE x 1





FOOT x 1





* FIX THE ACCESORIES AS SHOWN FOLLOW THE
INSTALLATION SEQUENCE WHILE INSTALLING THE PRODUCT .


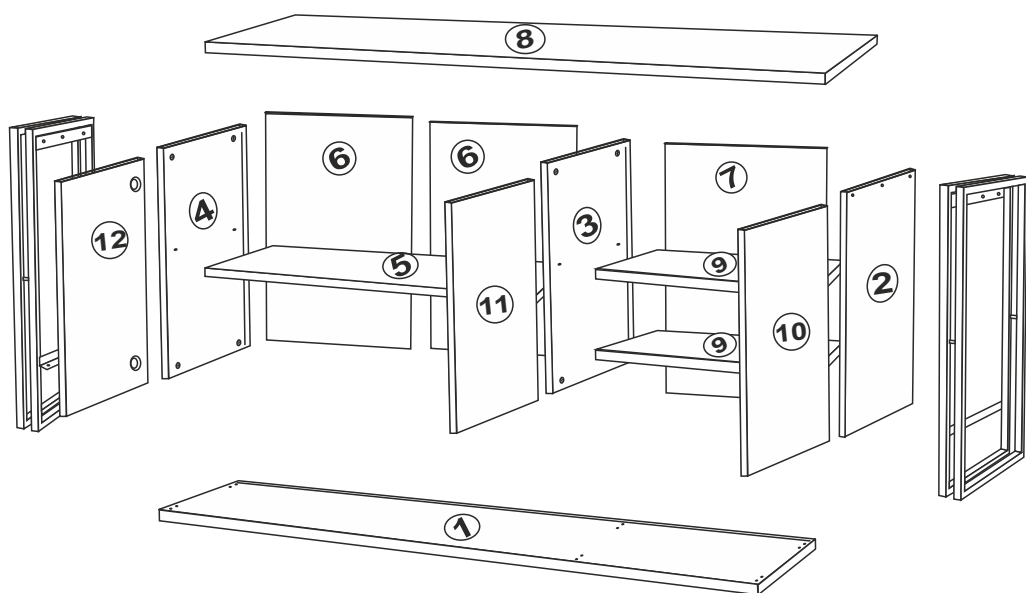



2

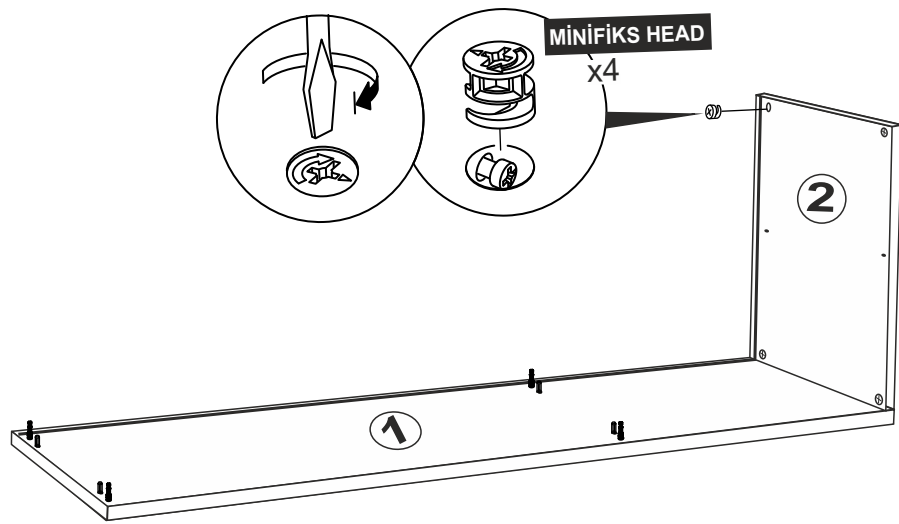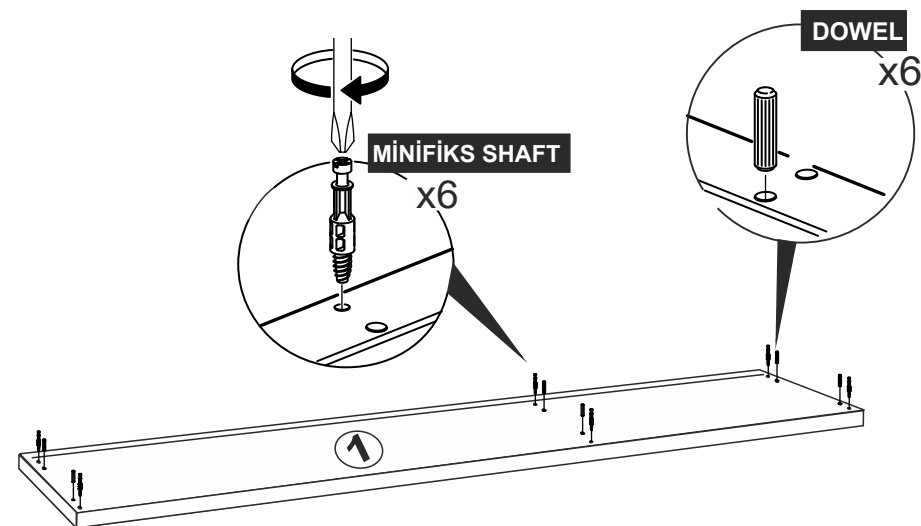


3

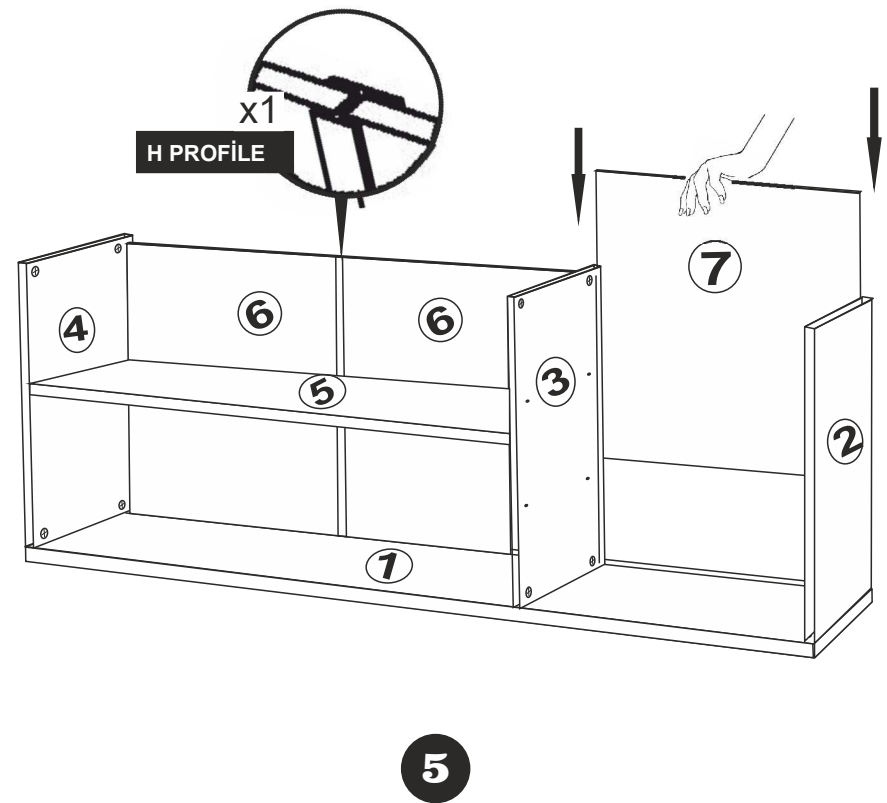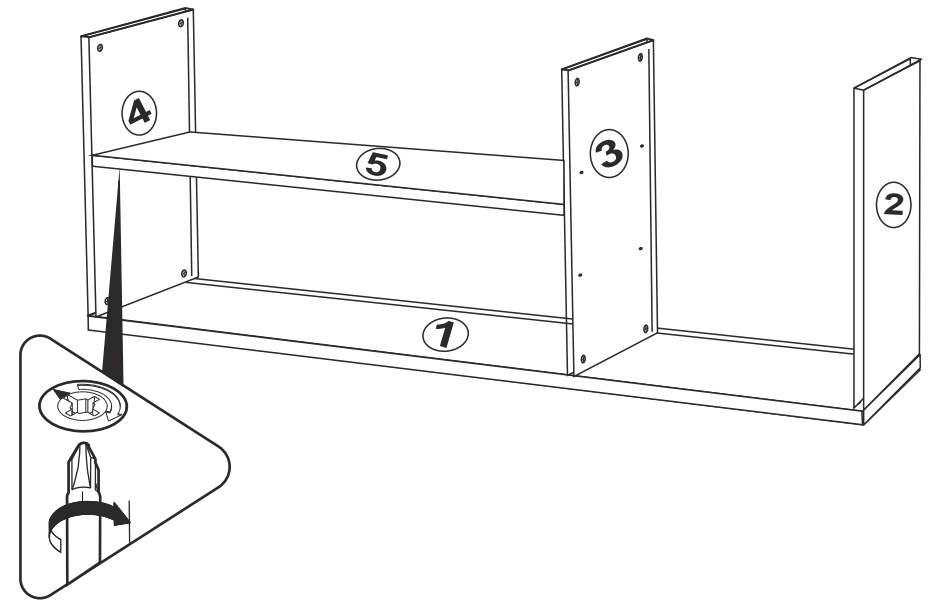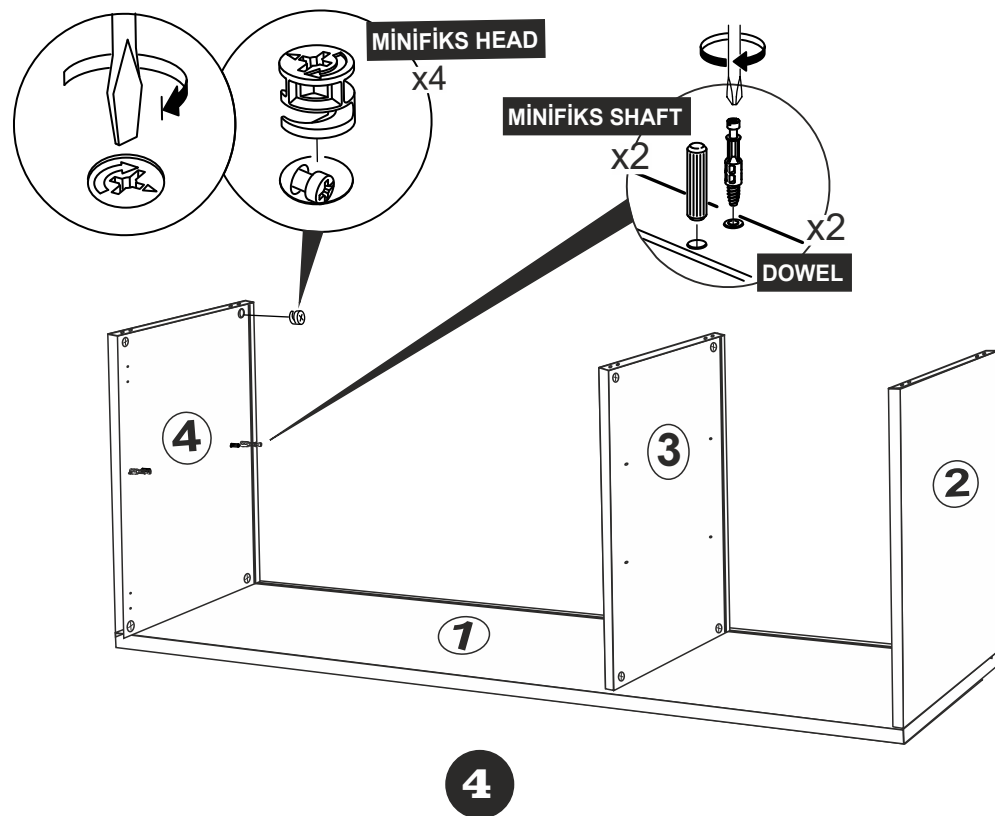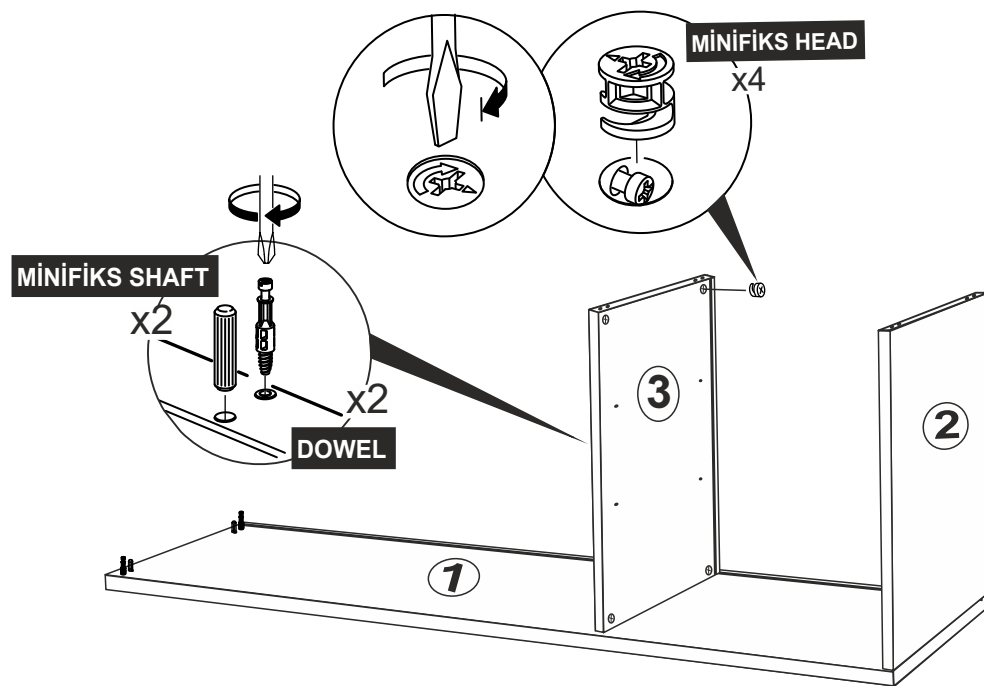

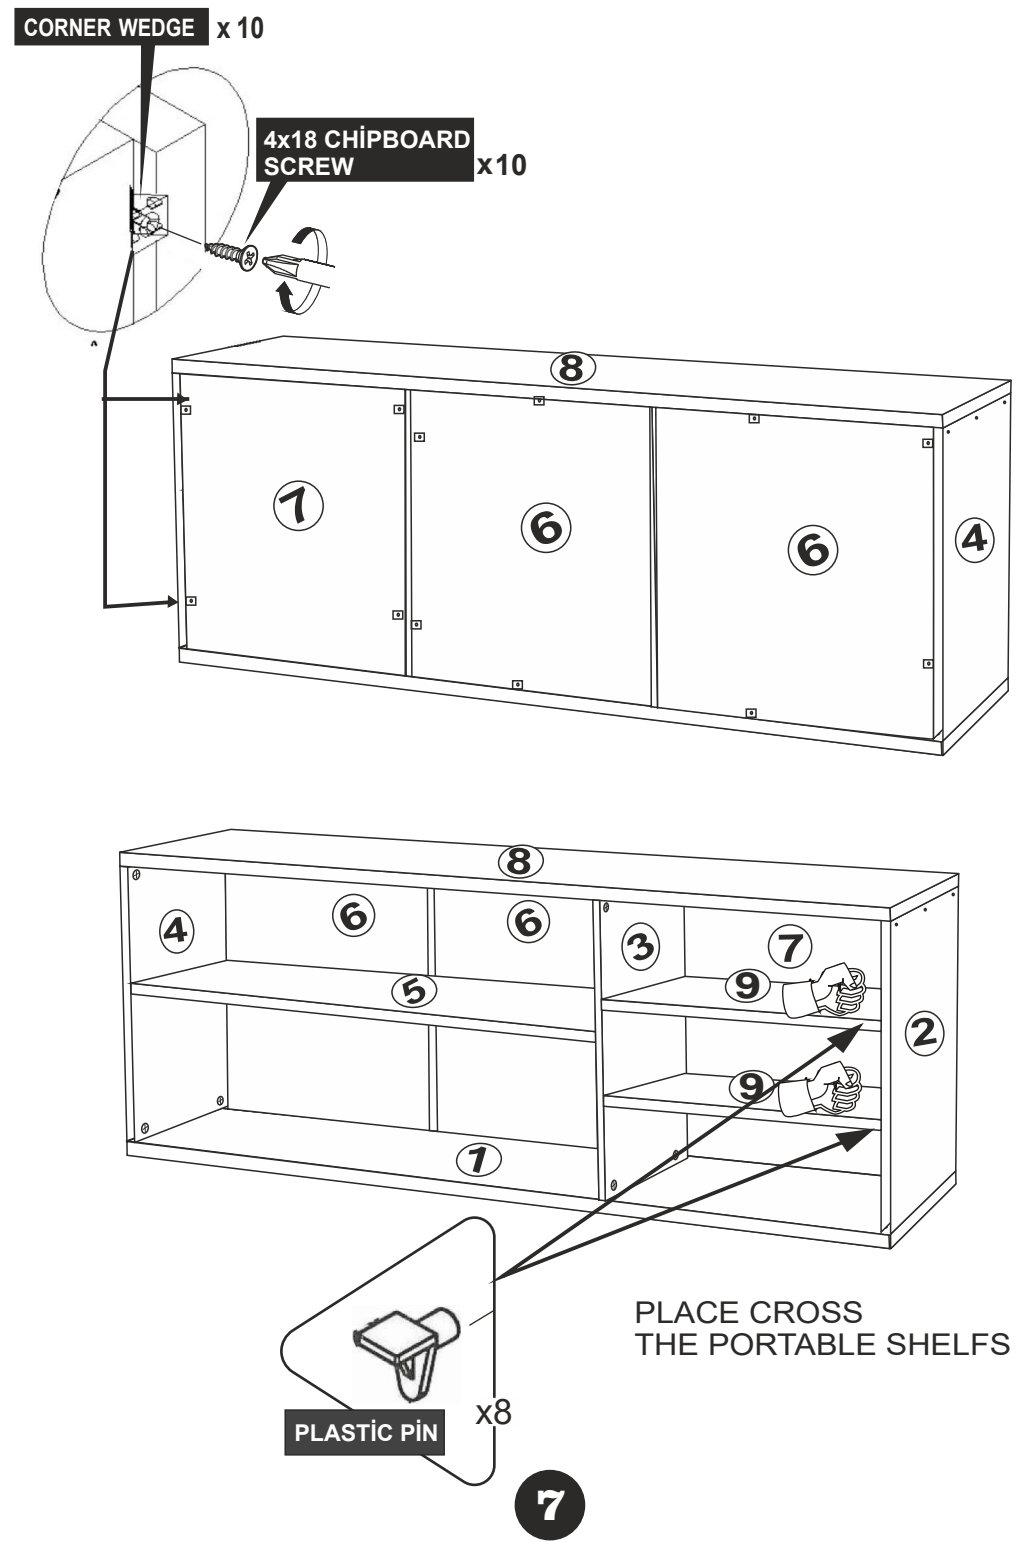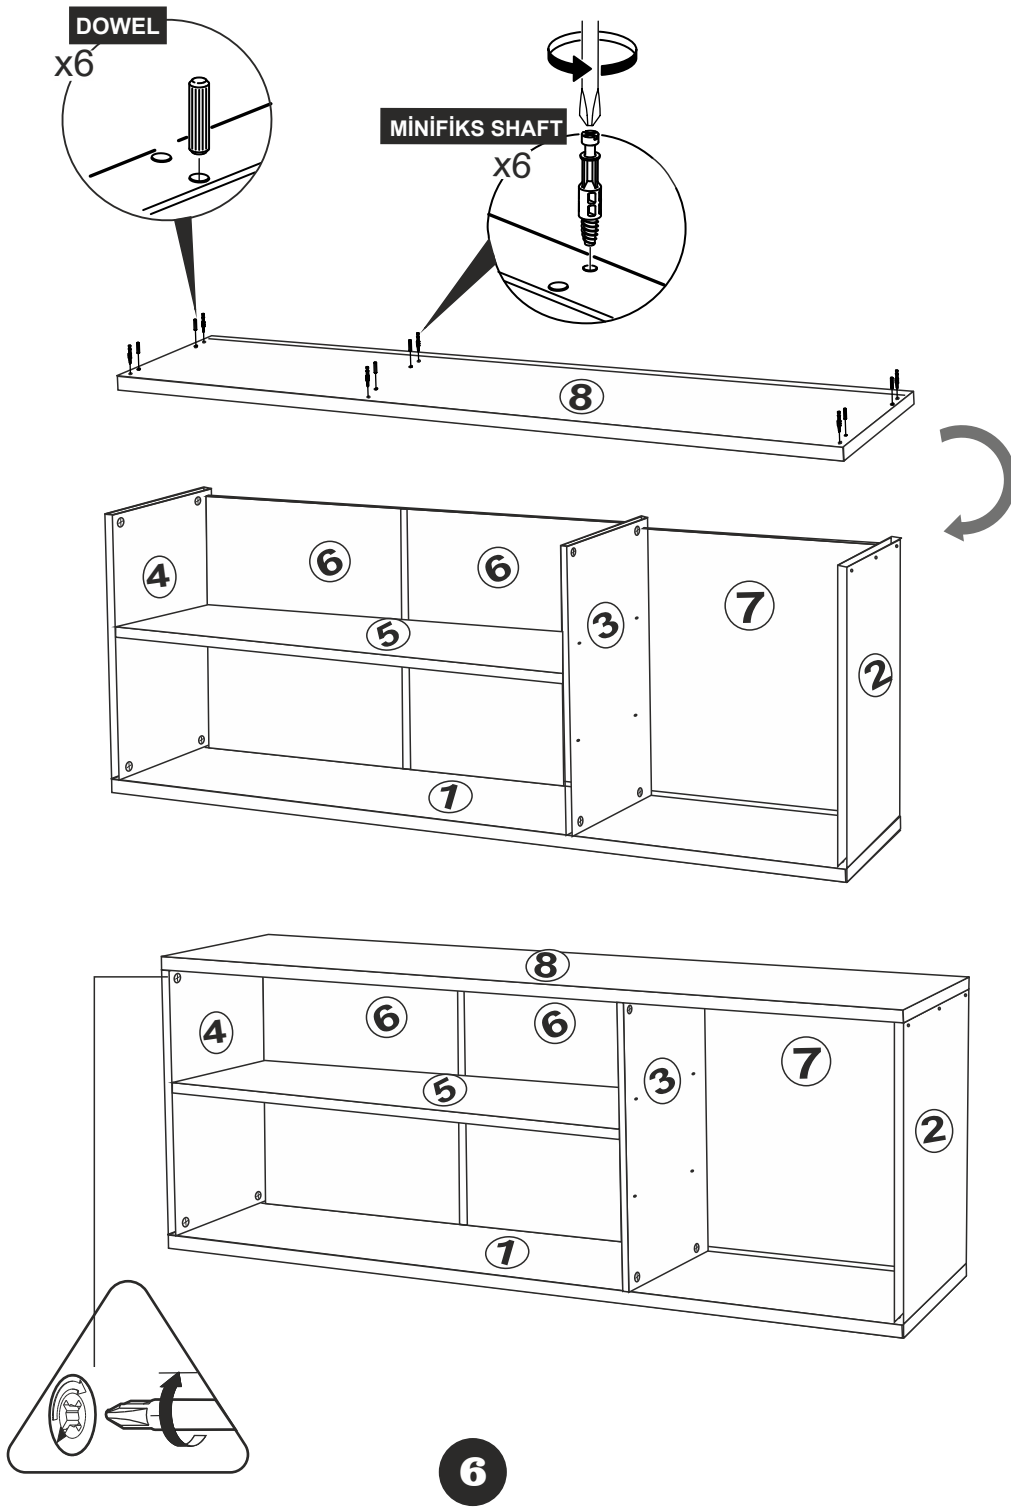

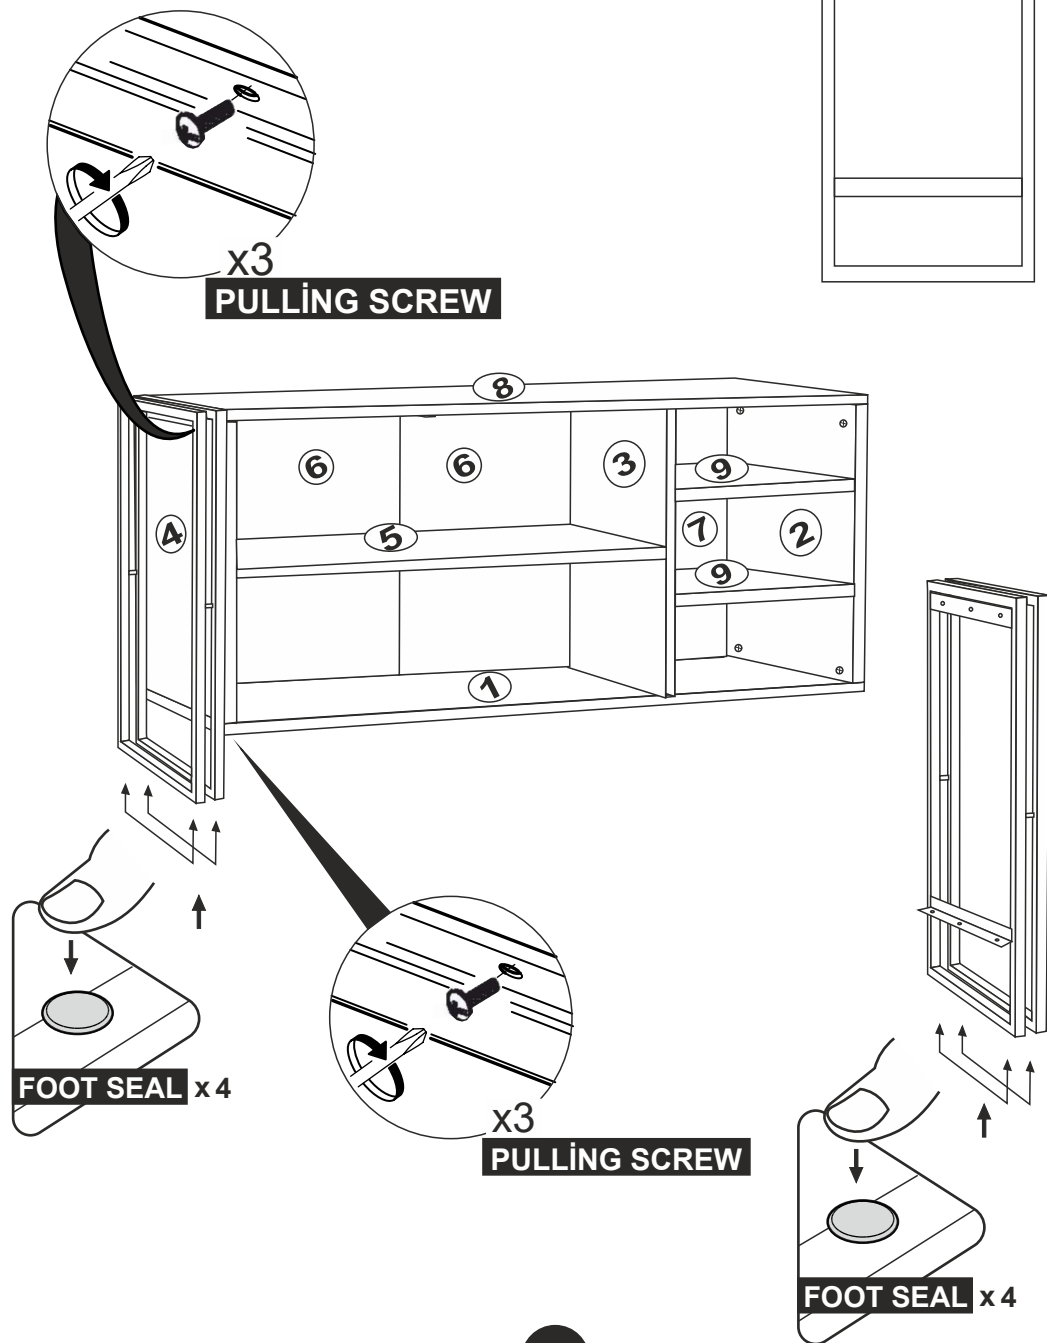

8

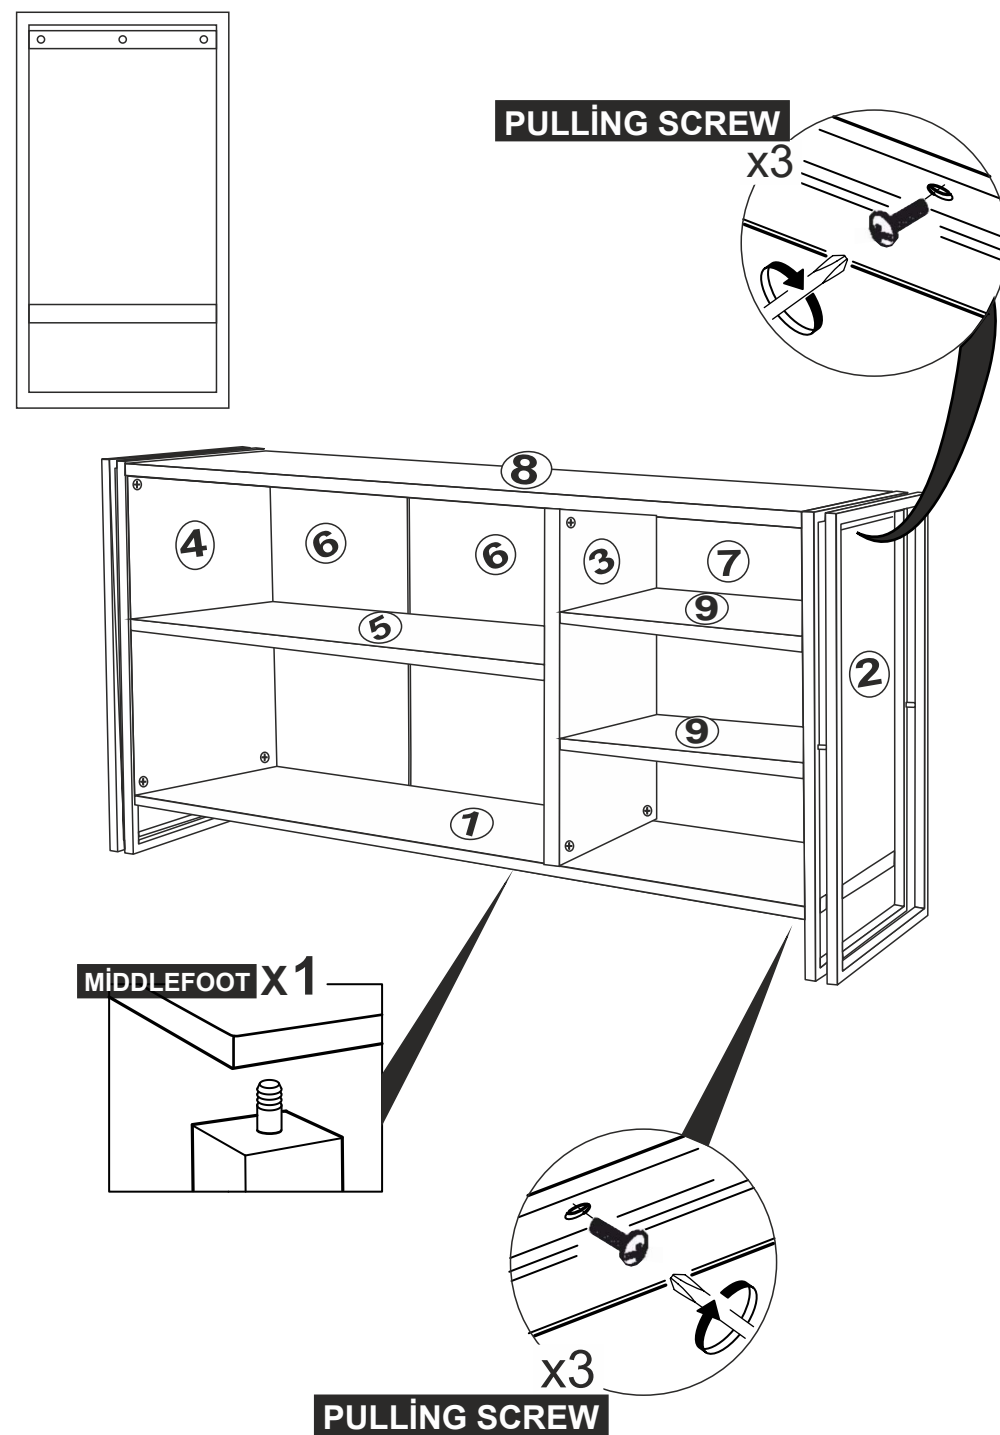

9

