


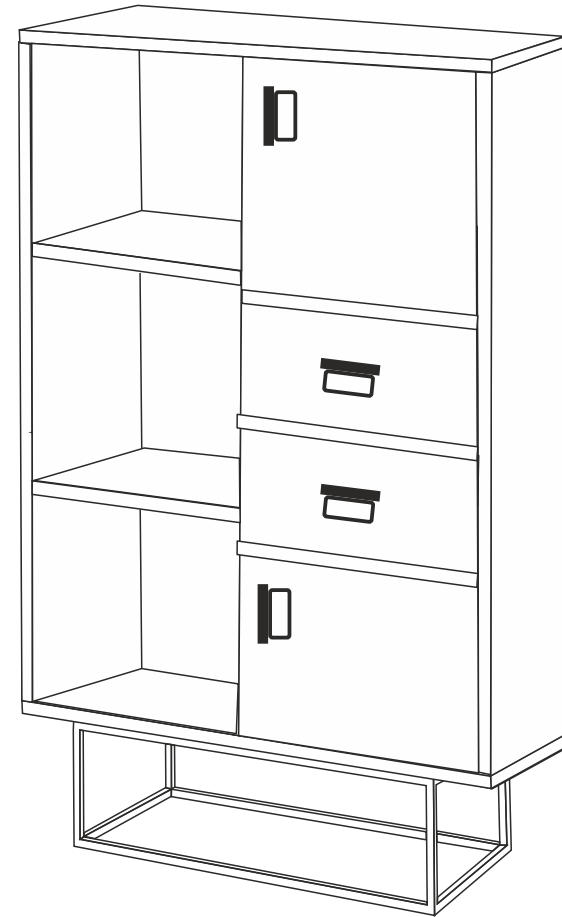
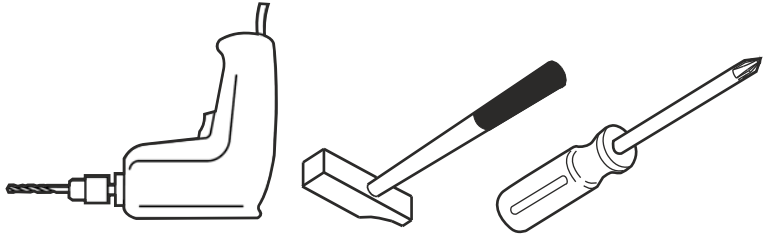
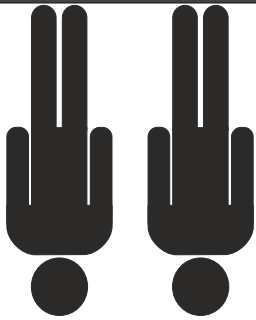
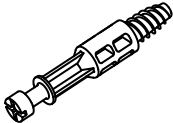










UV2550403
QUANTUM TAXON (SIDE BOARD)
ASSEMBLY GUIDE

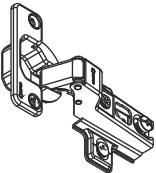



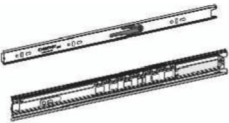
															
															
															
															

* FIX THE ACCESSORIES AS SHOWN FOLLOW THE INSTALLATION SEQUENCE WHILE INSTALLING THE PRODUCT .

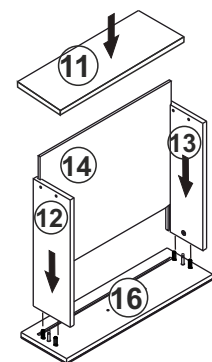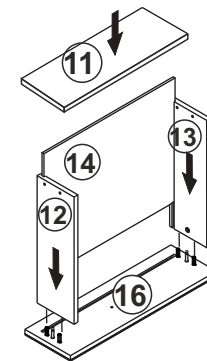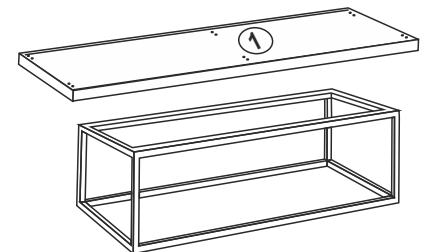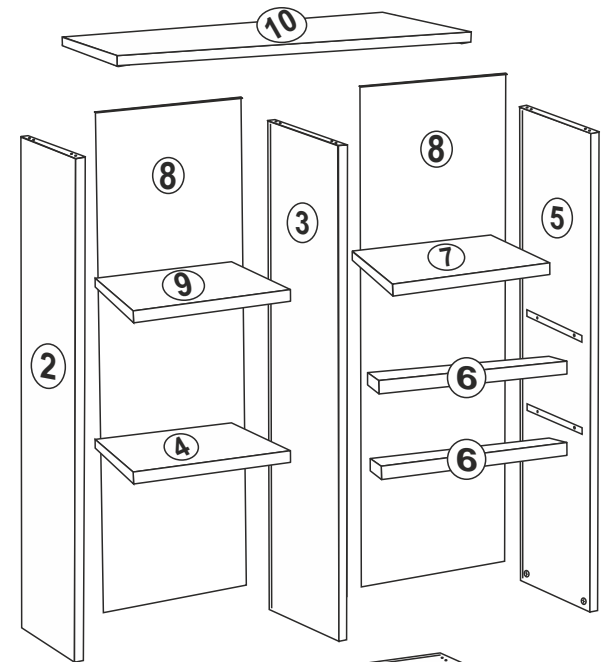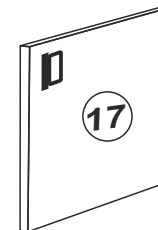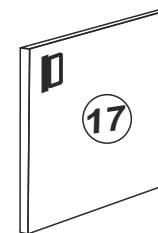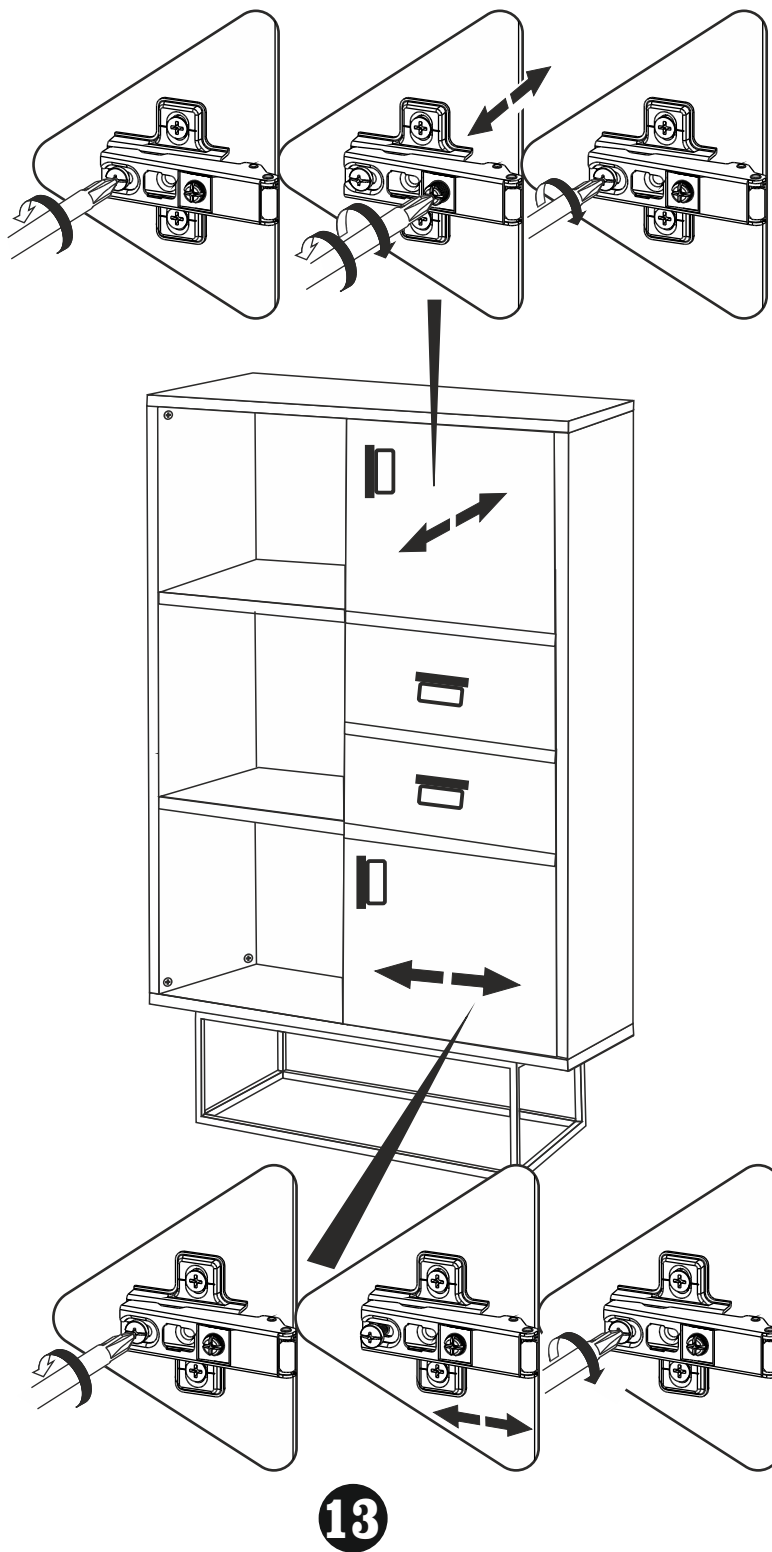




2

3

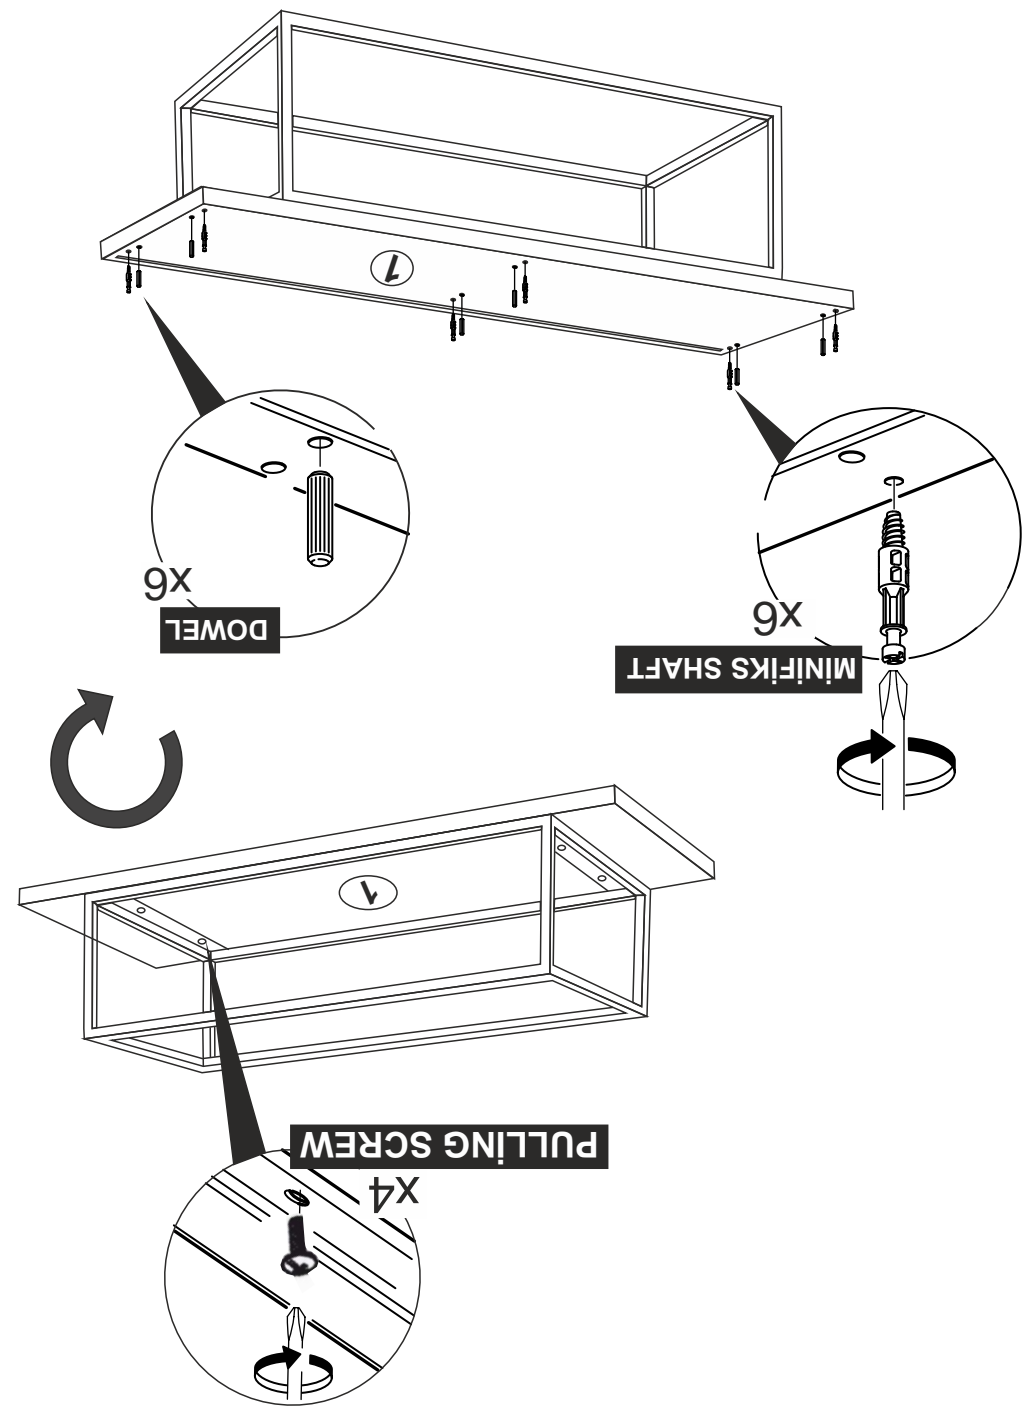





12

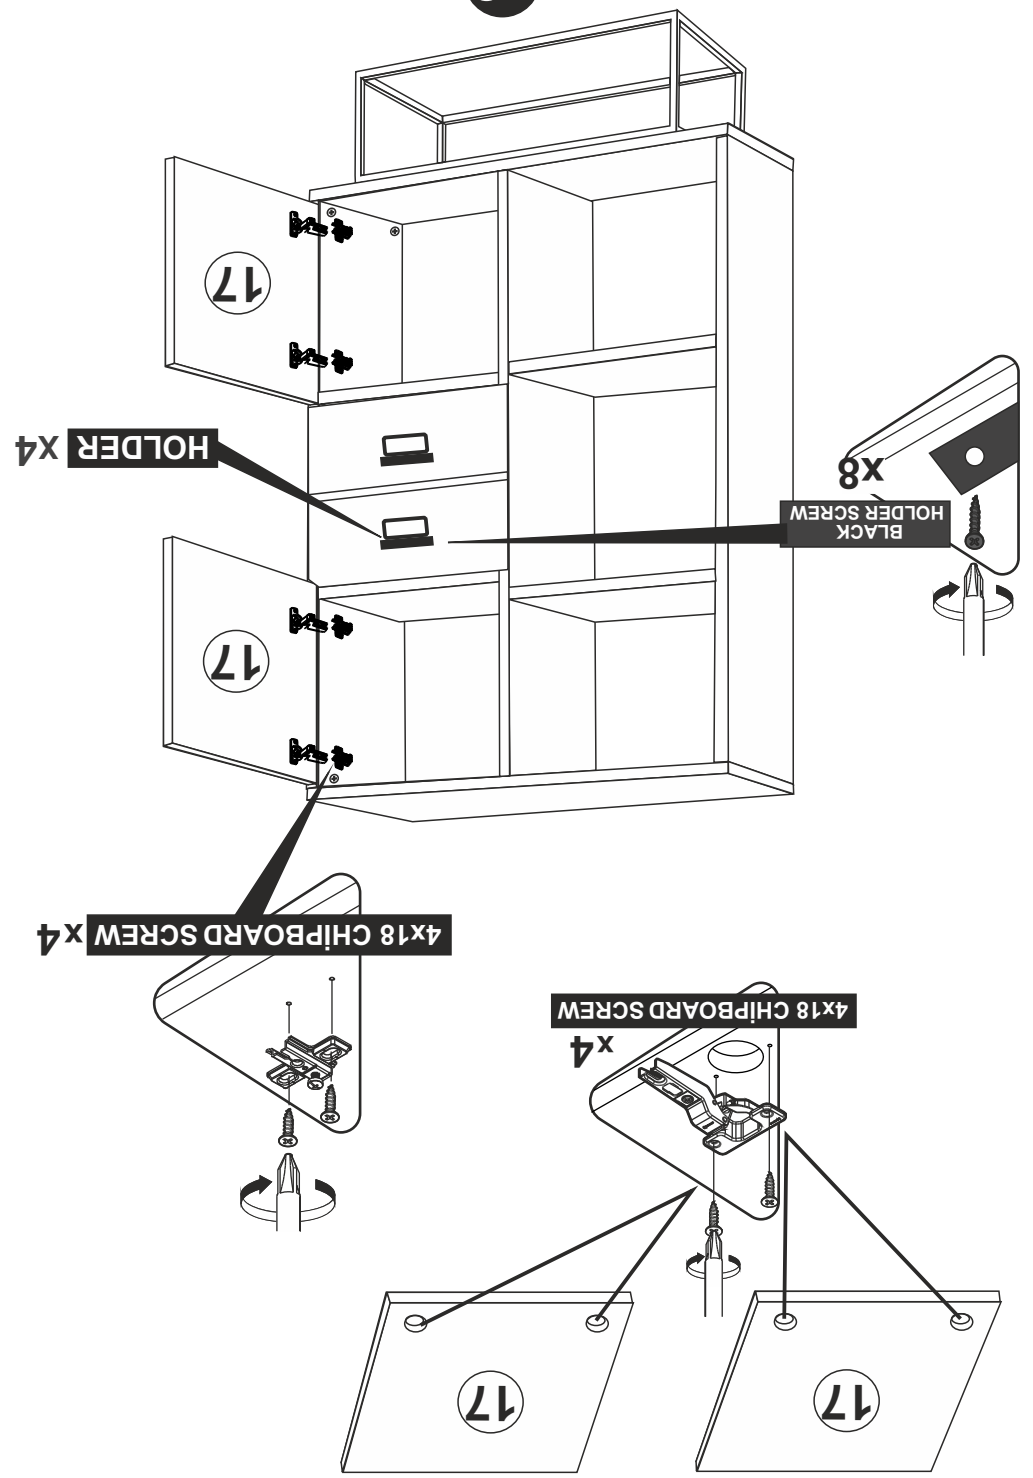

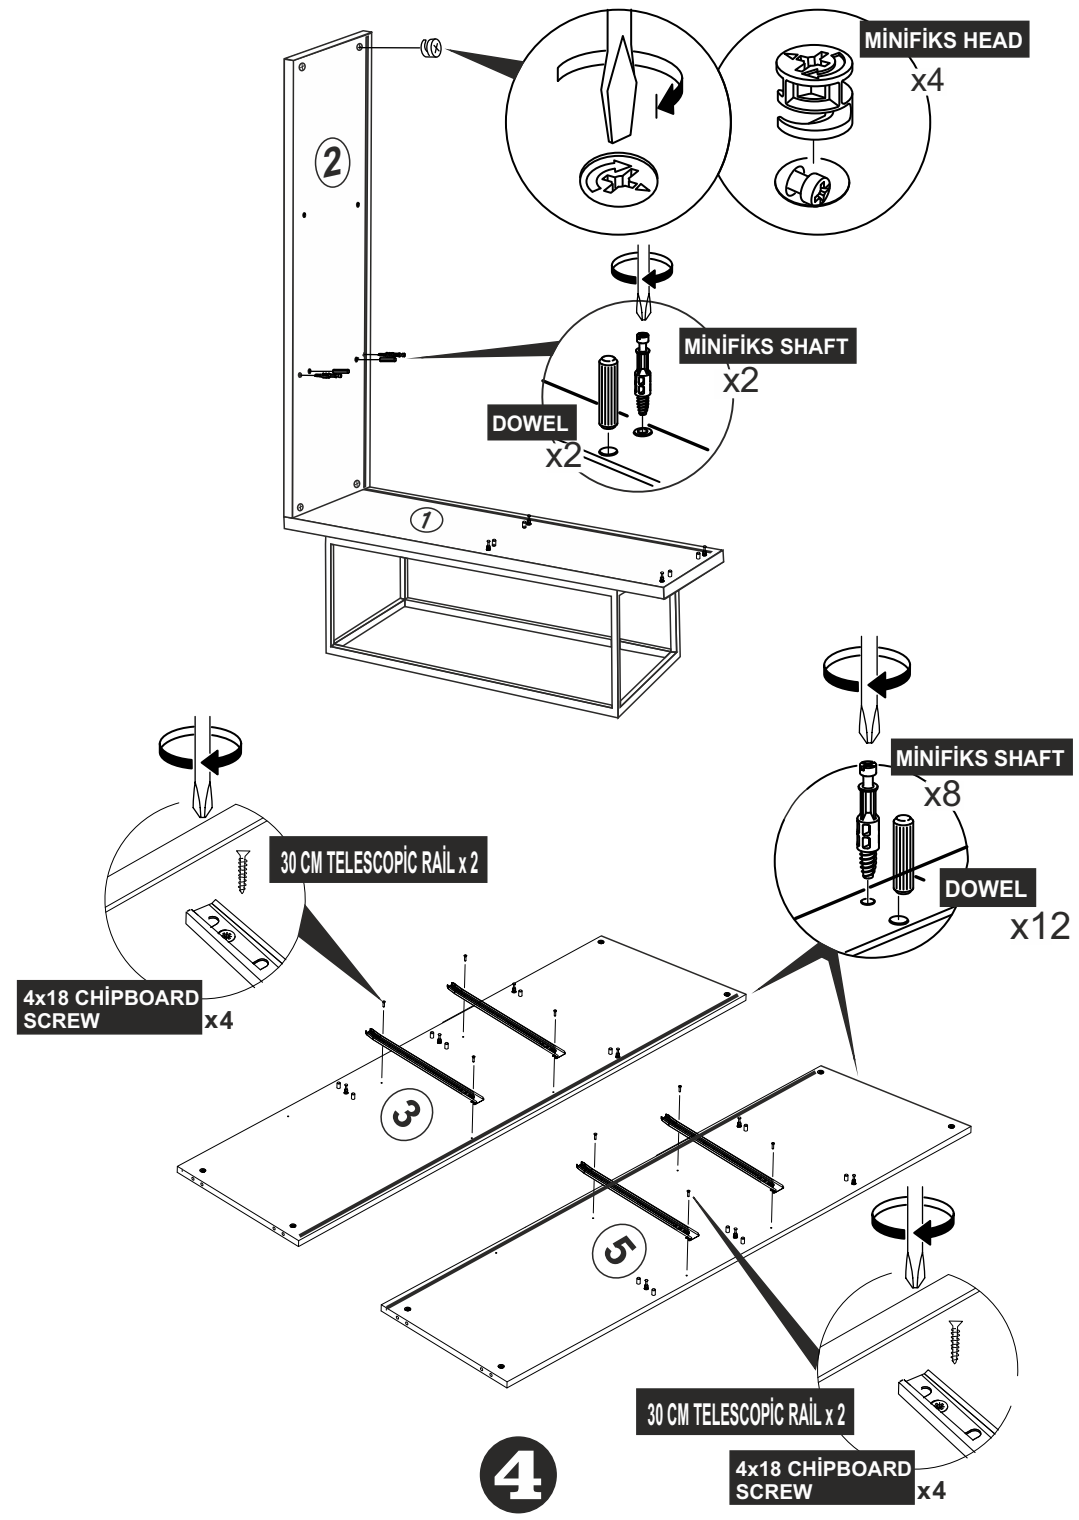
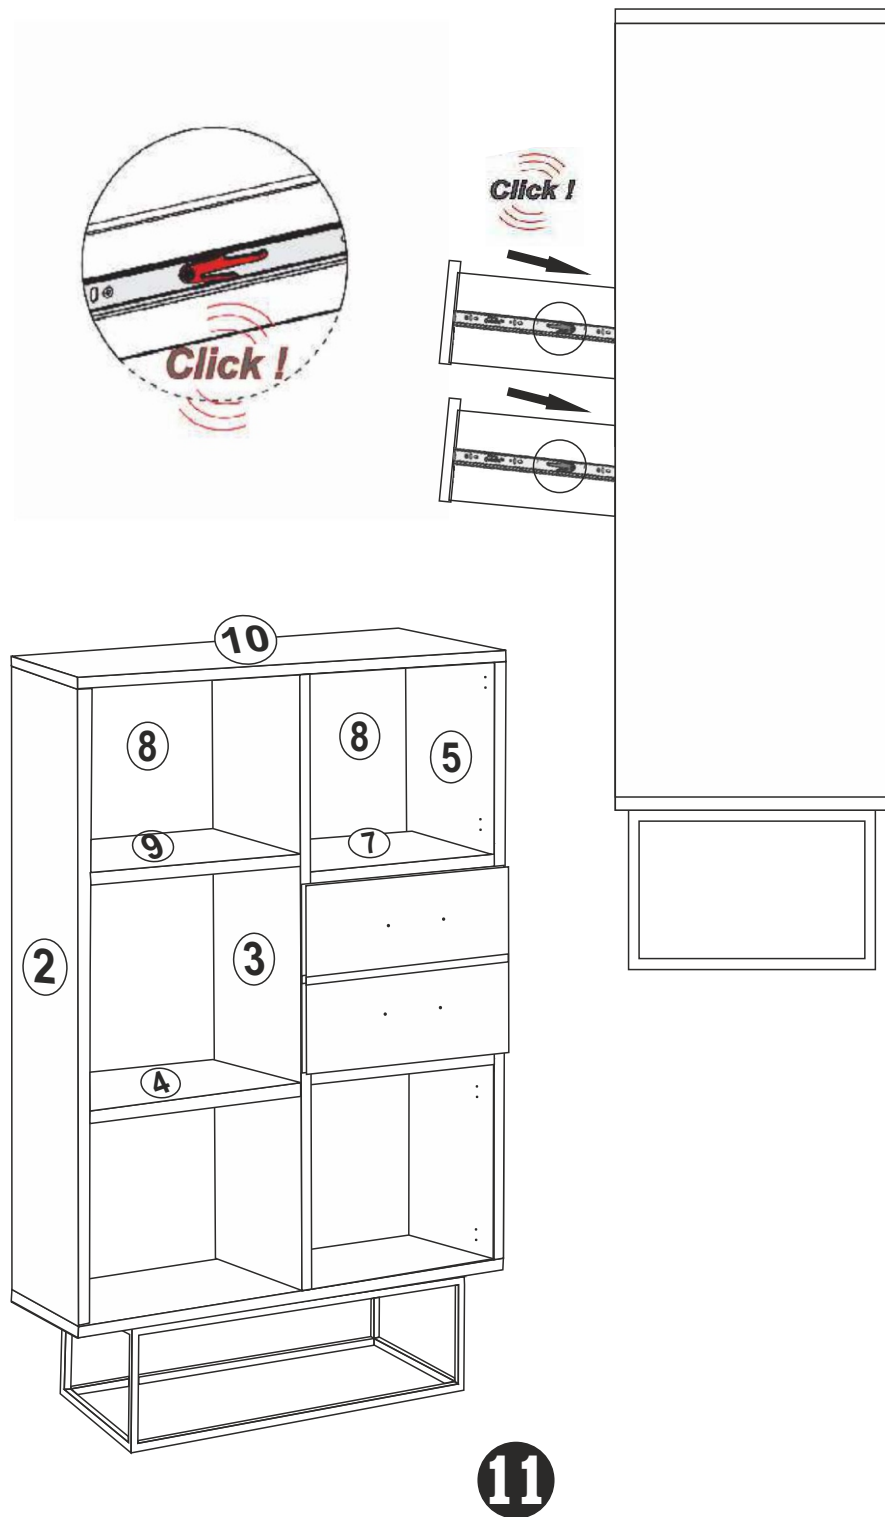


CORNER WEDGE X 8


4x18 CHIPBOARD SCREW X 8

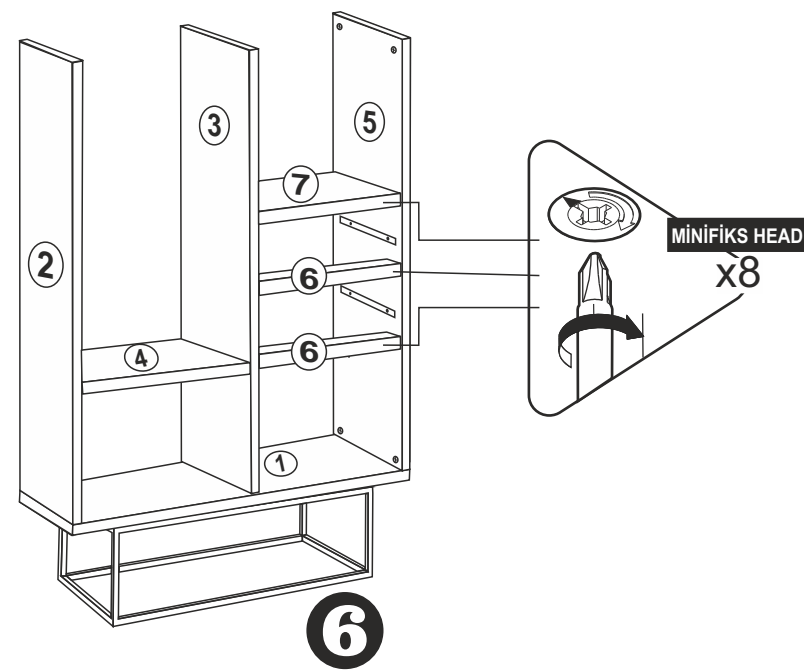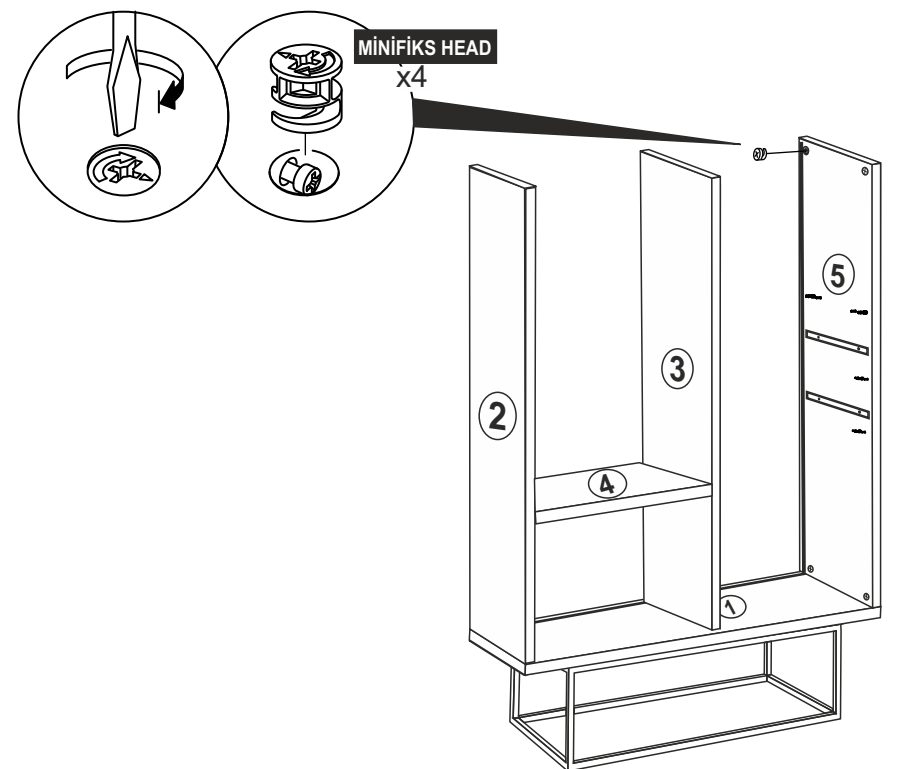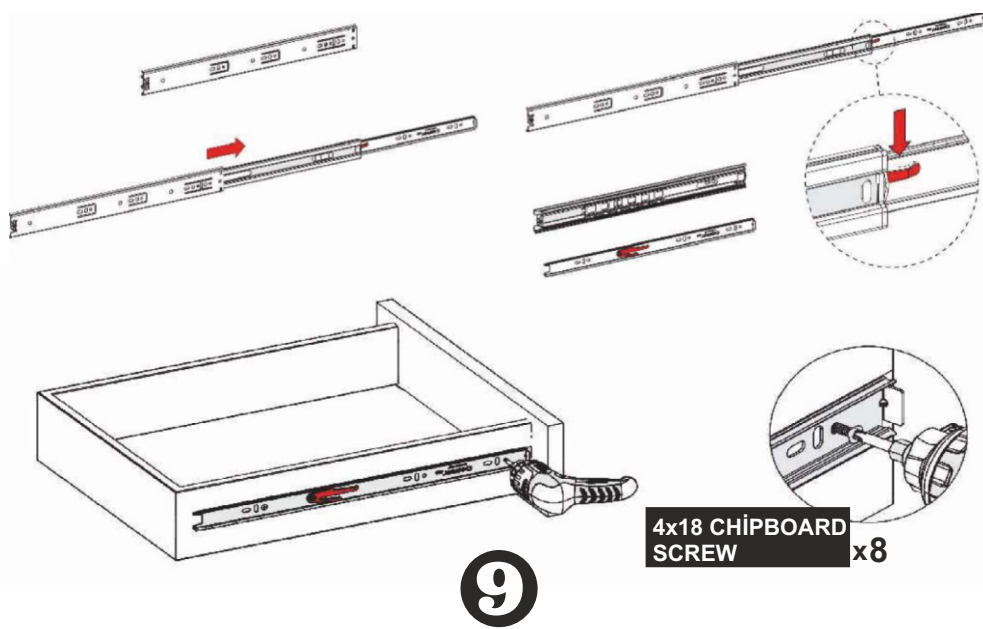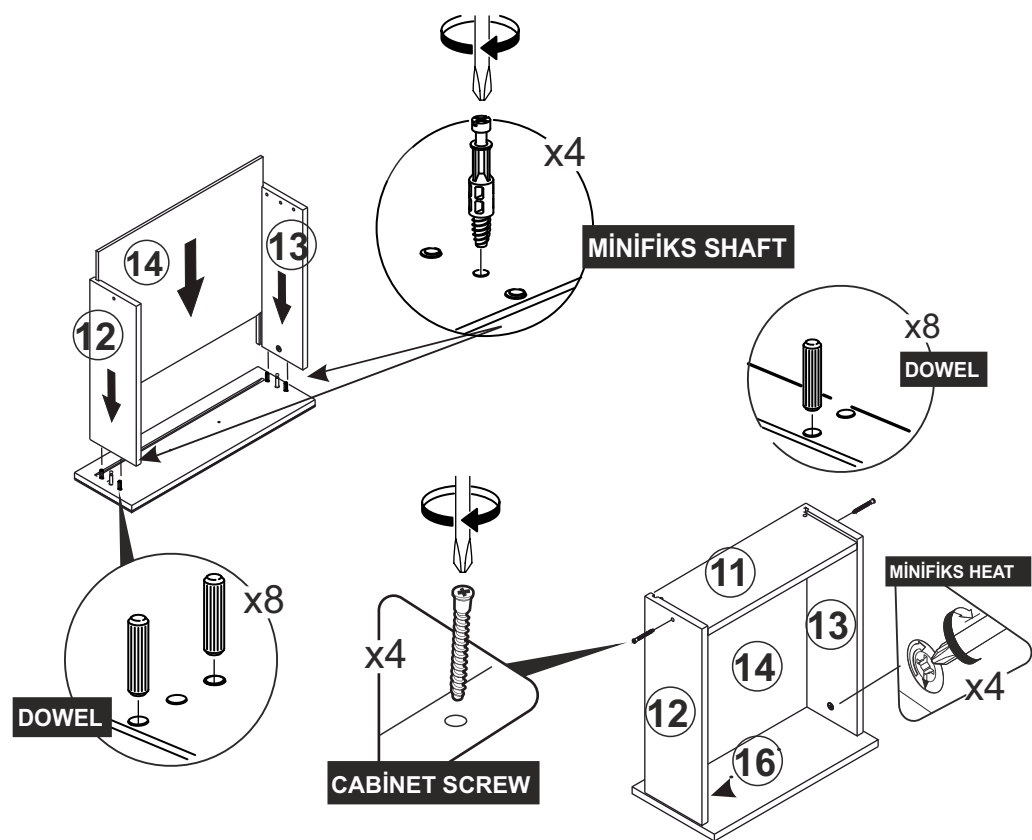

2

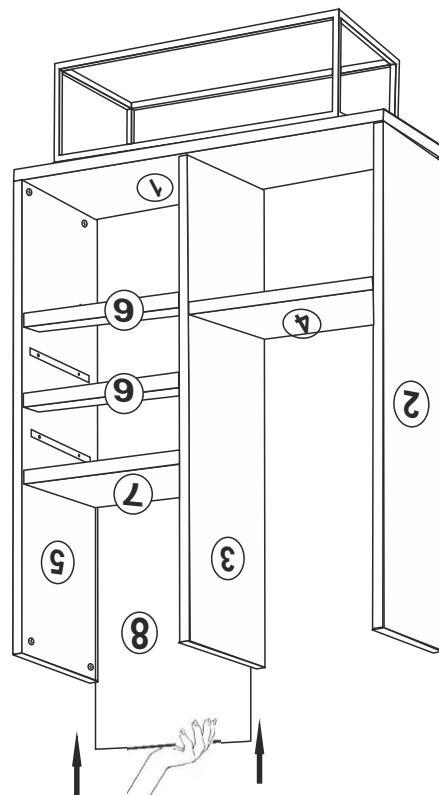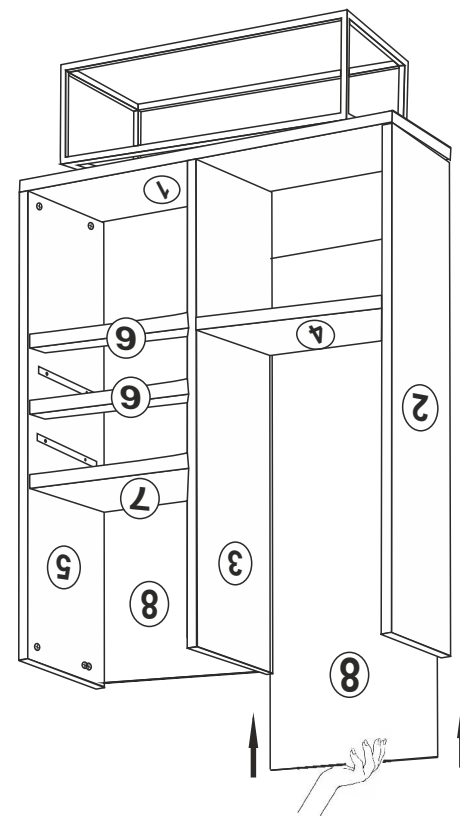

8

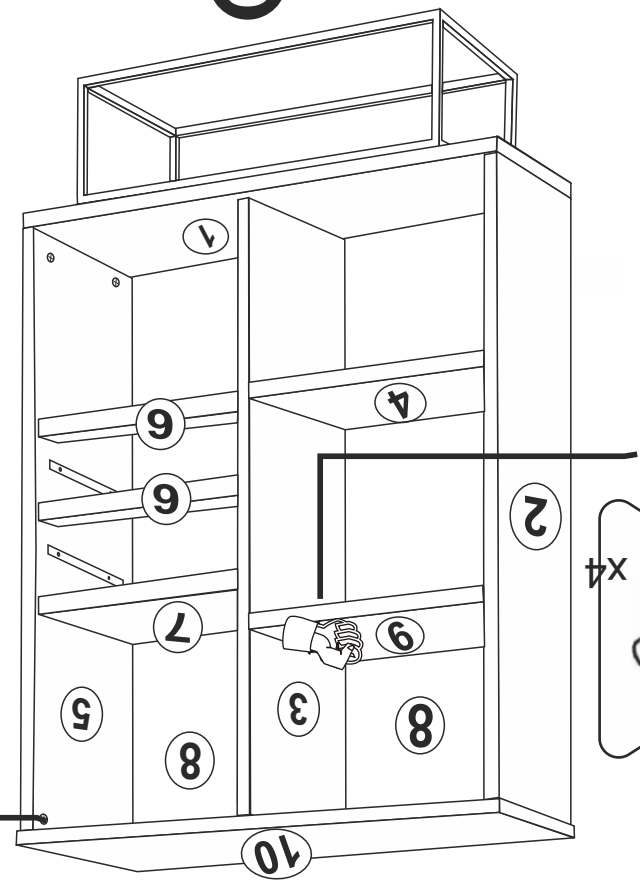


PLACE CROSS THE PORTABLE SHELF..

PLASTIC PIN X4



DOWEL X6

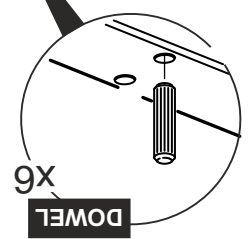

MINIFIX SHAFT X6

