

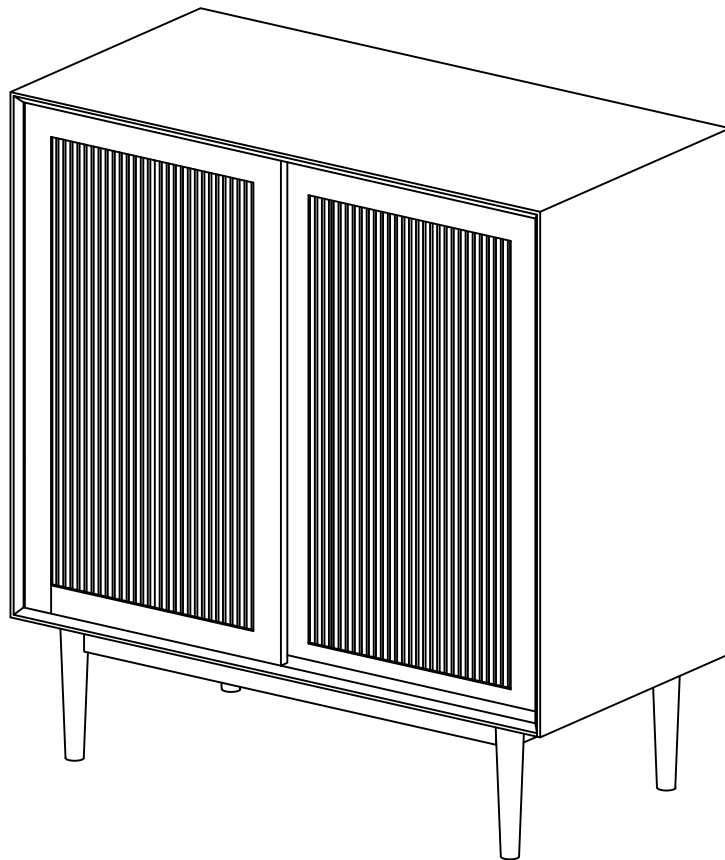


ASSEMBLY INSTRUCTIONS

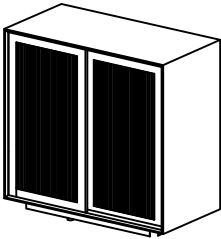

1665177-01




Component List

Label	Picture	Description	Qty
A		Cabinet	1
B		Leg	4

Hardware List




Label	Picture	Description	Qty
H1		Allen Bolt M6x60 mm	4
H2		Flat Washer M8x16 mm	4


Tool List

Label	Picture	Description	Qty
T1		Allen Key 4 mm	1

Assembly Prep

Before Beginning:


- * Save all packaging until finished. 
- *Read Instructions, cover to cover. 
- *Have 2 adults on hand for assembly. 

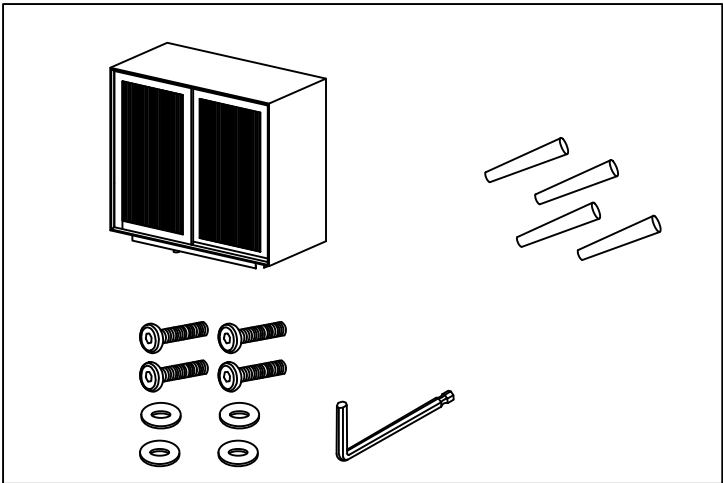




Assembly Steps

Careful : Extremely heavy product.

Step 1

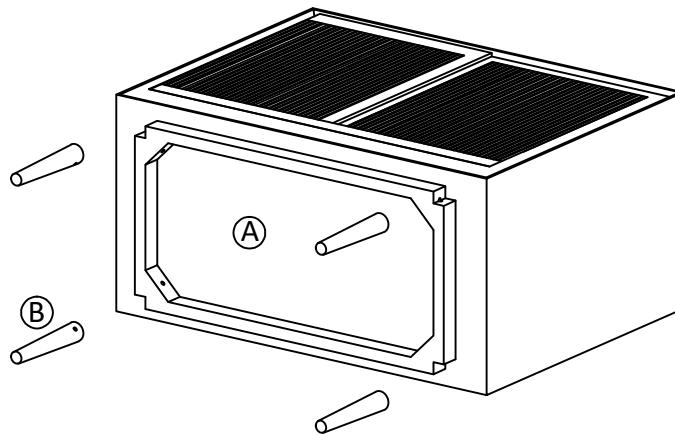

Step 2

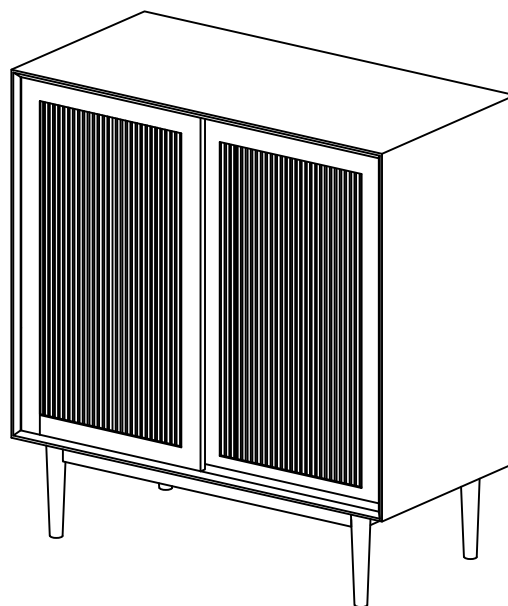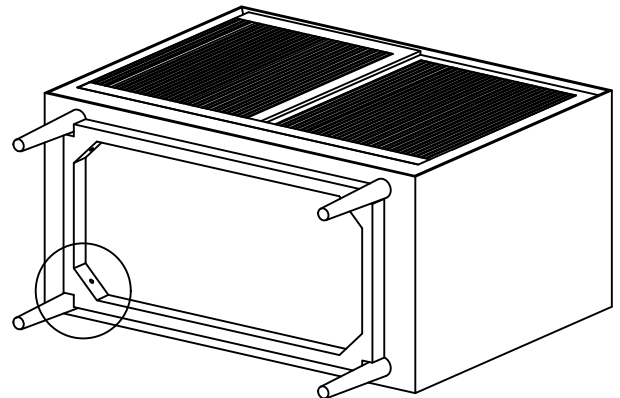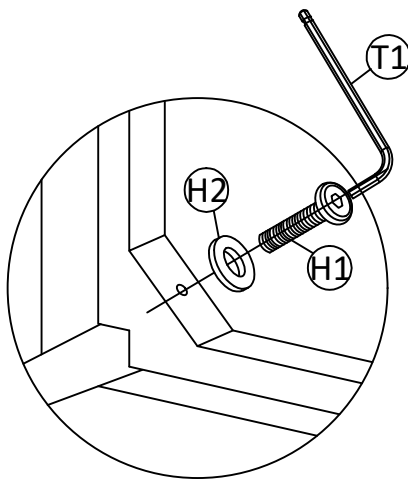

Place Cabinet (A) upside down on a non-damaging padded surface. Place Leg (B) with corner of frame on bottom of Cabinet (A) ensuring holes on the leg frame (A) are aligned with the holes of leg (B). Secure all connections using 1 Allen Bolt (H1) and 1 Washer (H2) on leg as shown above. Fully tighten all connections using Allen Key (T1).