


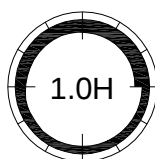
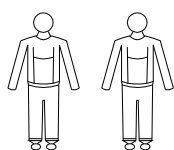
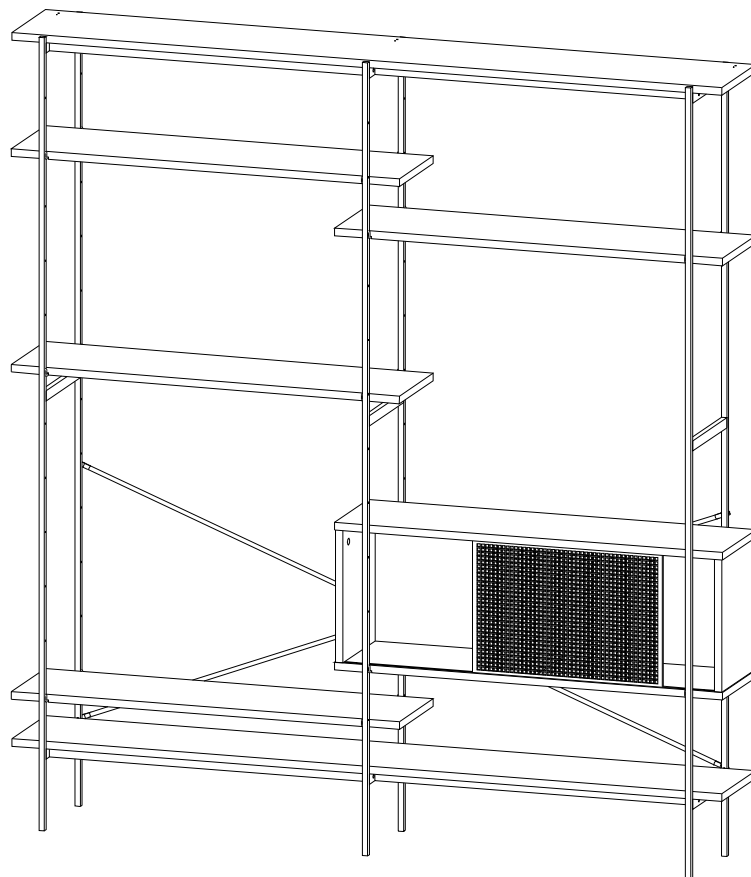
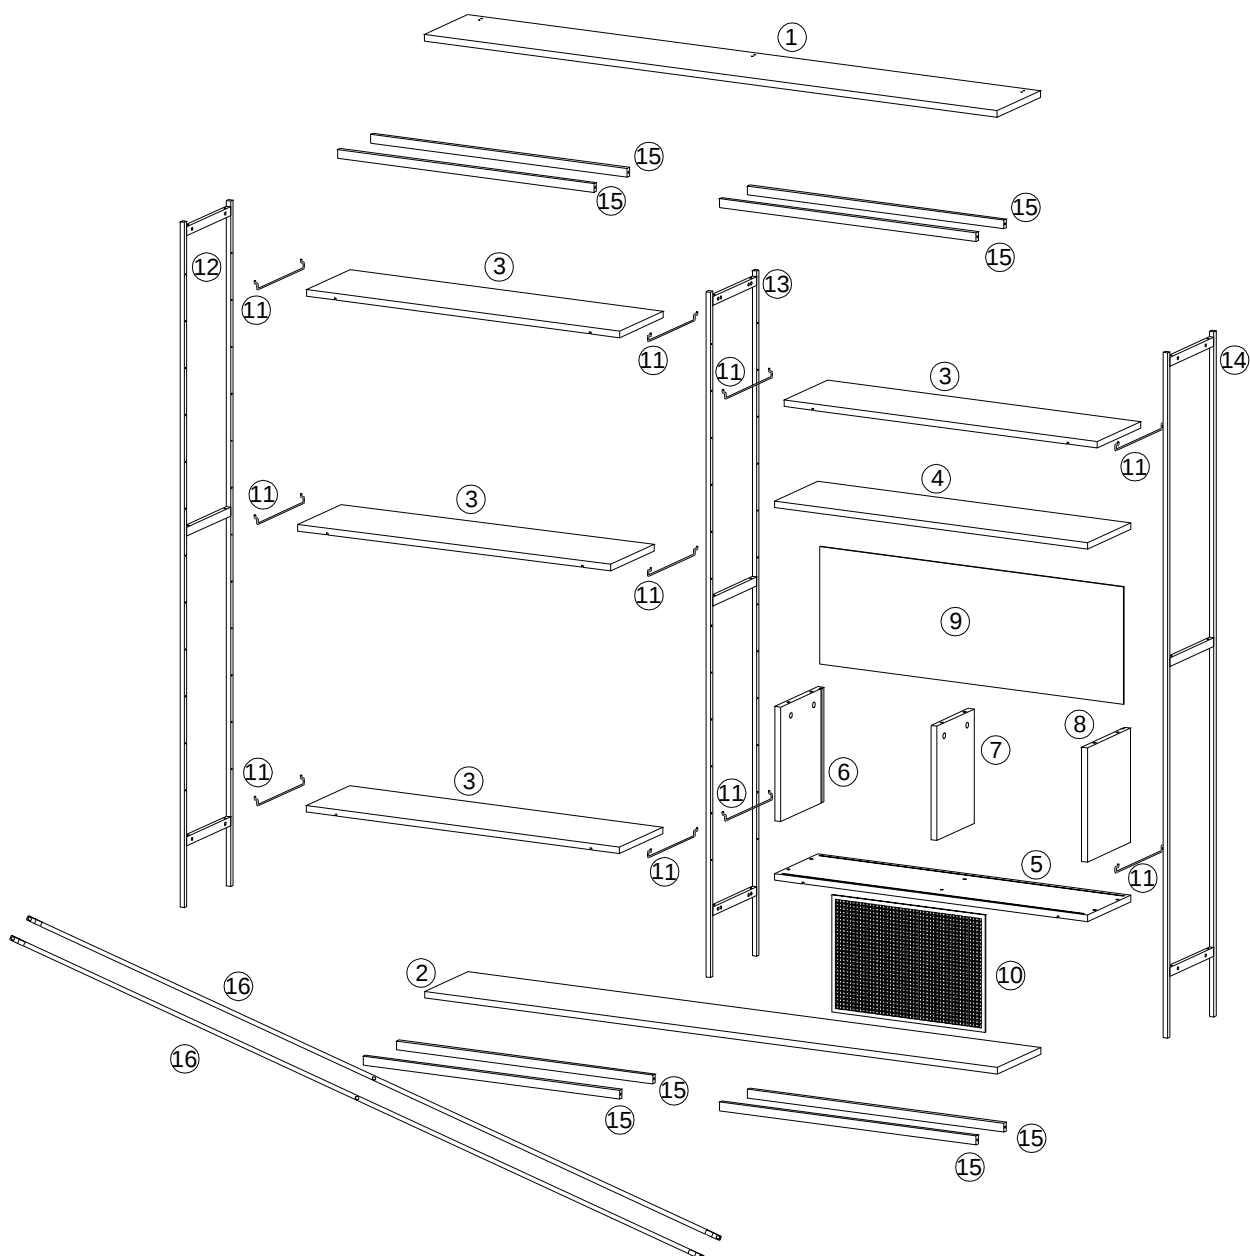
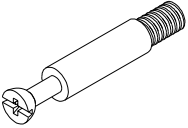




Angus







A  M6×45mm 6PCS	B  Ø15×12mm 6PCS	C  Ø8×30mm 12PCS	D  M7×38mm 6PCS	E  M6×30mm 16PCS	F  M4×35mm 12PCS
G  6PCS	H  M4×15mm 6PCS	I  3PCS	J  4mm 1PC	K  M6×12mm 4PCS	L  M6×18mm 1PC

Step 1


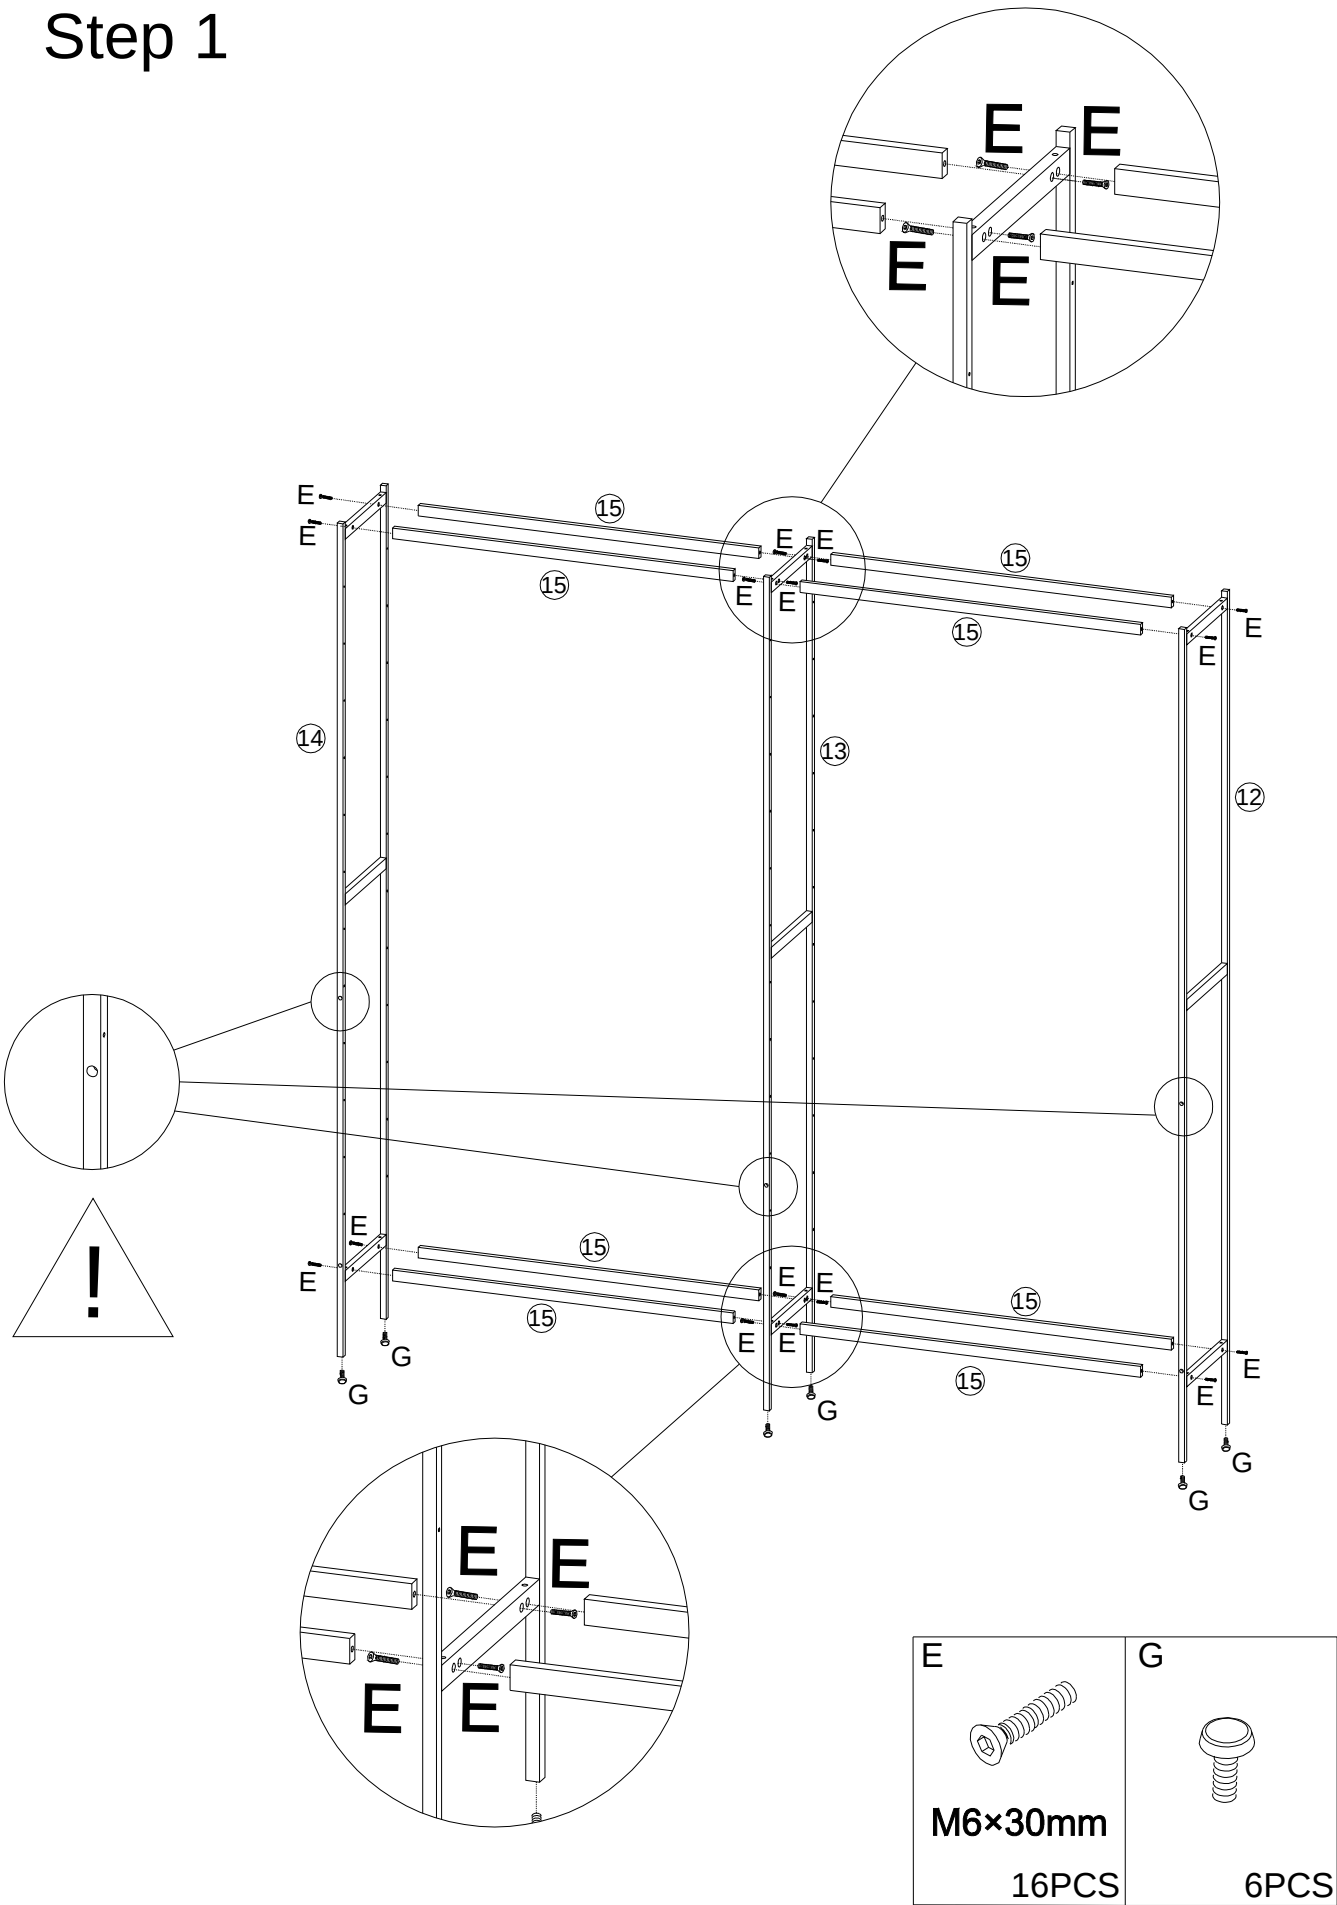


Step 2

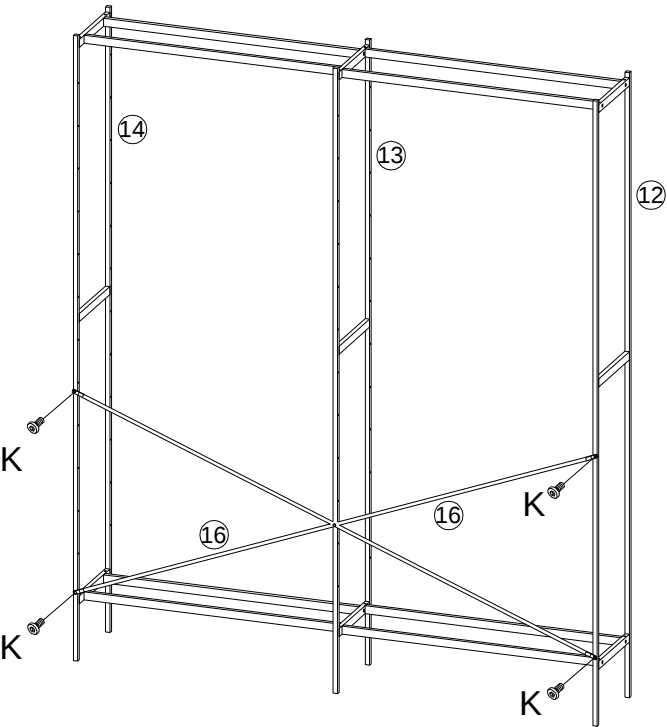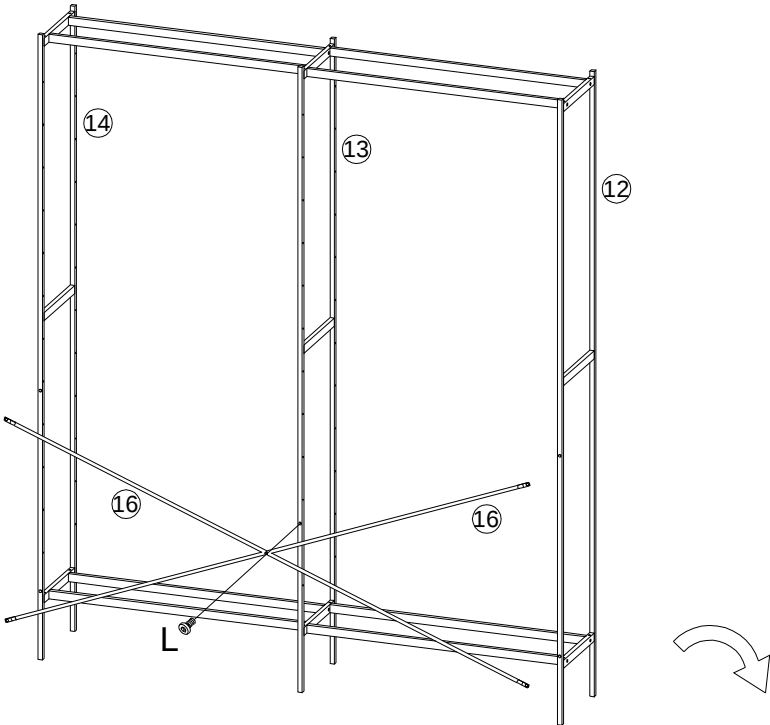


K	L
	
M6×12mm	M6×18mm
4PCS	1PC

Step 3

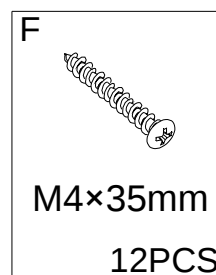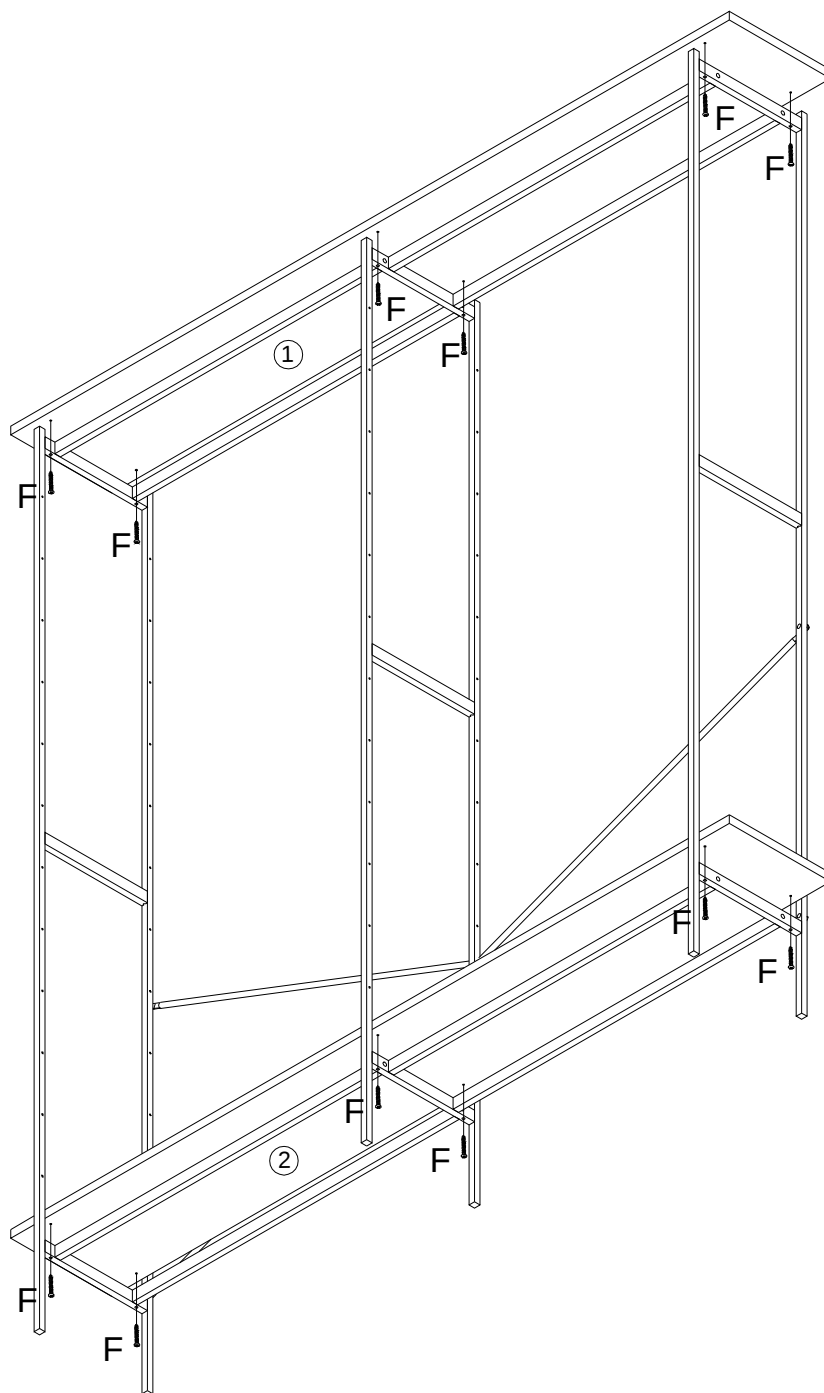


Step 4


11x10 PCS

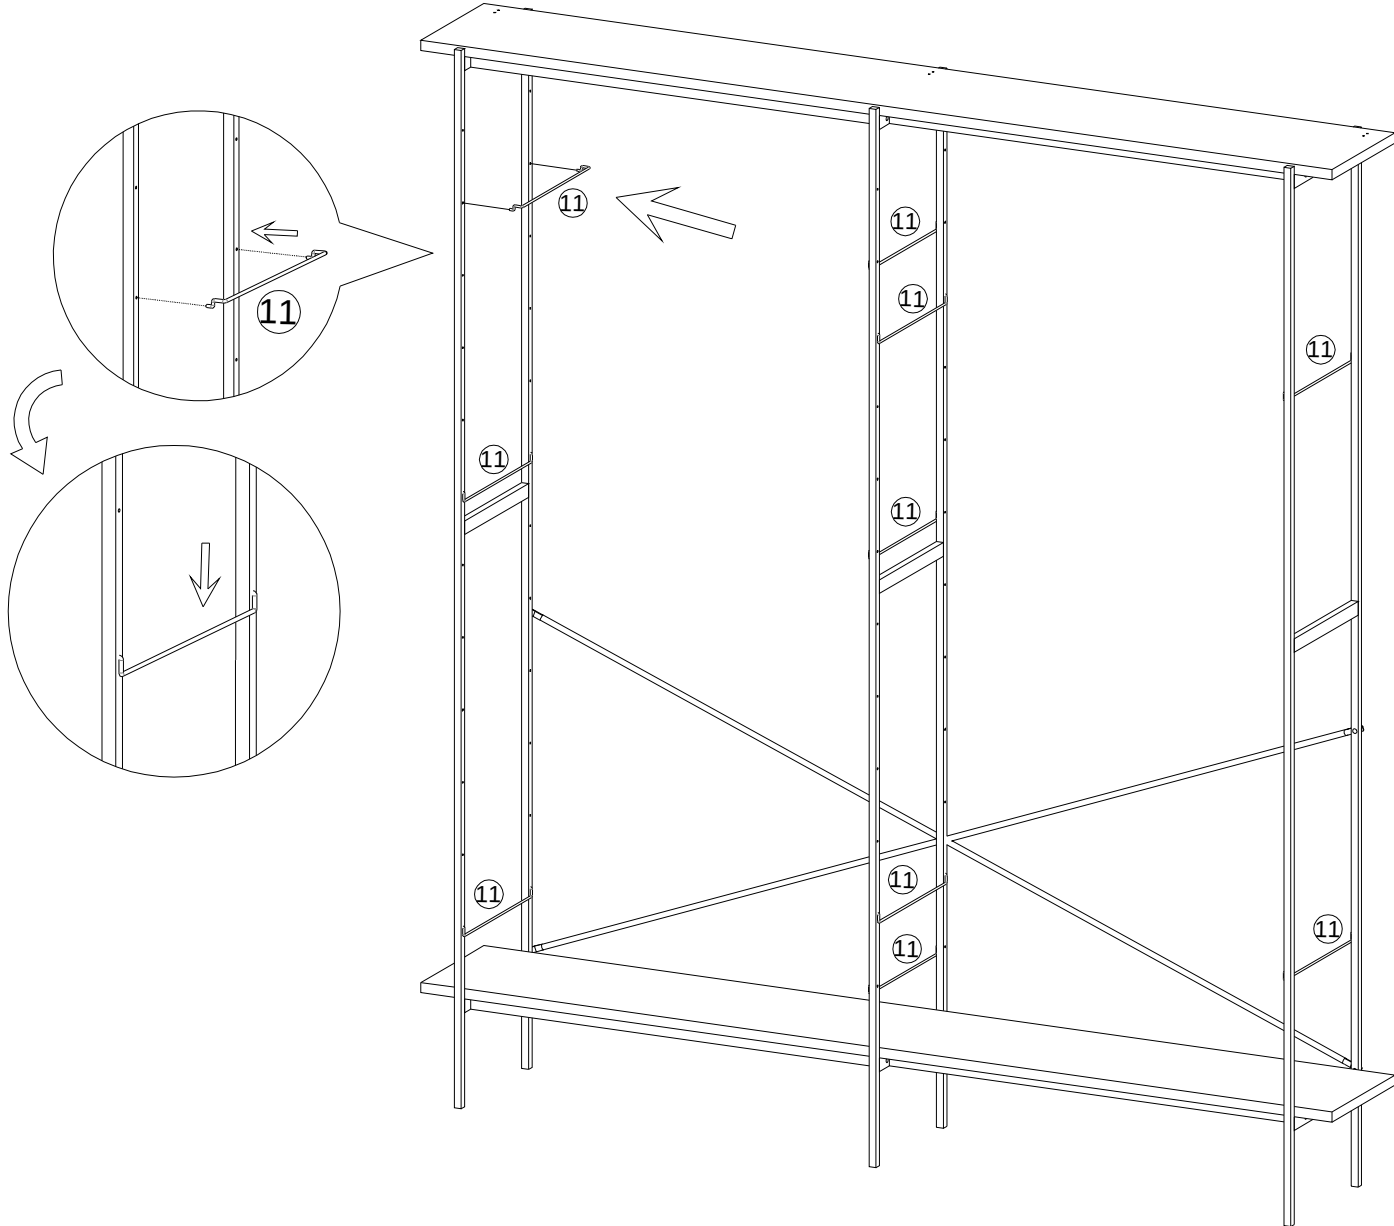


Step 5

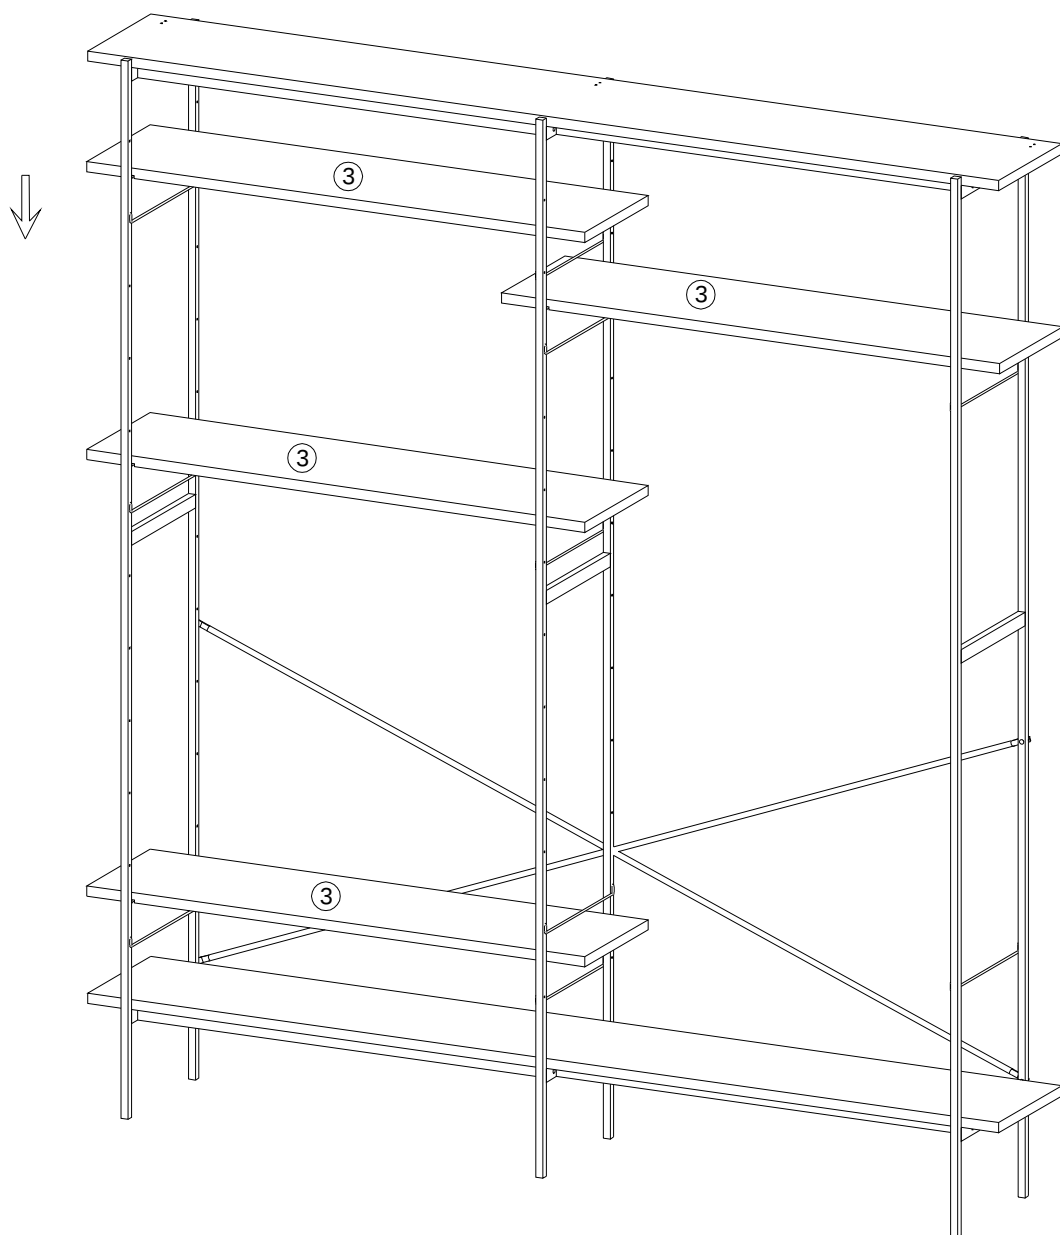


Step 6

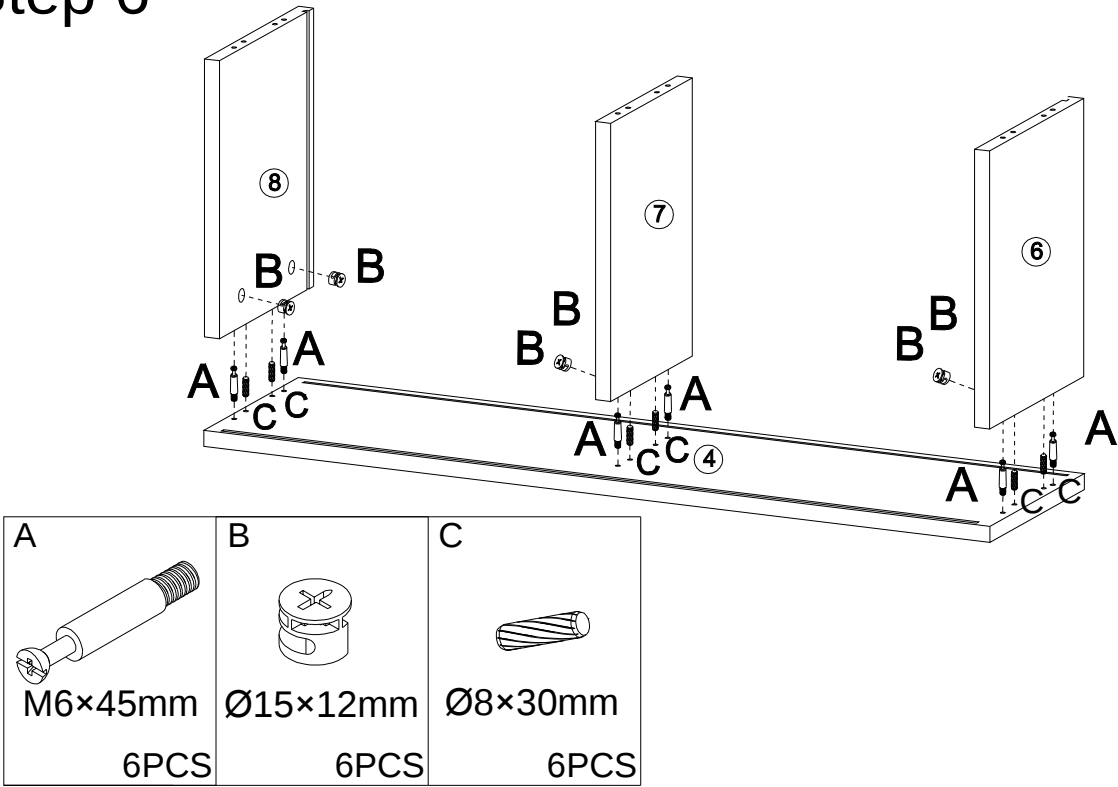


Step 7

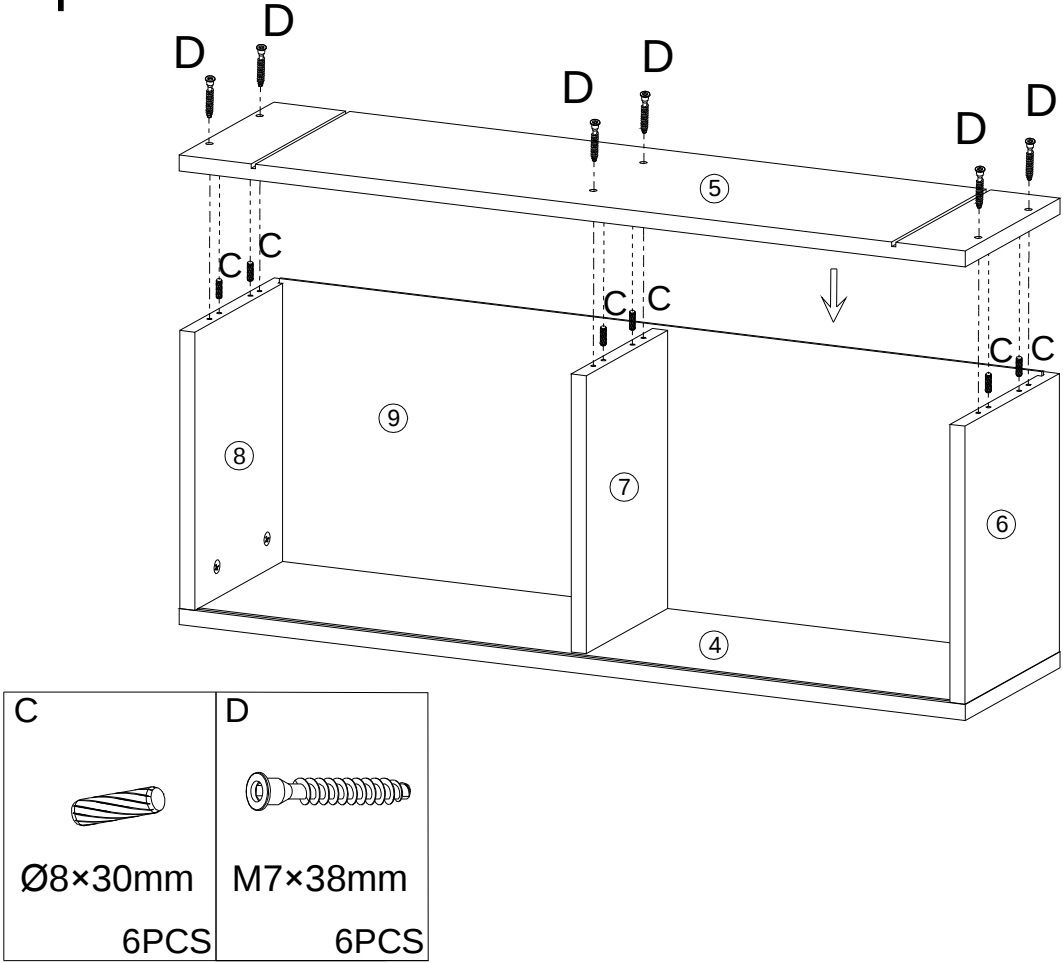



Step 8

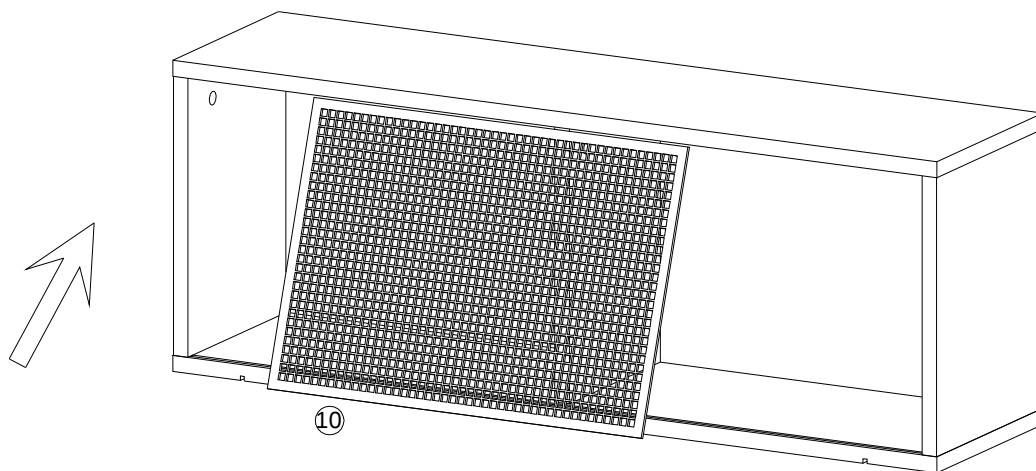


Step 9

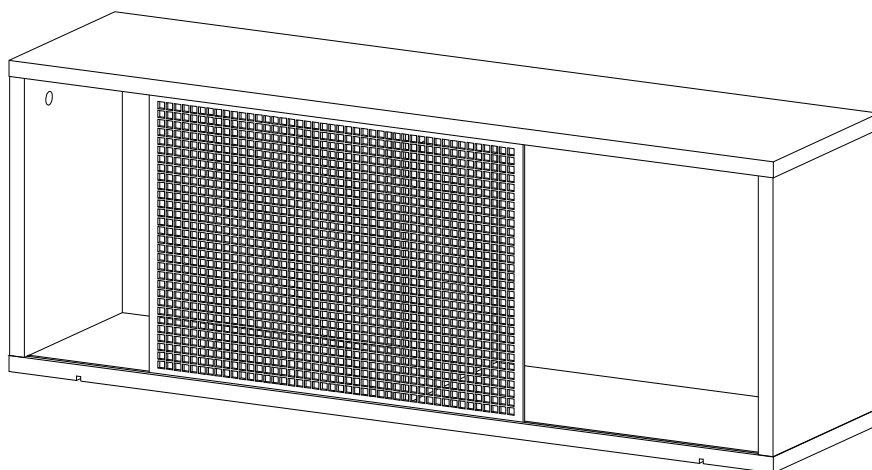

Step 10

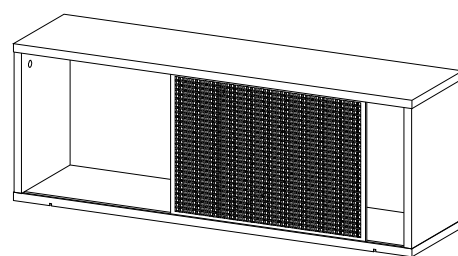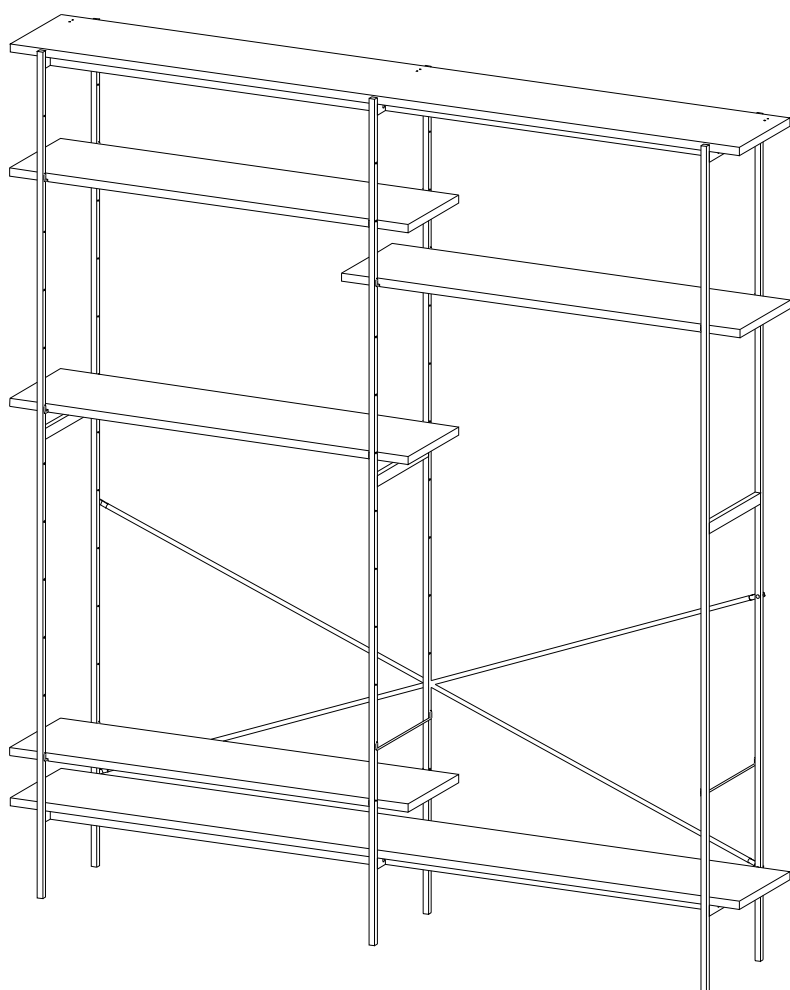

Step 11

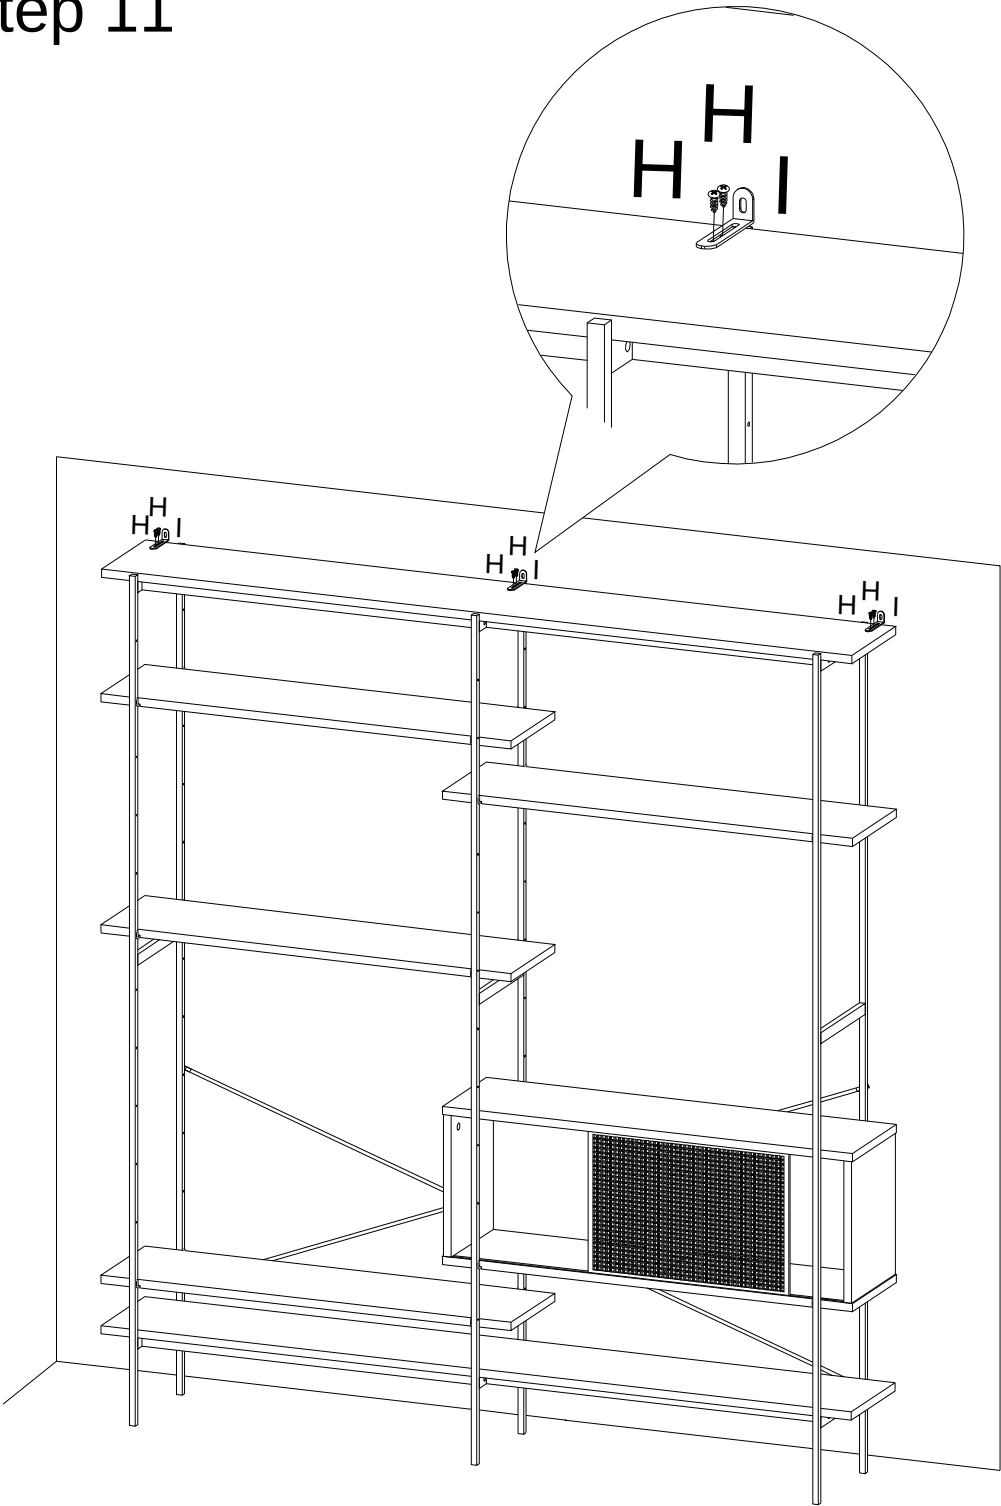

H	I
	
M4×15mm	
6PCS	3PCS

Step 12

