

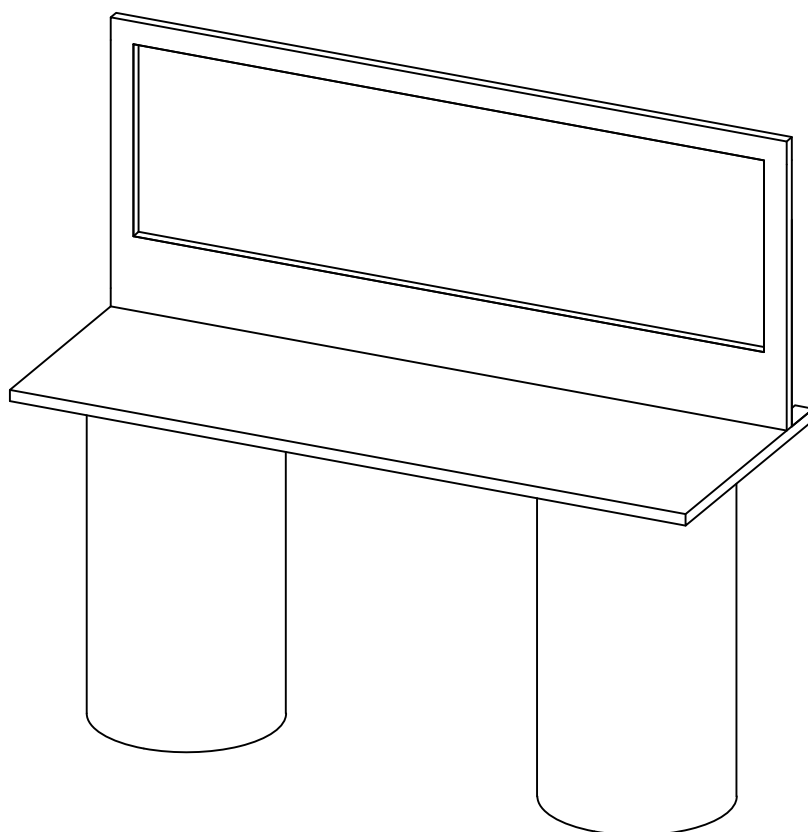


# Jotex


1689510-01-0

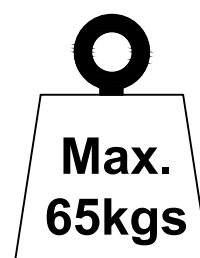


1

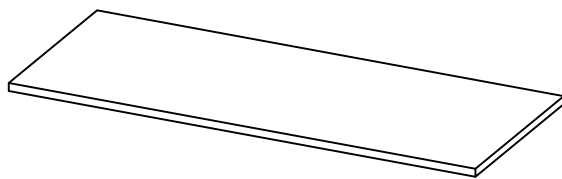




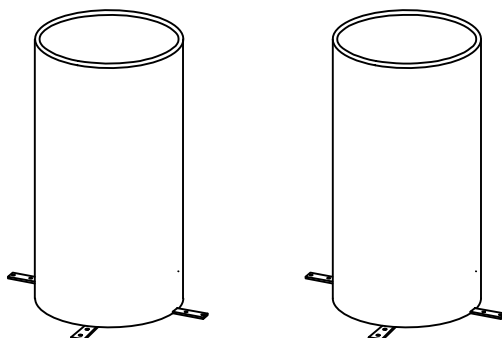

2

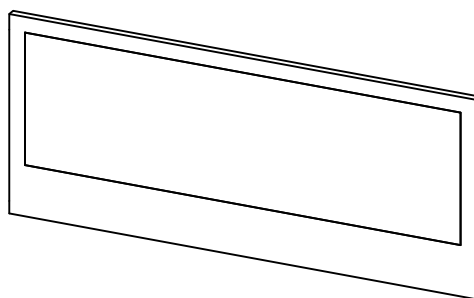


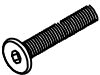
3



<b>A</b>	 <b>M6*30</b>	<b>A X 16</b>	<b>B</b>	 <b>M8*16</b>	<b>B X 16</b>
<b>C</b>	 <b>M8*50</b>	<b>C X 3</b>	<b>D</b>	 <b>M8*25</b>	<b>D X 3</b>
<b>E</b>	 <b>4MM</b>	<b>E X 1</b>			


# 1

Careful : Extremely heavy product.

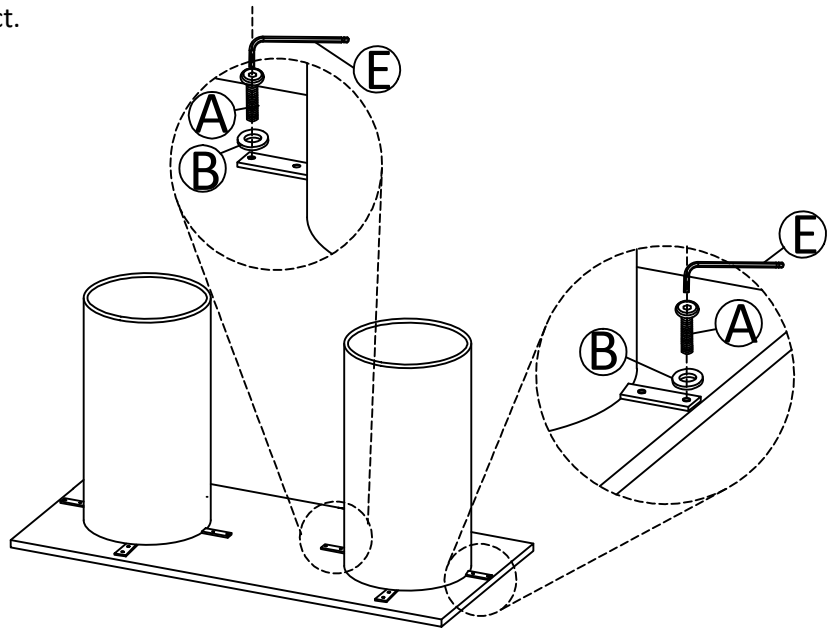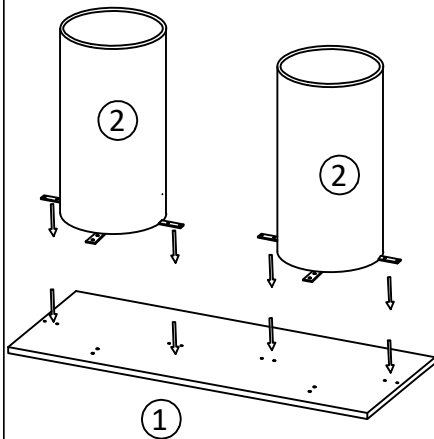

Place Top (1) upside down on a non-damaging padded surface. Place Both round base (2) with metal strip on Top (1) ensuring holes on the top (1) are aligned with the holes of round base (2) as shown in step 1. Secure all connections using Allen Bolt (H1) and Washer (H2) as shown above. Fully tighten all connections using Allen Key (T1) as shown in step 1.

A X 8







B X 8



E X 1




# 2

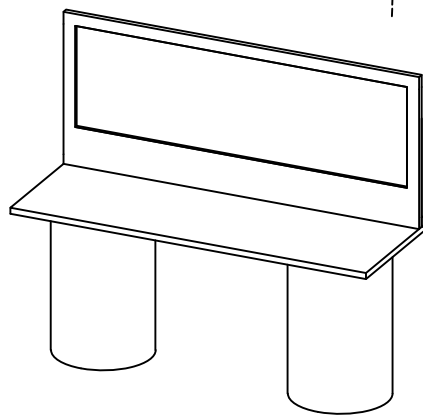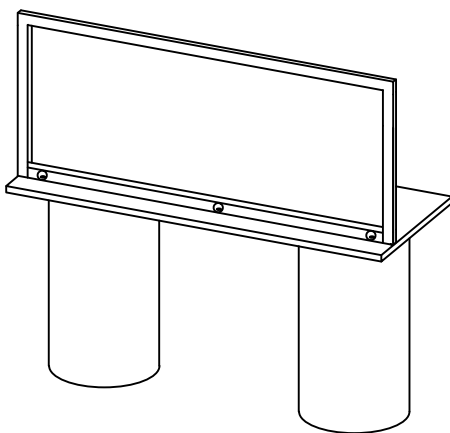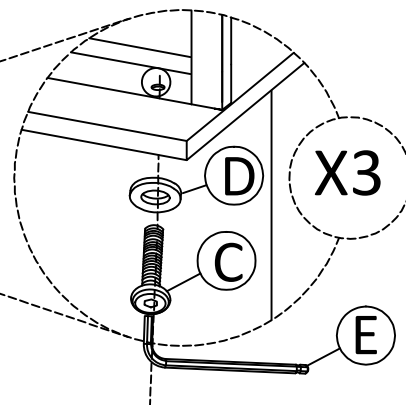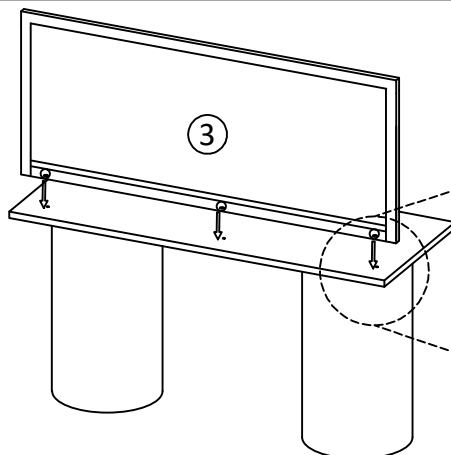

Upright the piece then set the Mirror frame (3) with provided hole on Top (1) as shown in step 3. Ensuring holes on the top (1) are aligned with the holes of Mirror Frame (3). Secure all connections using Allen Bolt (C) Washer (D) as shown above. Fully tighten all connections using Allen Key (E).

C X 3



D X 3



E X 1



3-3