



# Jotex


1706440-01-0

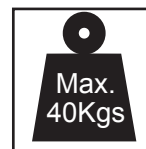


1

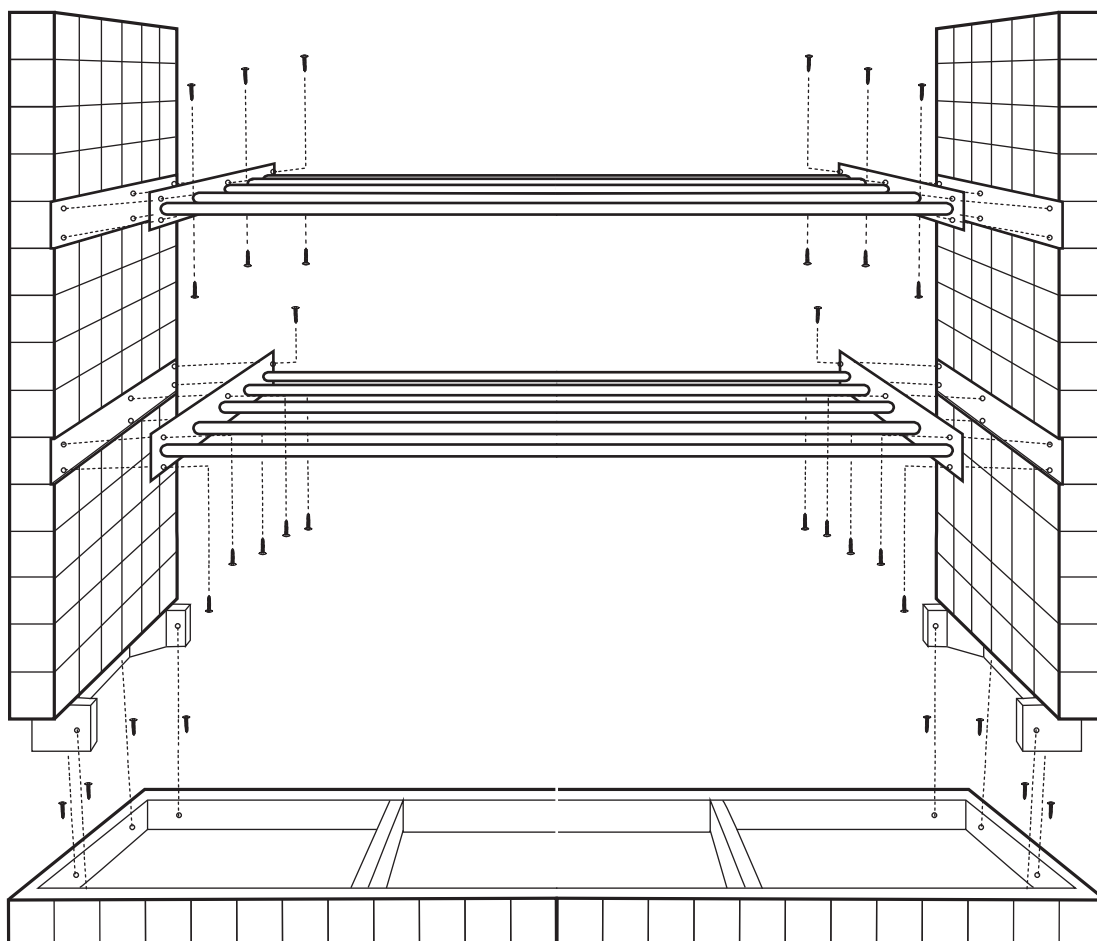

2

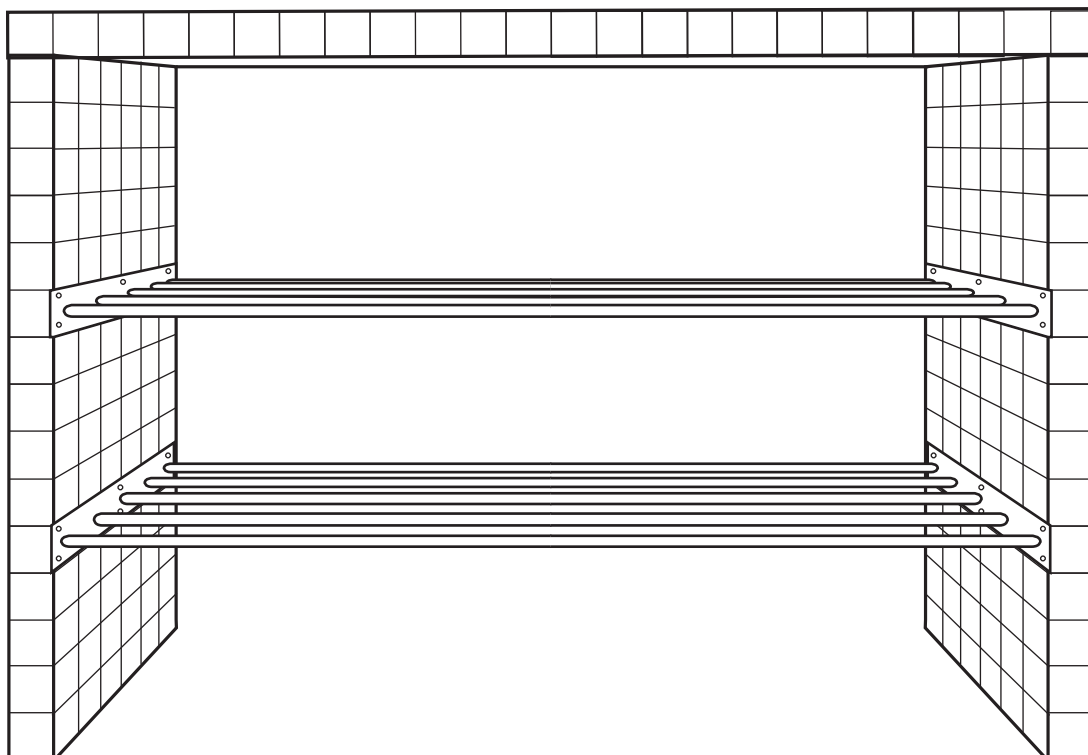

3

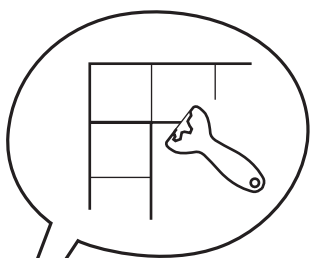

Optional:

1. Open accessories kit
2. Mix 50 g cement powder with 15-20 ml water
3. Apply to the joint with the included tools, and let dry for 30 min
4. Remove excess cements if needed

