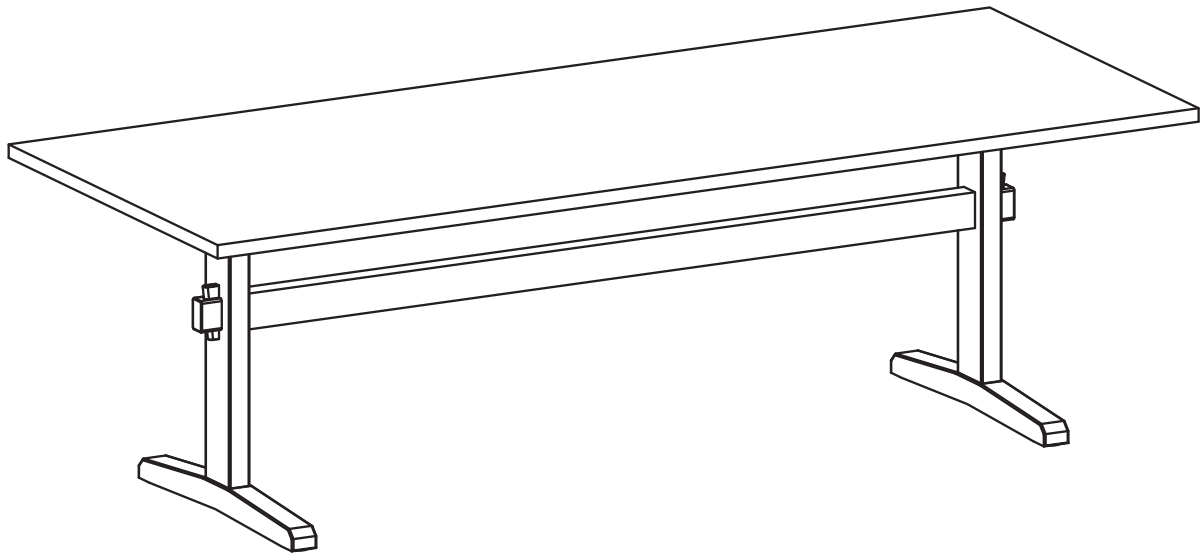



ASSEMBLY INSTRUCTION











WESTVILLE DINING TABLE






ROWICO

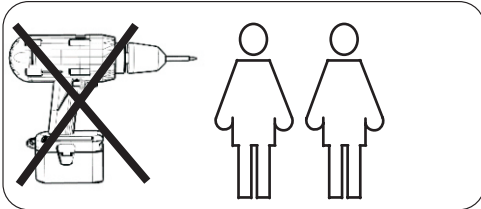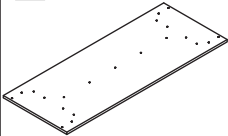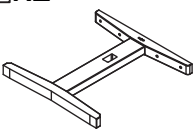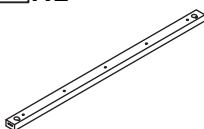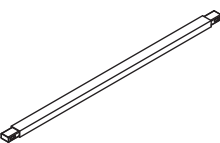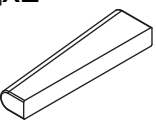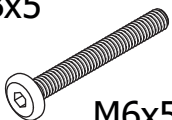H O M E




1x1 	Cx13  Ø6
2x2 	Dx13  Ø6/Ø12
3x1 	Ex1  N4
4x1 	Fx4  Ø40
5x2 	Gx2  M8X85
Ax4  Ø10x40	Hx2  M8
Bx5  M6x50	Jx2  Ø8
Lx1 	KX2  25x14
Mx8  M6X35	

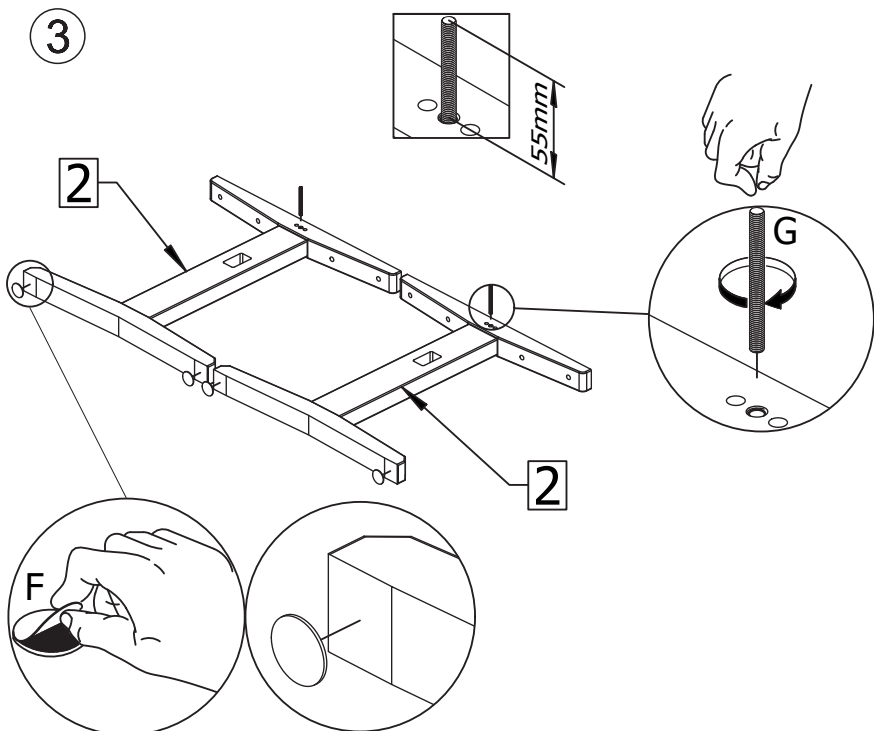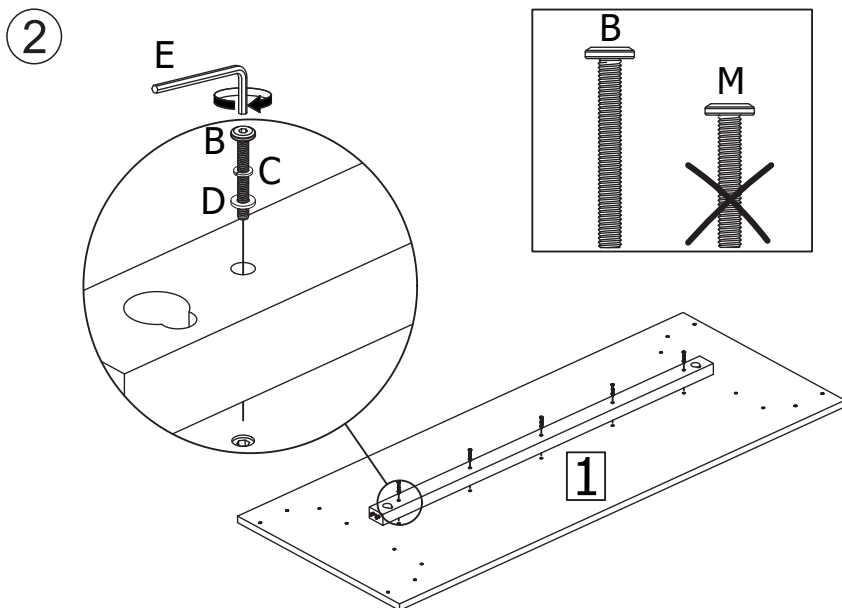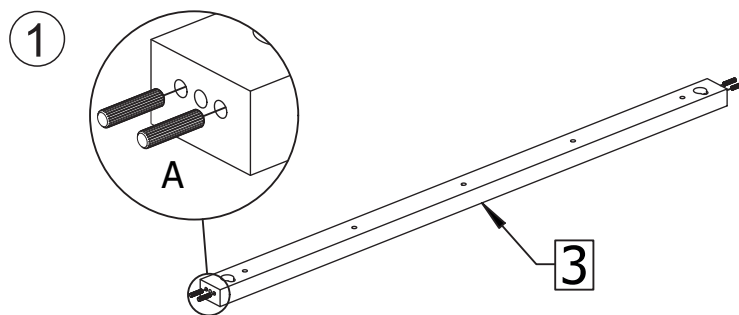


Montera möbelen på en ren matta eller filt för att skydda mot smuts, märken och repor.

Assemble the furniture on a clean carpet or blanket as protection against dirt, dent marks and scratches.

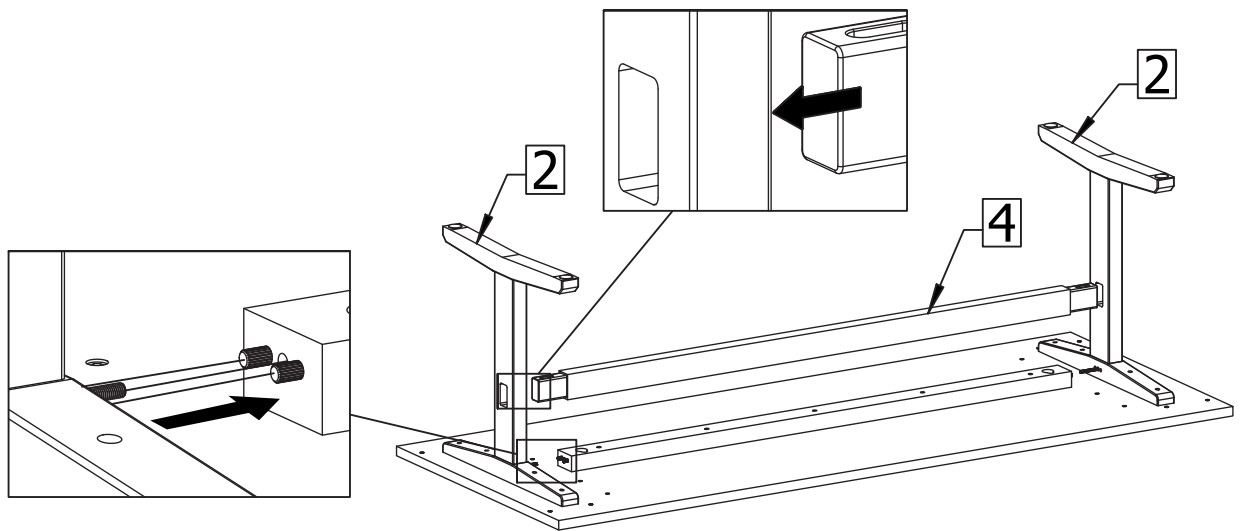4



5

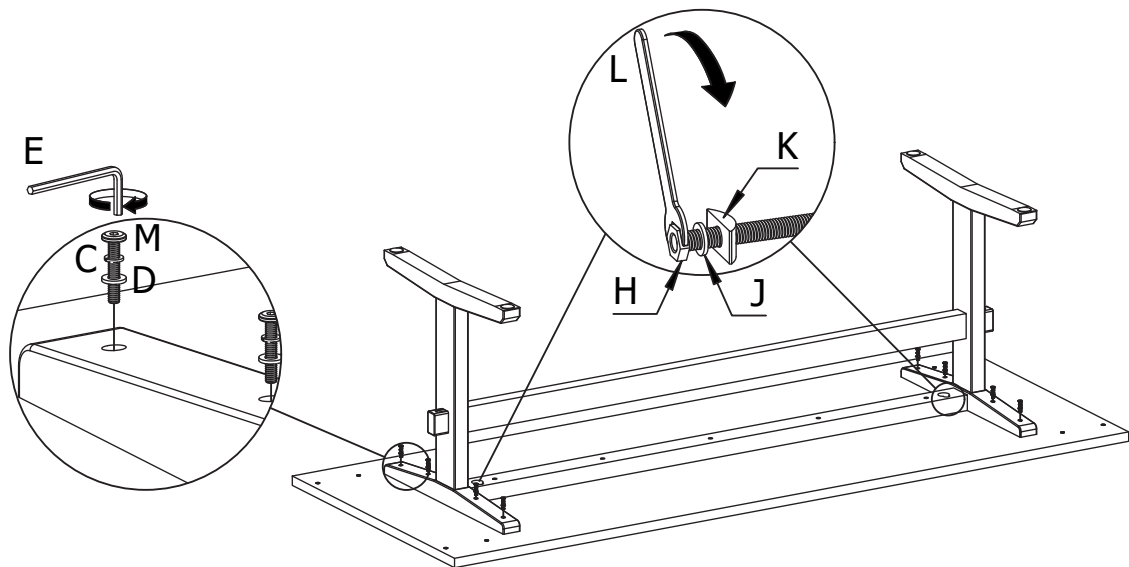

6

