


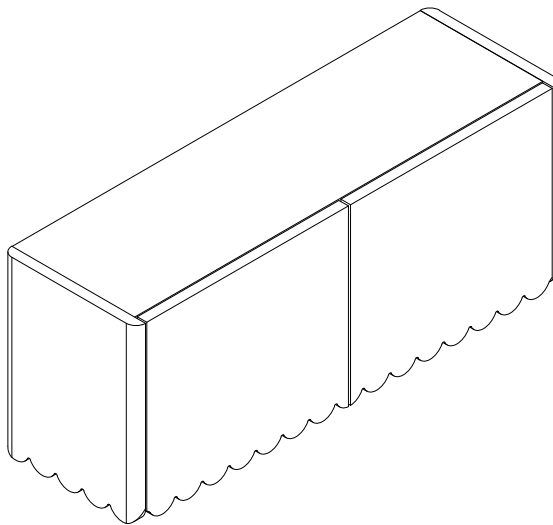

2200913-01-0 / 2200913-02-0

A

B




x8



x8

02


Use a level ruler to ensure that the hole positions are level

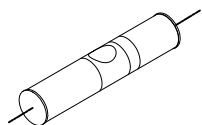


18-Ø7*50

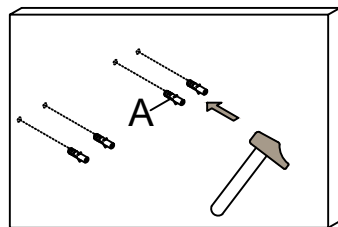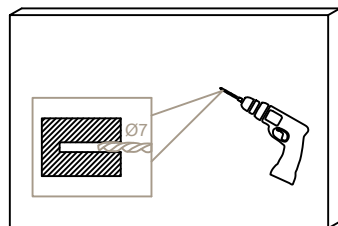

03

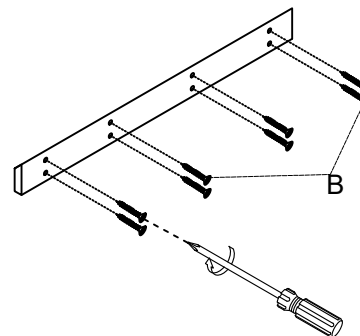

04

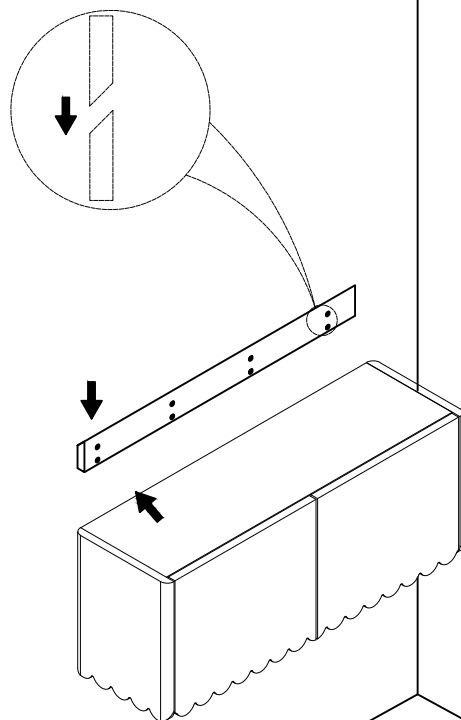

05

